 
 
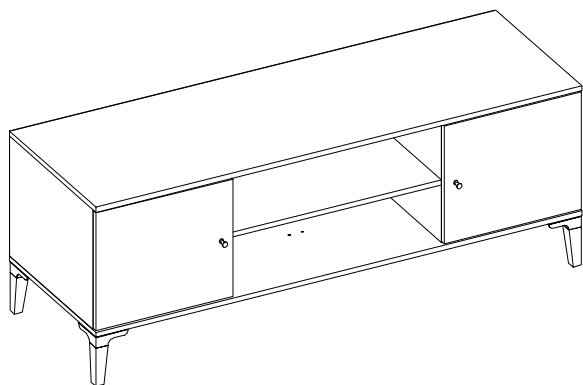 
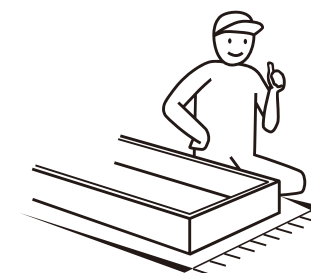 
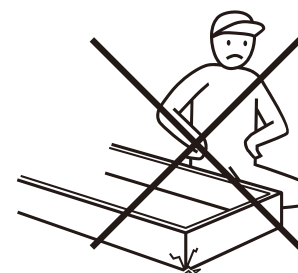 
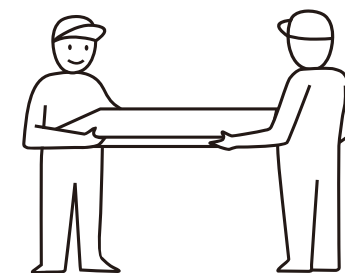 
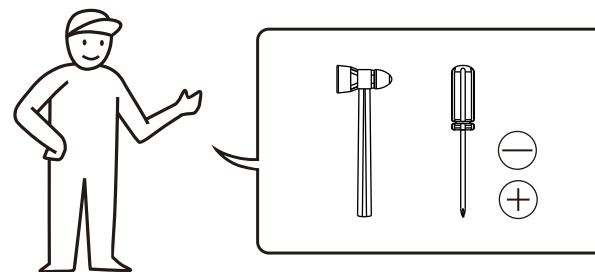 
 
 


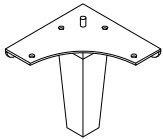




ASSEMBLING INSTRUCTION


RUBY TV RACK 120




 INSET 4 X	 M3 8 X	 J1 14 X	 D 8 X	 B1 10 X	 E 8 X
 Ø 6 MM X 16 MM 16 X	 BAR 4 X	 V4 2 X	 M10 8 X	 F1 14 g	 BT18 10 X

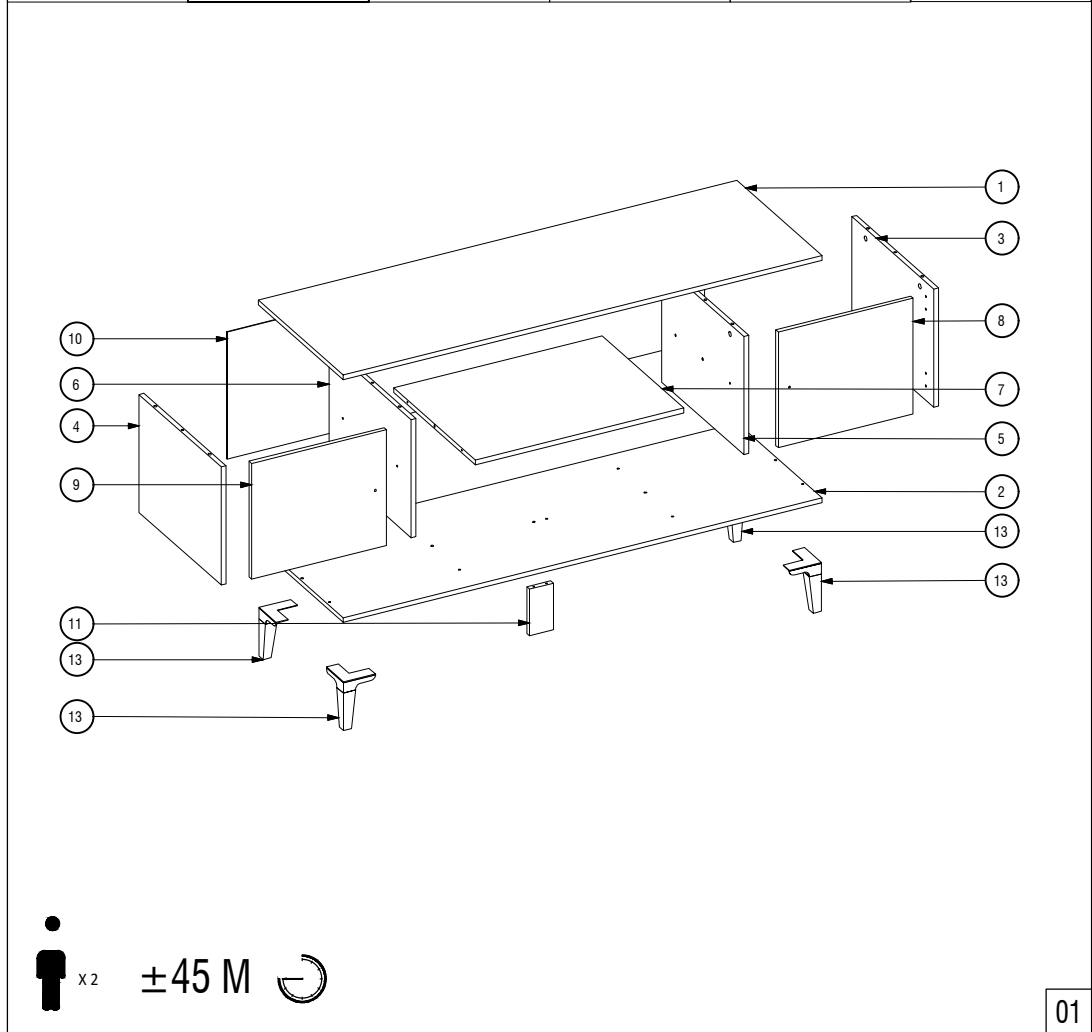 

  
 INSET 4 X	 M3 8 X	 J1 4 X	 D 8 X	 B1 10 X	 E 8 X
---	--	---	--	---	---

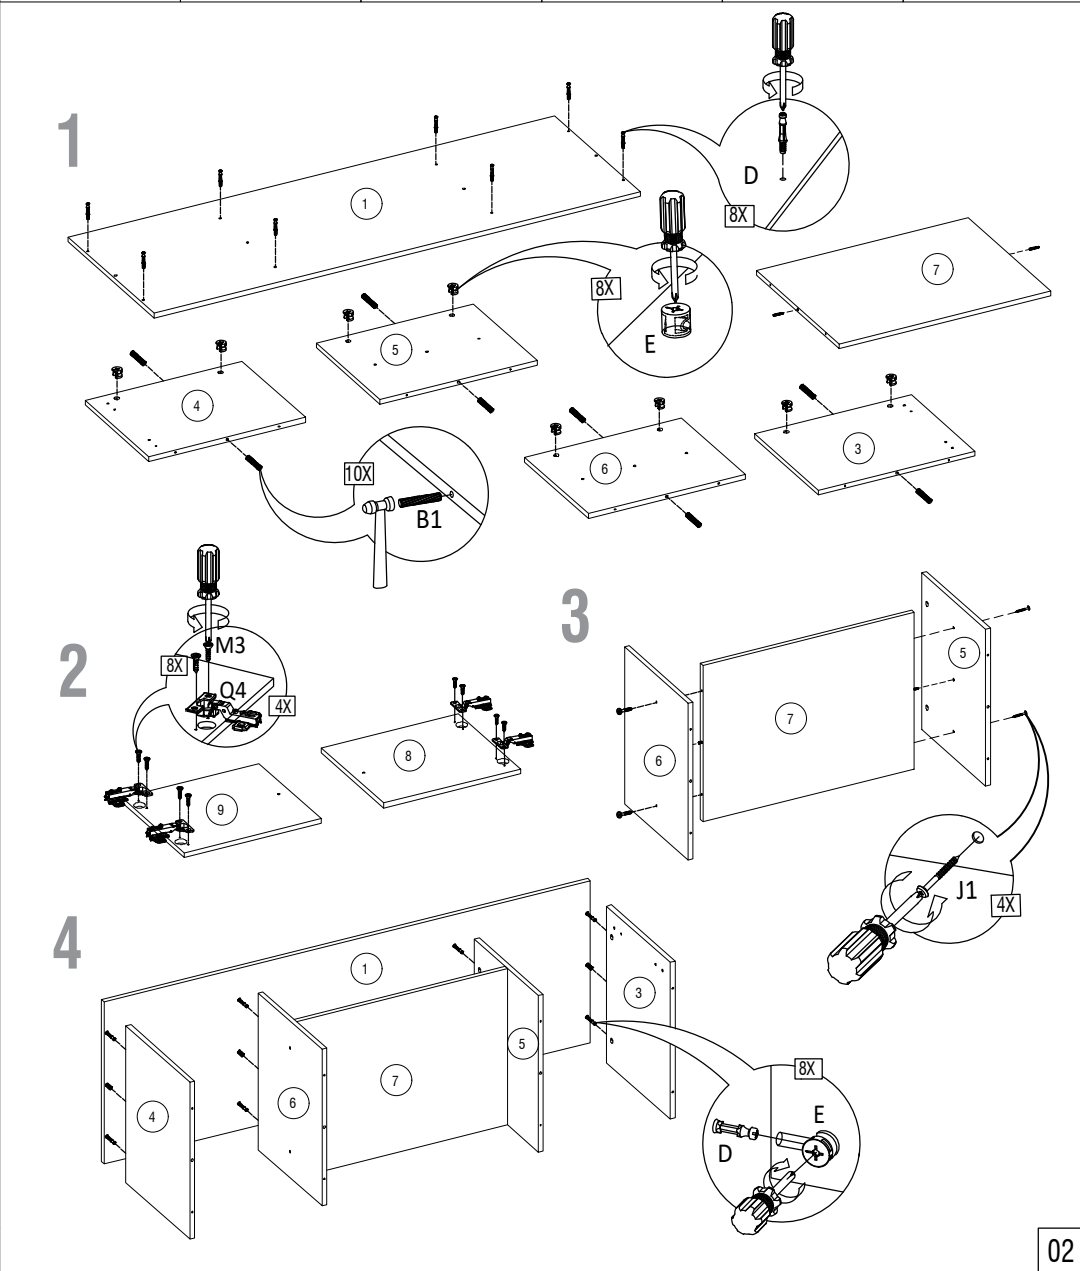 


5

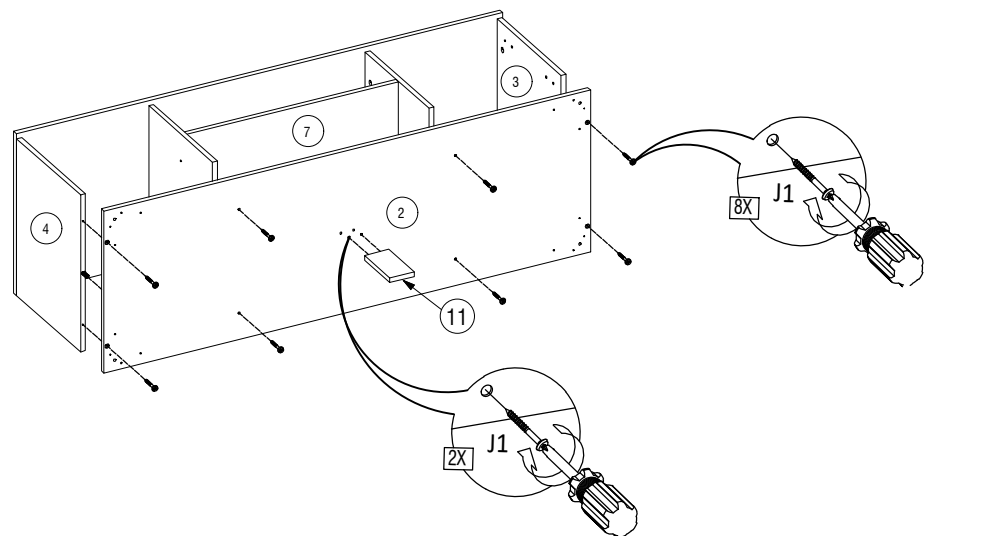 


6

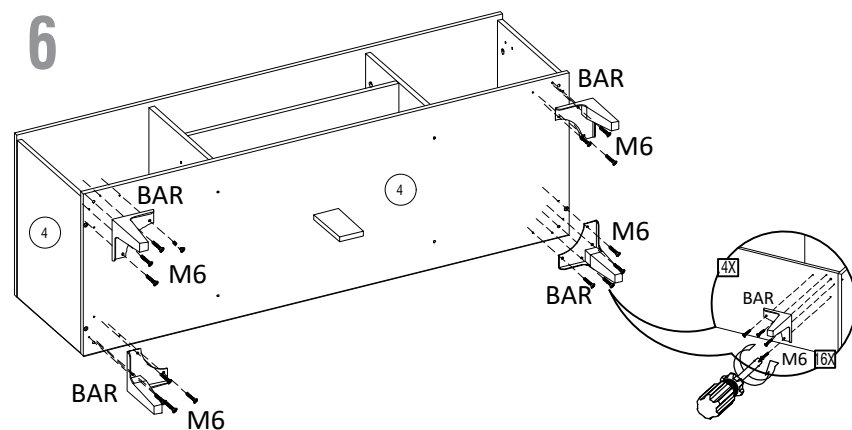 


03

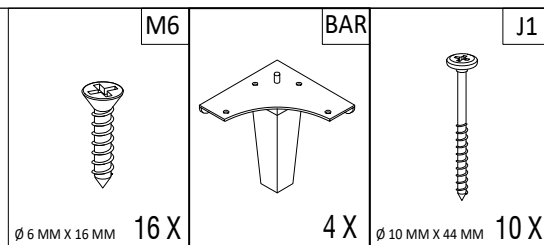 

7

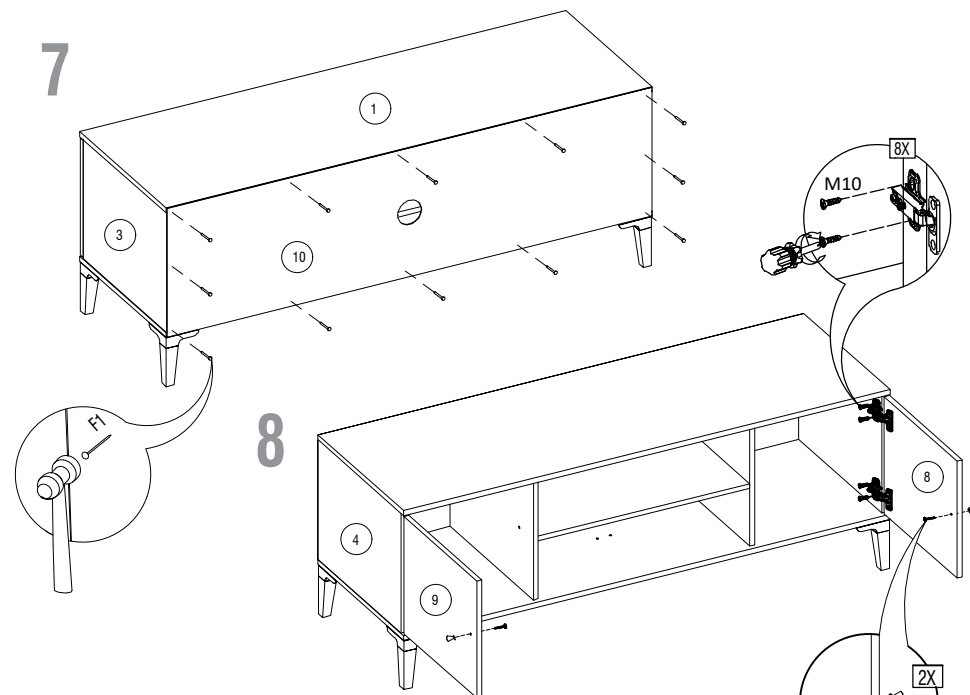 

9

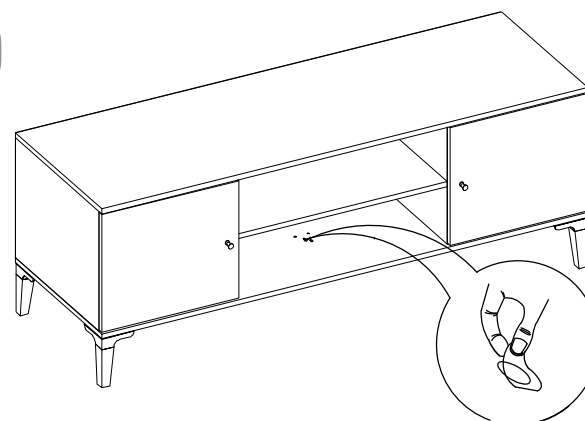 

04

