
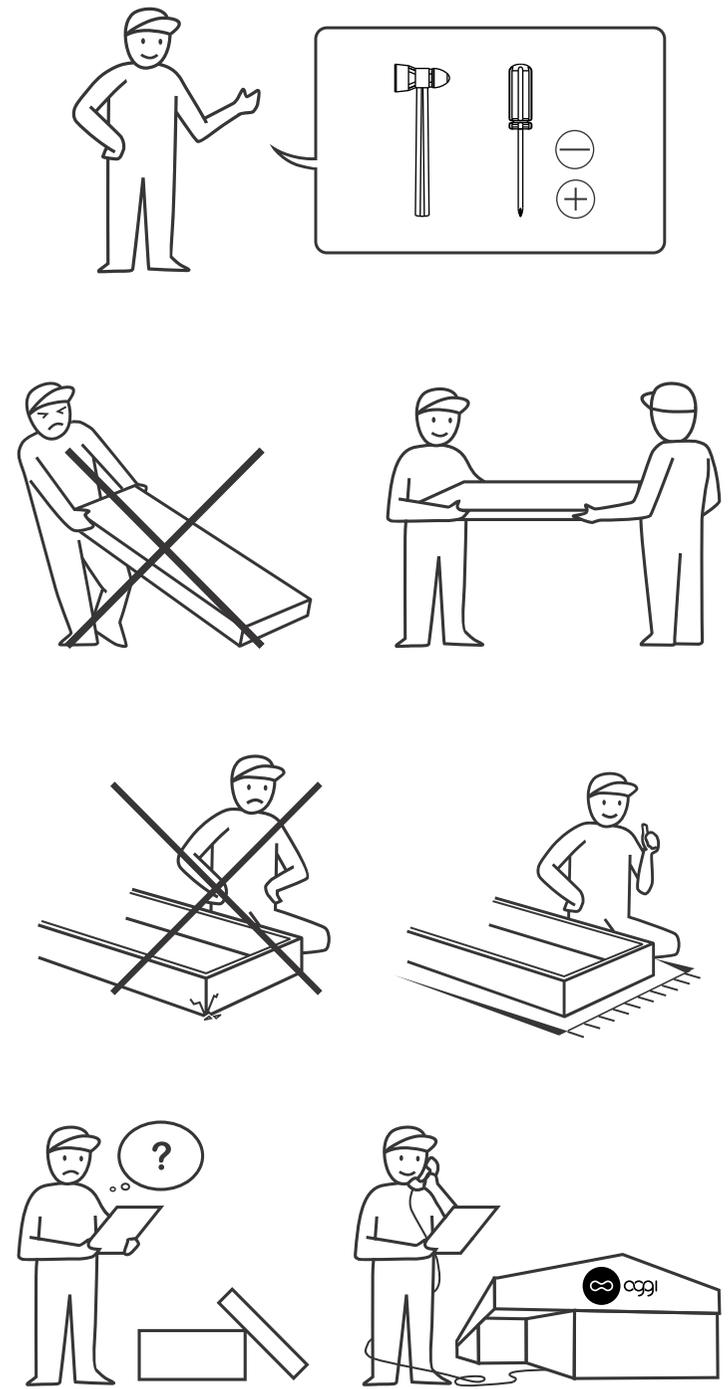




ASSEMBLING INSTRUCTION


DEXTER CABINET 3 DRAWERS

GRAPHITE - AMERICAN WALNUT

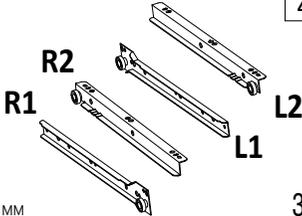


 E1 16 X Ø 15 MM X 12 MM	 D 16 X Ø 6 MM X 32 MM	 B 16 X Ø 8 MM X 30 MM	 J2 4 X Ø 12 MM X 1 3/4"	 L 12 X Ø 6 MM X 1 1/2"	 M3 24 X Ø 6 MM X 1/2"
 M1 6 X Ø 4 MM X 5/8"	 G 6 X	 U1 1 X Ø 19 MM	 M6 4 X Ø 6 MM X 5/8"	 BD 4 X	 BT 12 X BLACK
 BU 1 X 400 MM	 R1 R2 L1 L2 3 X			Z3	


 X 1  ±35 M

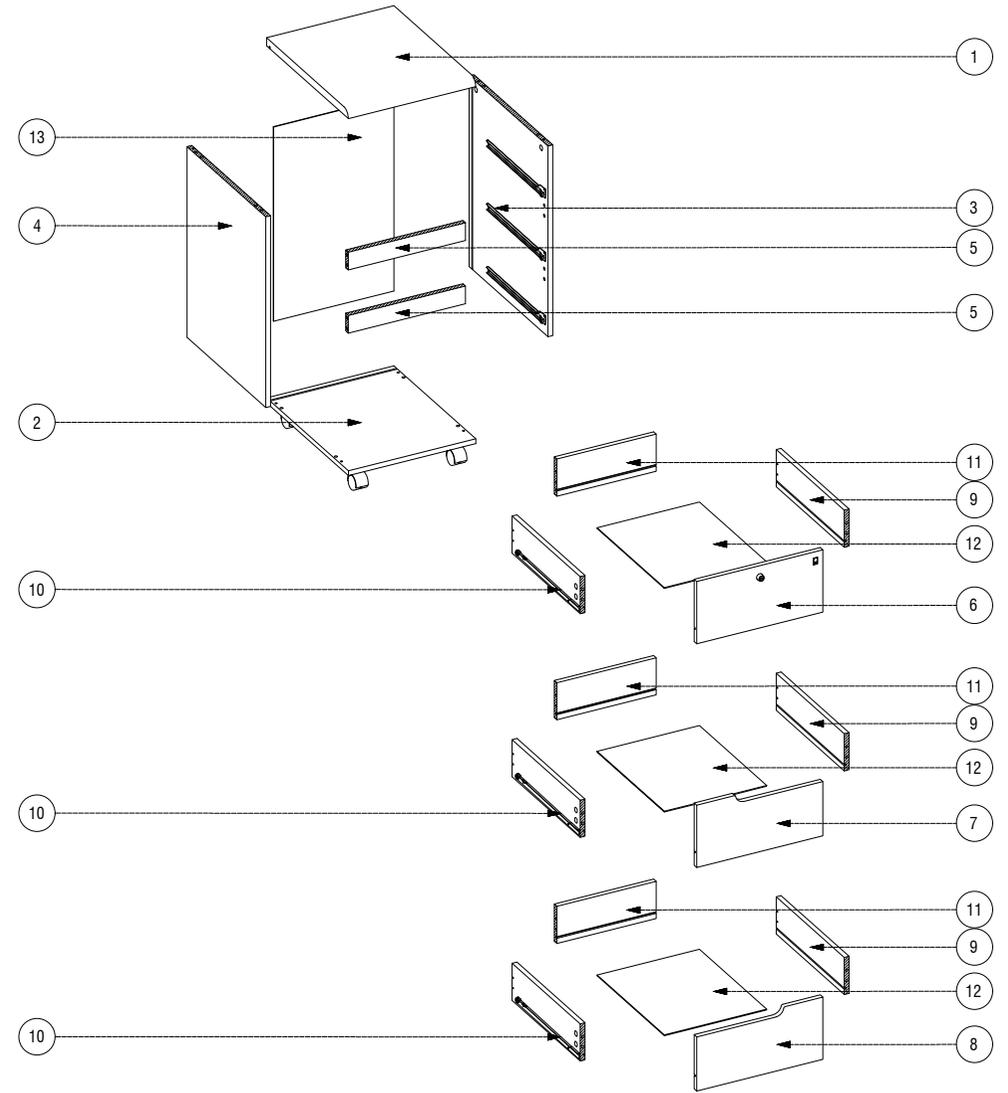

1

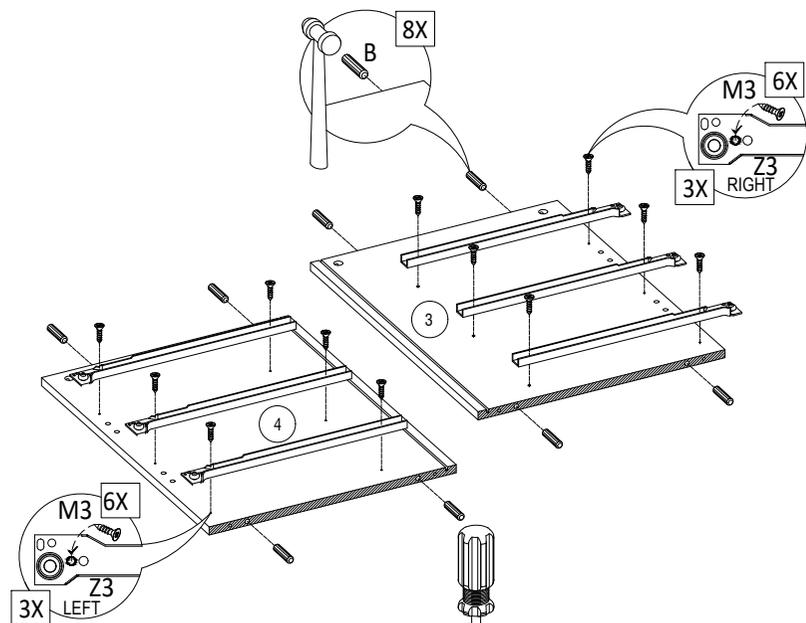


2

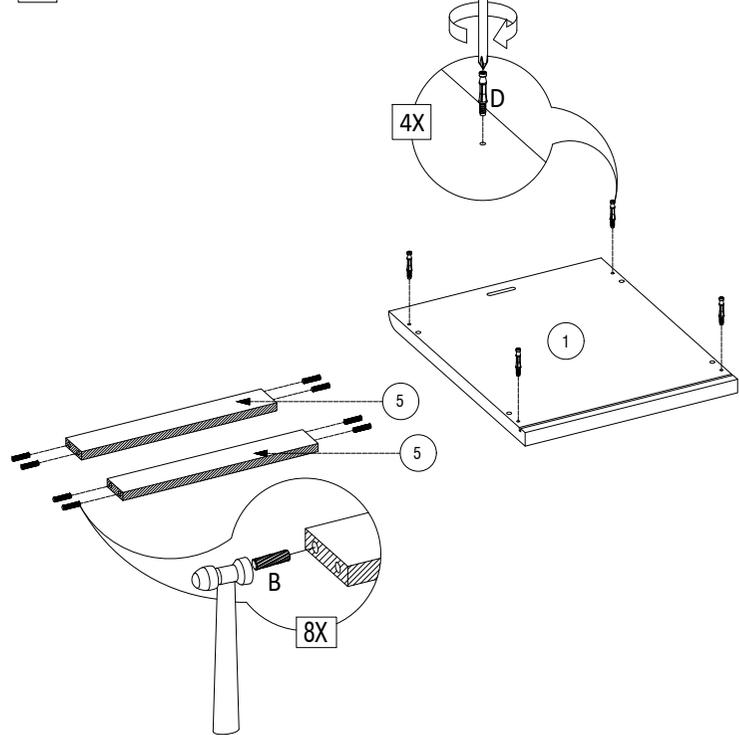


05

3

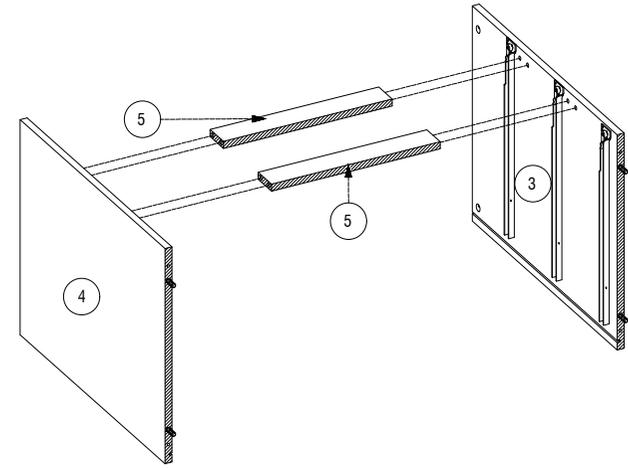


4

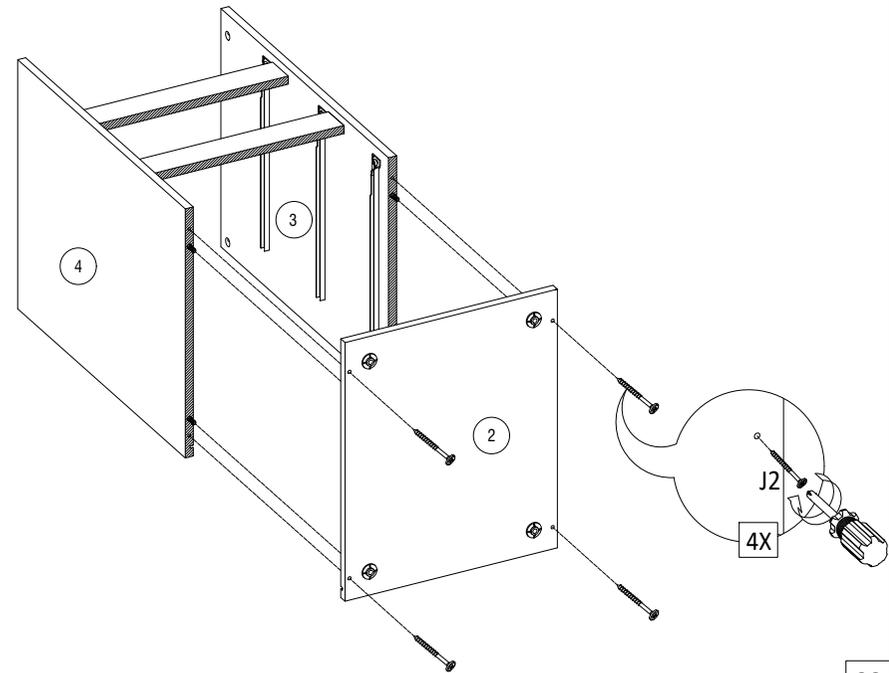


06


5

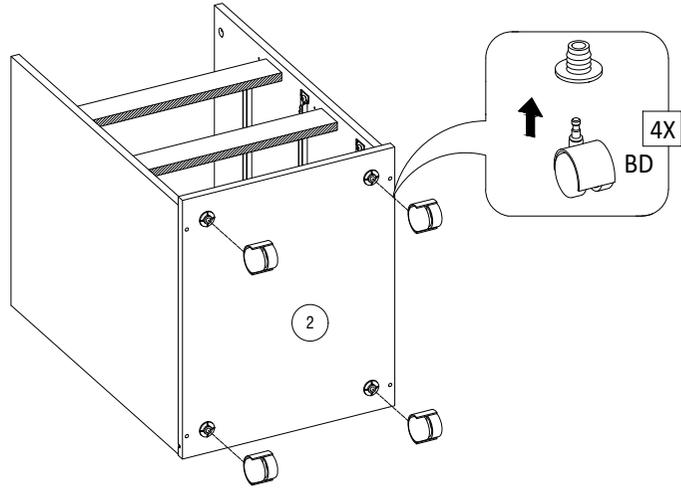


6

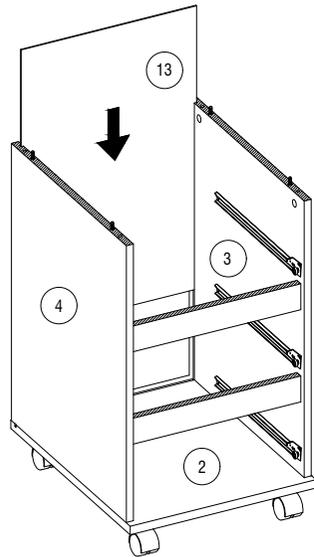

7

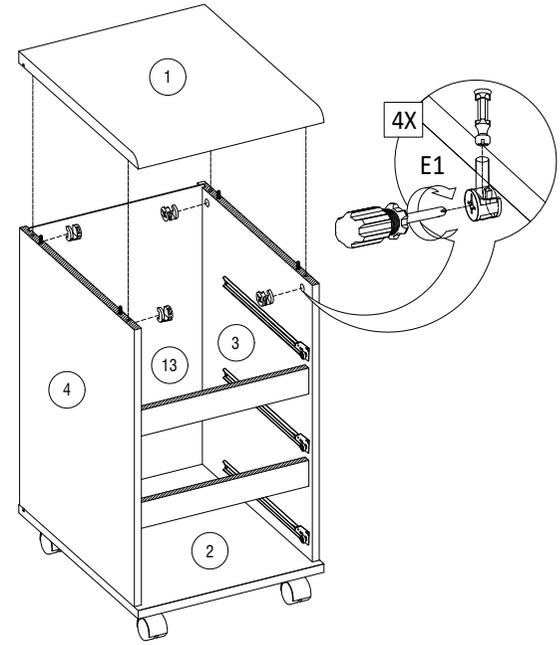


8

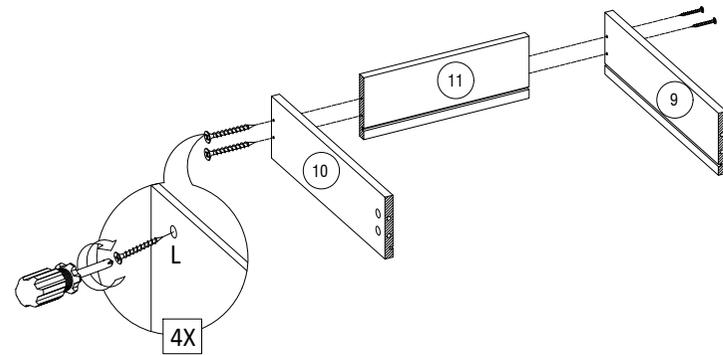


3X

9

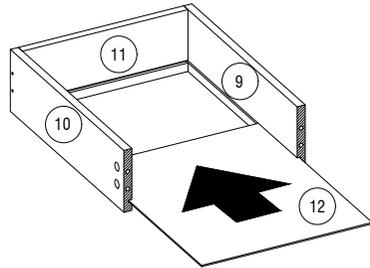


3X


10

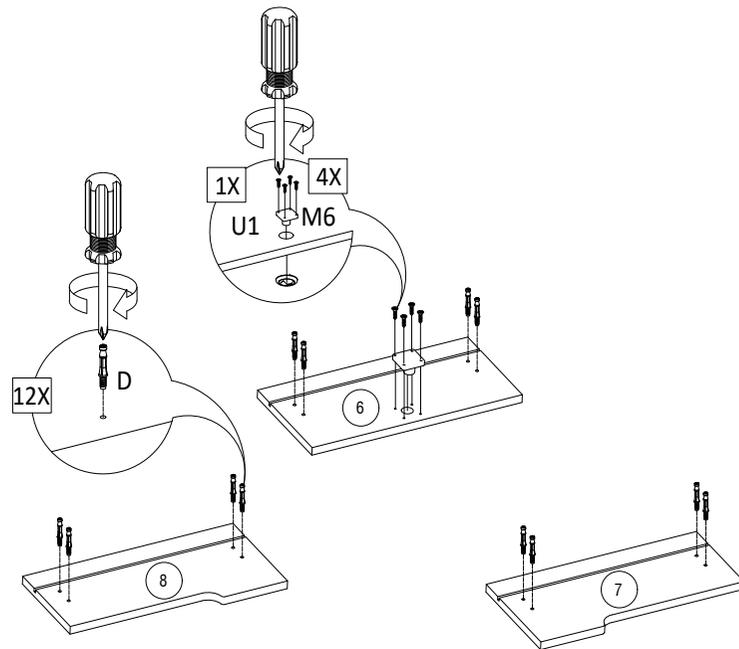


11

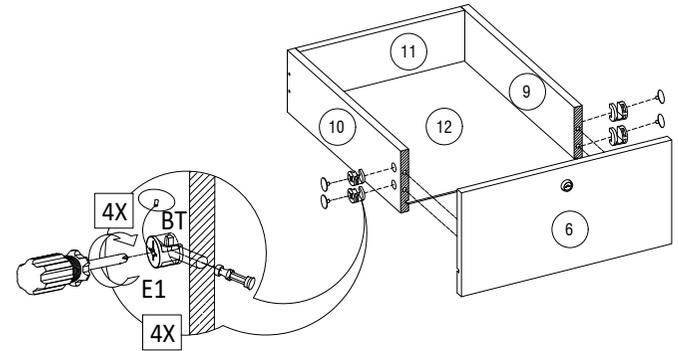


12

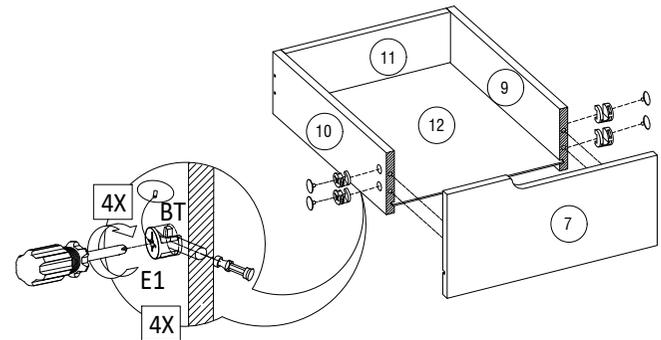


13

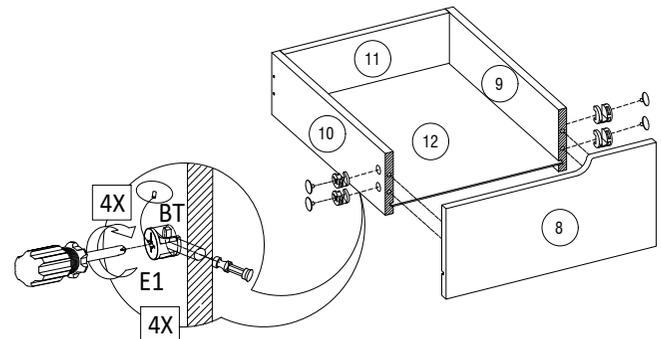


14

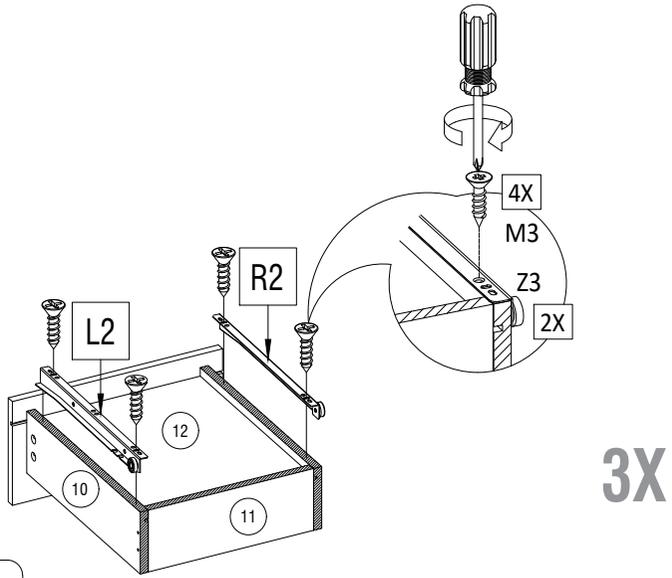

3X

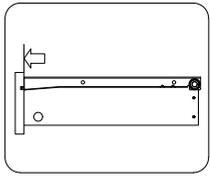


15

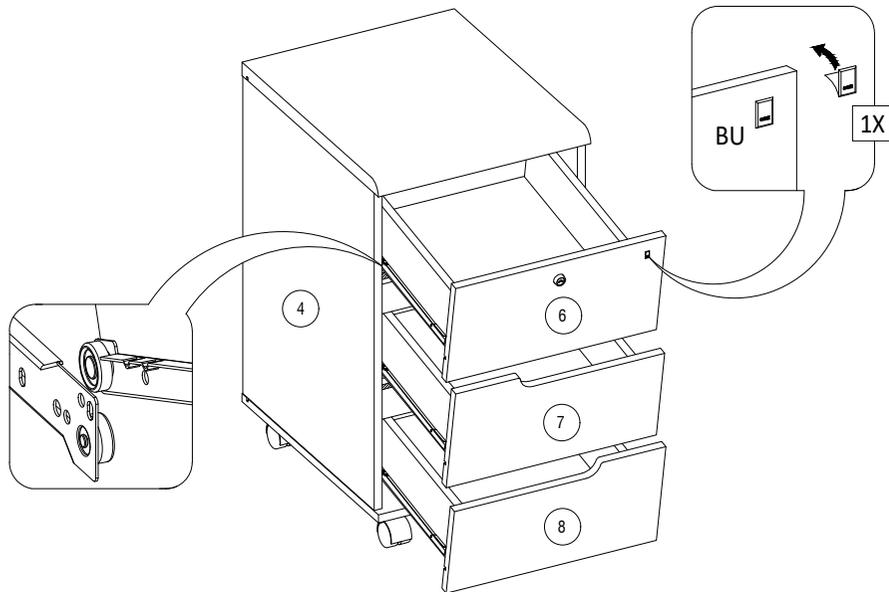

11

16

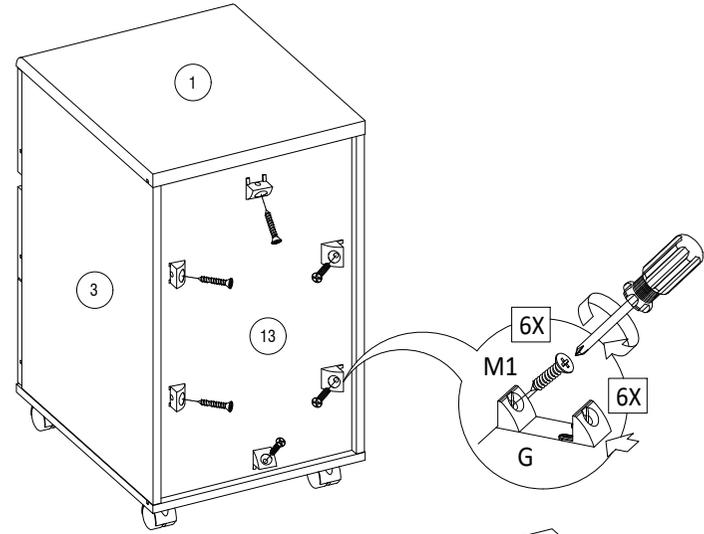

17



12