
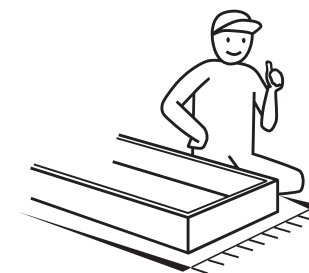
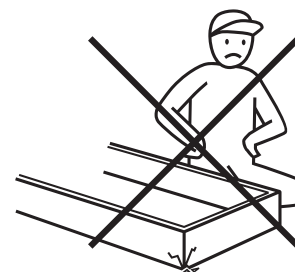
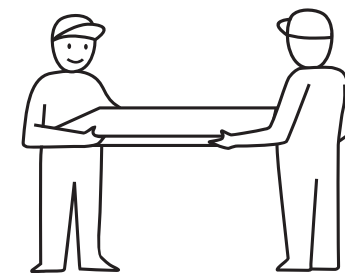


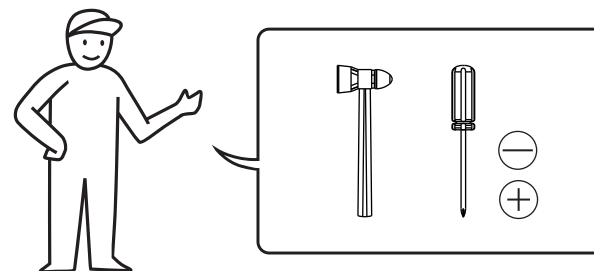






ASSEMBLING INSTRUCTION

DENVER SHOWCASE 2D


BEIGE - AMERICAN WALNUT




M3	D	E1	B	AX	AY
					
Ø 6 MM X 13 MM 4 X	6 X	Ø15 MM X 12 MM 22 X	Ø8 X 30 MM 12 X	2 X	1 X

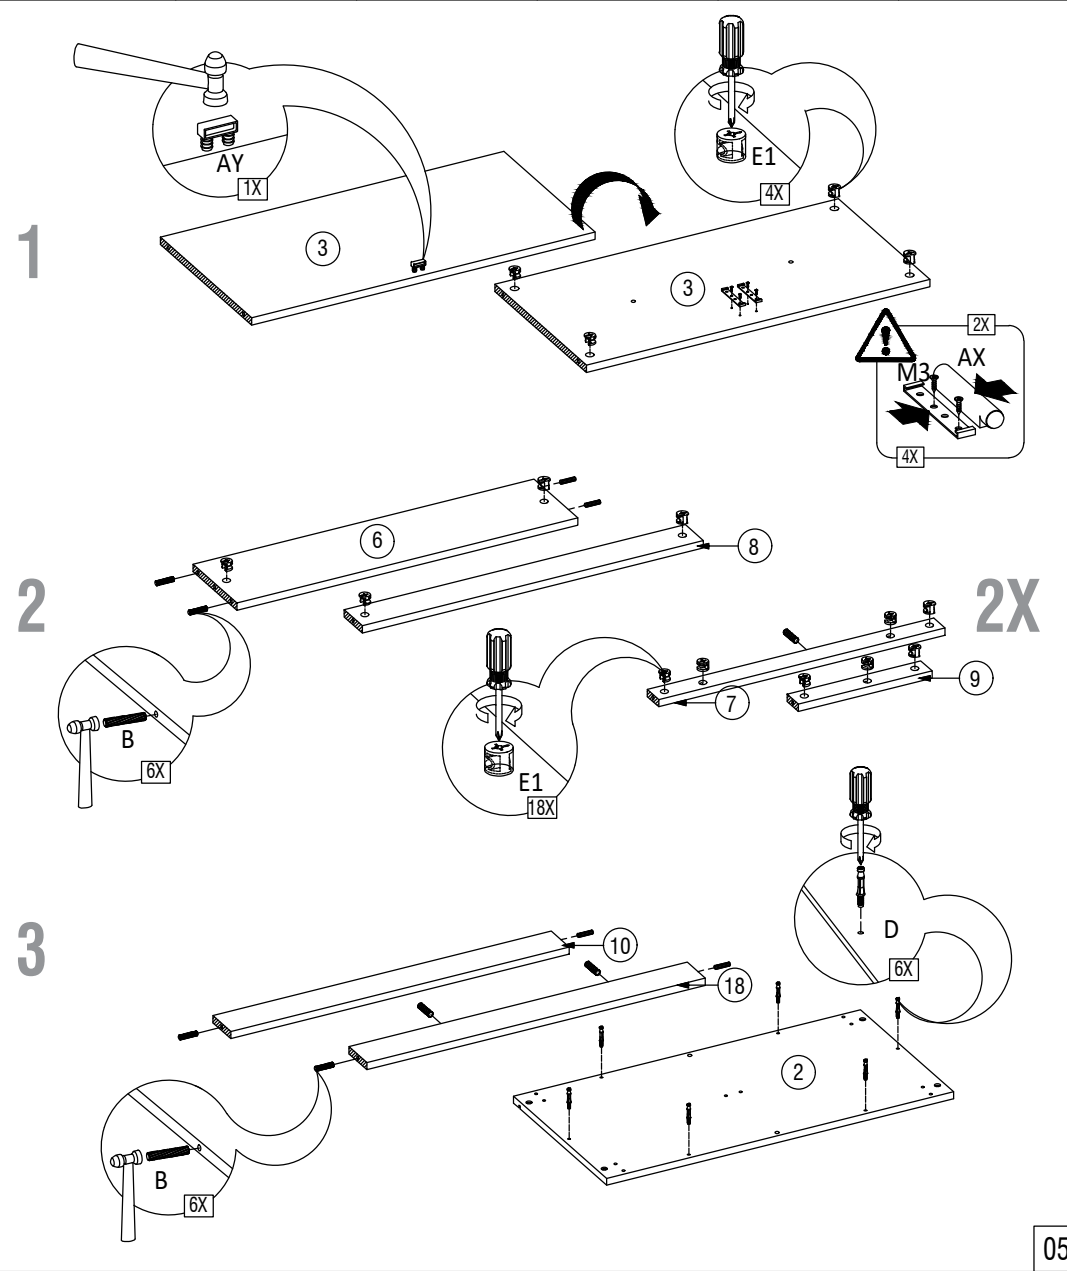


B	D
	
Ø8 X 30 MM 4 X	8 X

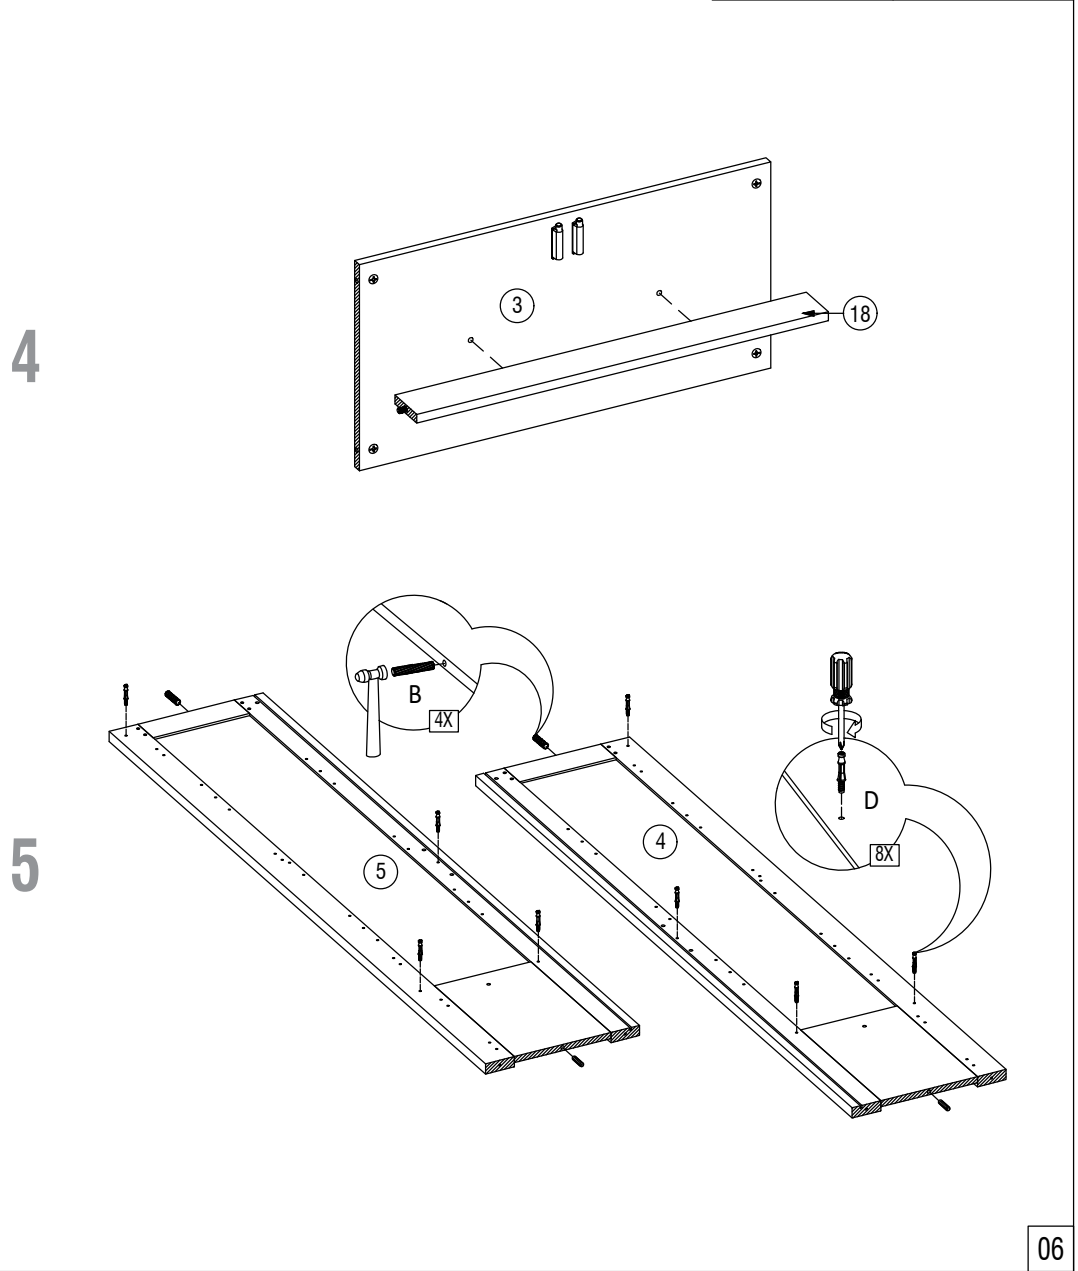


6

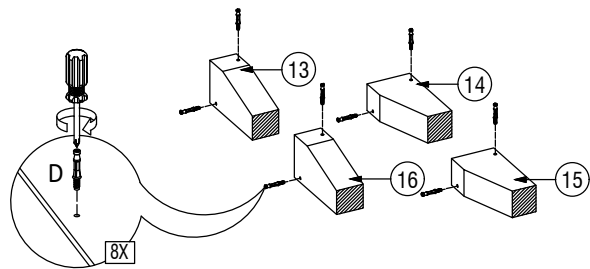

7

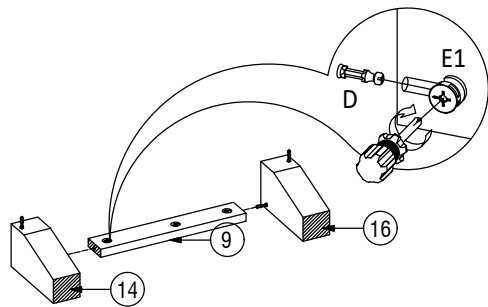

8

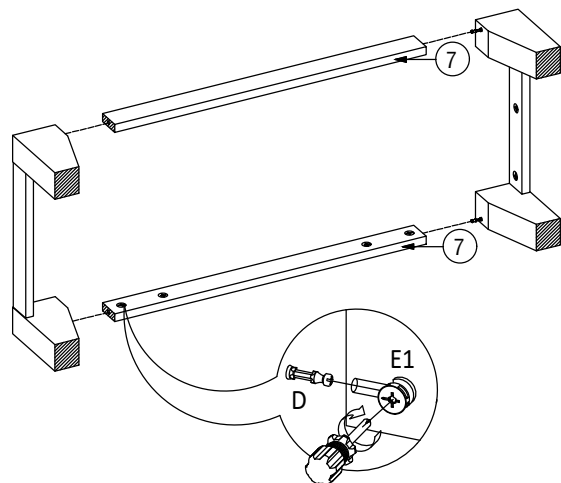

D




8 X


2X

07

9

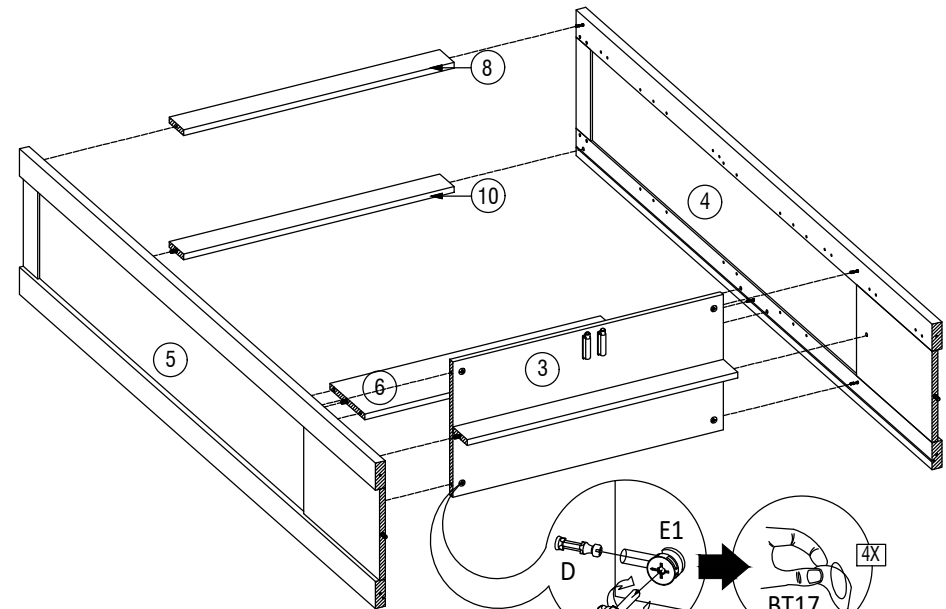

10

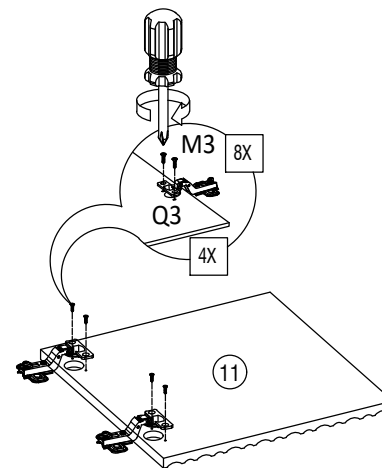


M3



Ø 6 MM X 13 MM

8 X

Q3



FULL OVERLAY

4 X


BT17



AMERICAN WALNUT 4 X


08

11

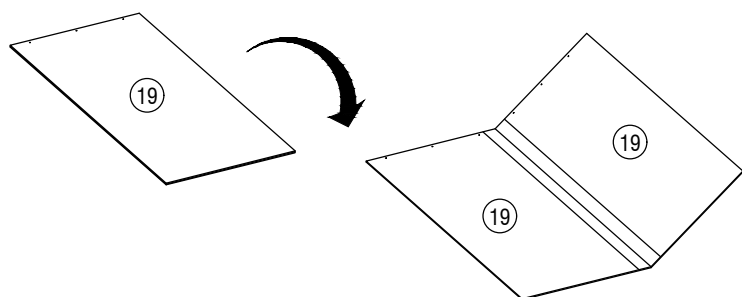







2X

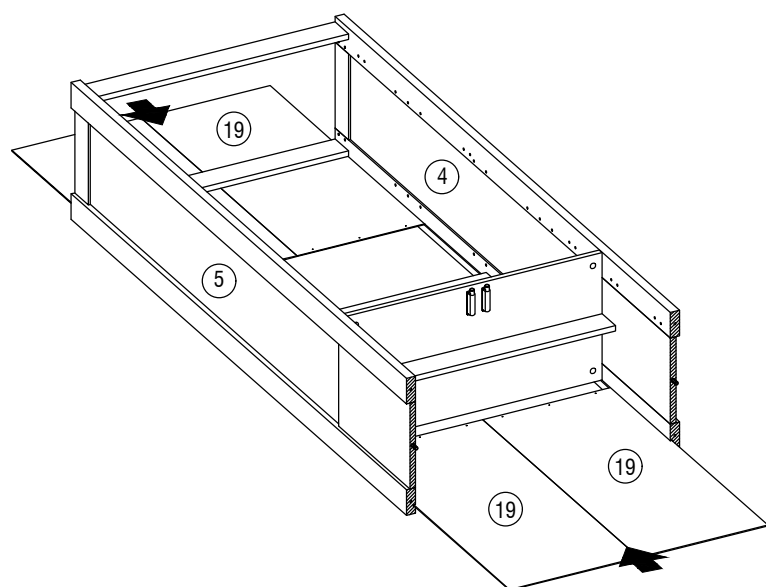
12




09

M	J2	BR	BS1	BP1	AA
					
Ø 4 MM X 13 MM	Ø 12 X 44 MM				
2 X	12 X	1 X	1 X	1 X	3 M'







13

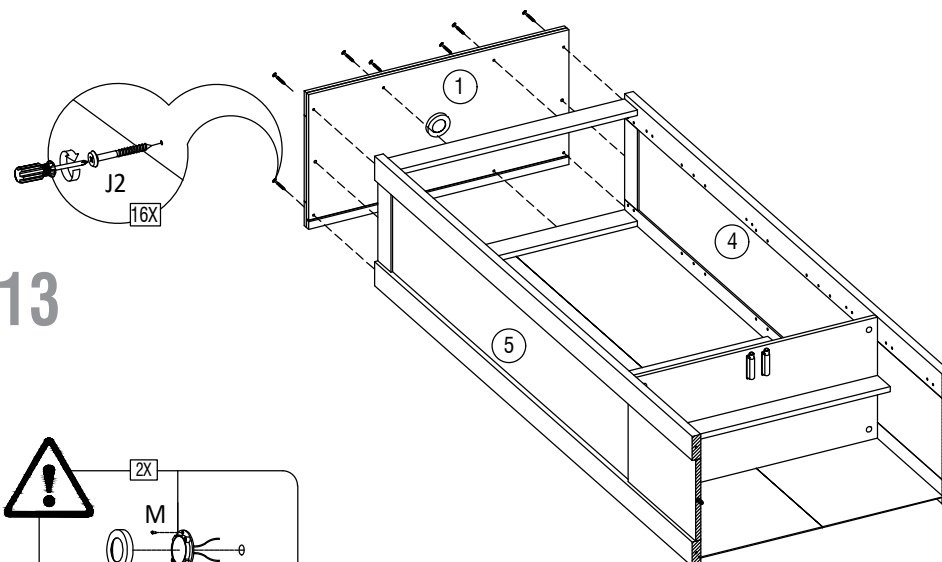


14

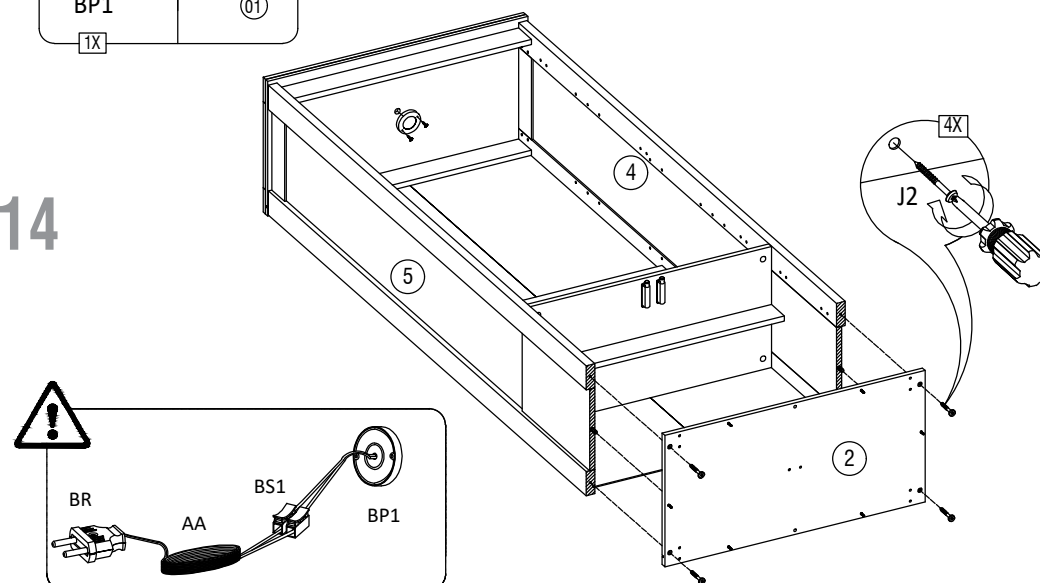


10
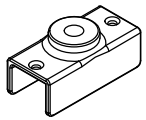
<div>BA</div>  <div>BLACK</div>	<div>AZ</div>  <div>BLACK</div>	<div>M1</div>  <div>Ø 4 MM X 16 MM</div>	<div>M3</div>  <div>Ø 6 MM X 13 MM</div>	<div>G</div>  <div>12 X</div>	<div>J2</div>  <div>Ø 12 X 44 MM</div>
1 X	1 X	12 X	14 X	12 X	10 X

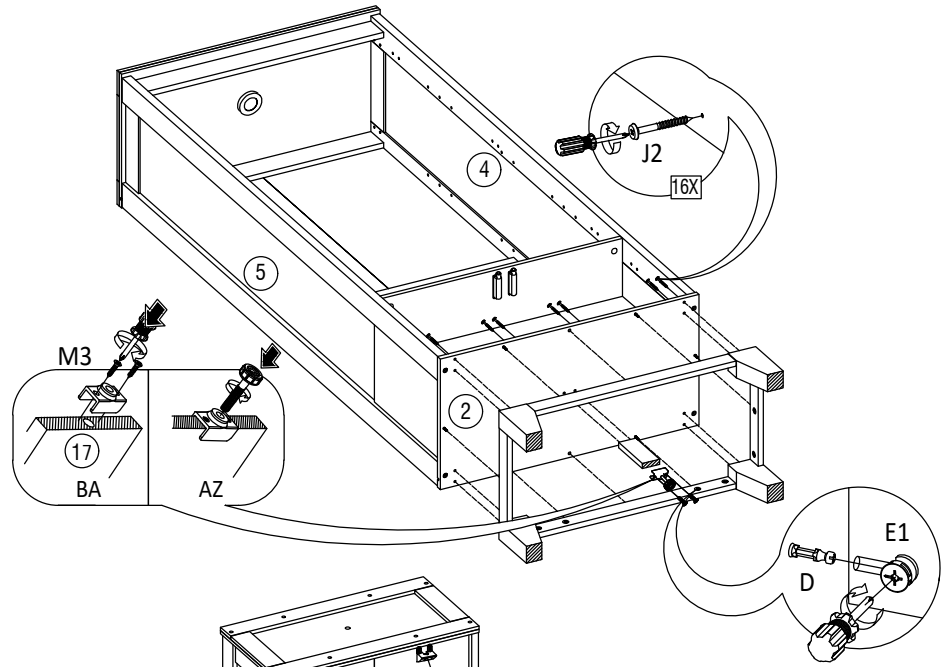


15

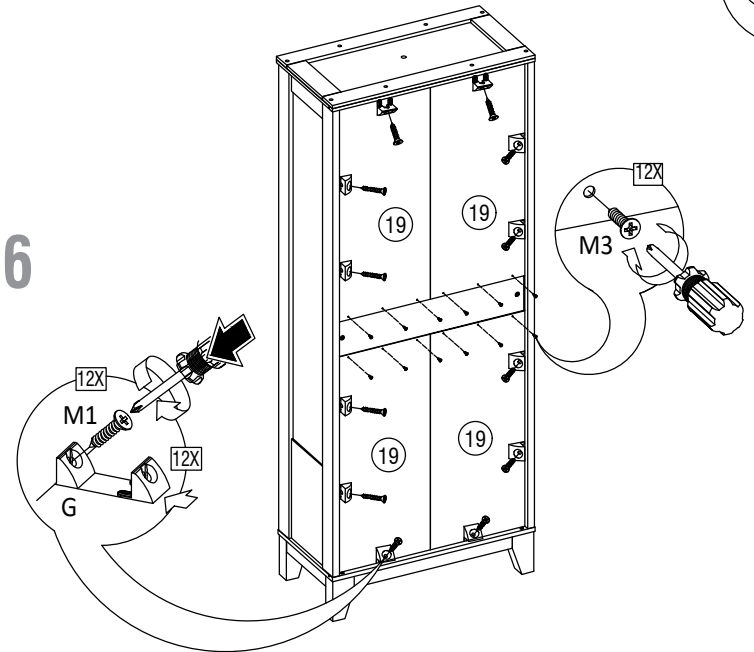


16





11

<div>AE1</div>  <div>12 X</div>	<div>M3</div>  <div>Ø 6 MM X 13 MM</div>	<div>BT17</div>  <div>AMERICAN WALNUT</div>
12 X	8 X	8 X



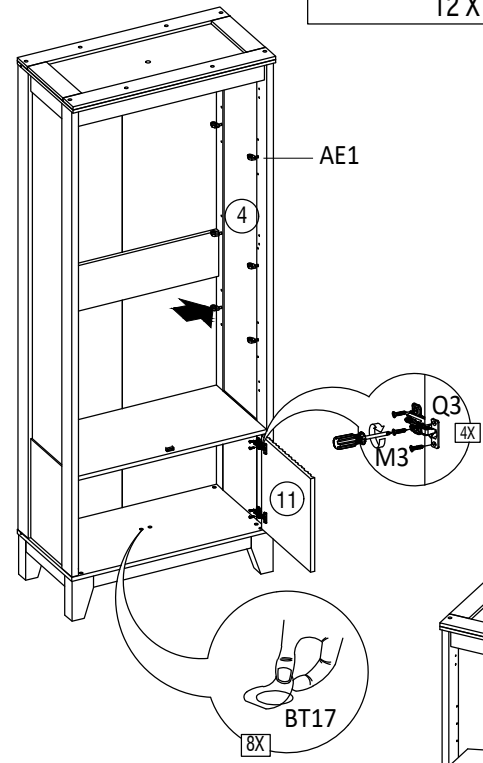



17

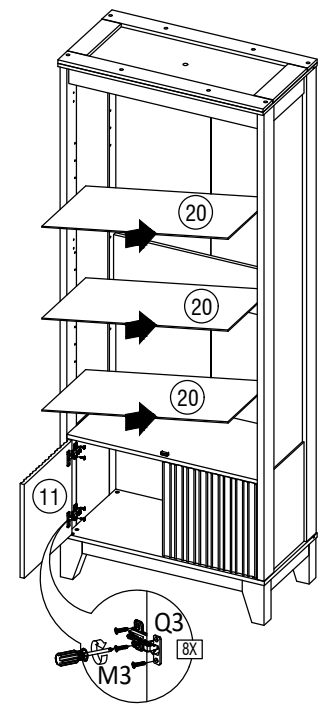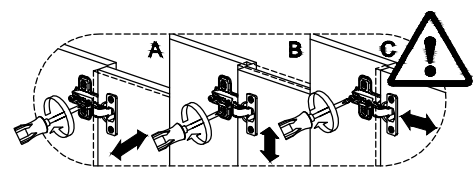

18



12

 <p>BU</p> <p>1 X</p>	 <p>S</p> <p>6 X</p>	 <p>AN1</p> <p>2 X</p>	 <p>M3</p> <p>Ø 6 MM X 13 MM 12 X</p>	 <p>V</p> <p>2 X</p>	 <p>A5</p> <p>Ø 4 MM X 10 MM 2 X</p>
--	---	---	--	---	--

