

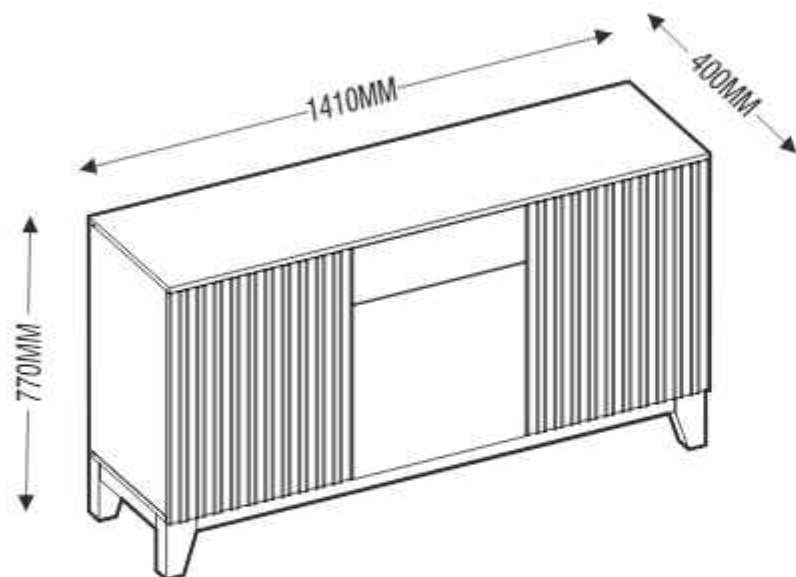


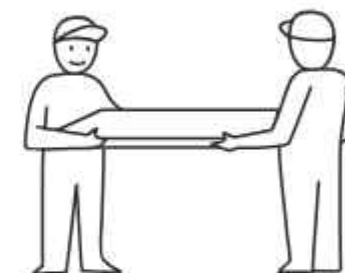


ASSEMBLING INSTRUCTION

DENVER SIDEBORD 140


BEIGE - AMERICAN WALNUT

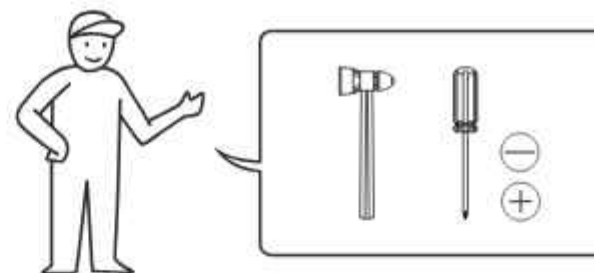


 36 X Ø 15 MM X 12 MM	 36 X Ø 8 X 30 MM	 15 X Ø 12 X 44 MM	 20 X BEIGE	 10 X AMERICAN WALNUT	 10 X
 4 X Ø 6 MM X 1 1/2"	 44 X Ø 6 MM X 13 MM	 18 Ø 4 MM X 16 MM	 18 X INSET	 4 X HALF OVERLAY	 2 X
 4 X	 4 X	 1 X	 350 MM 1 SET		 2 X BLACK
 2 X BLACK					

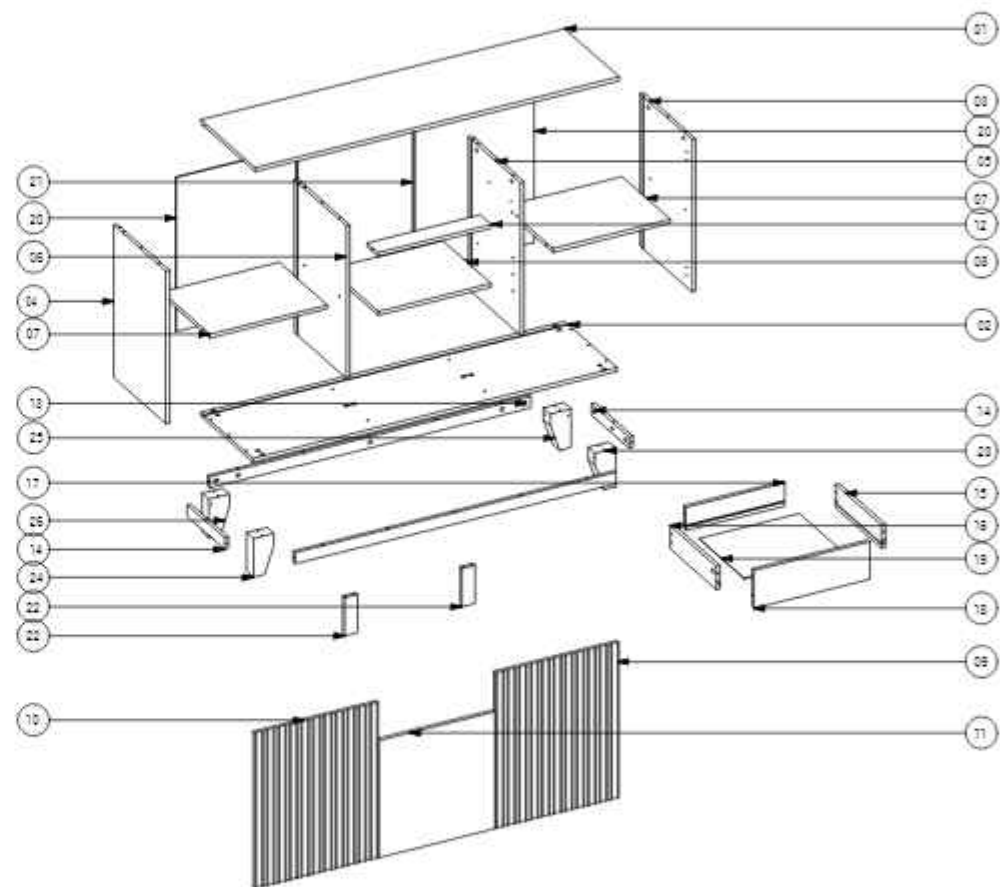

1

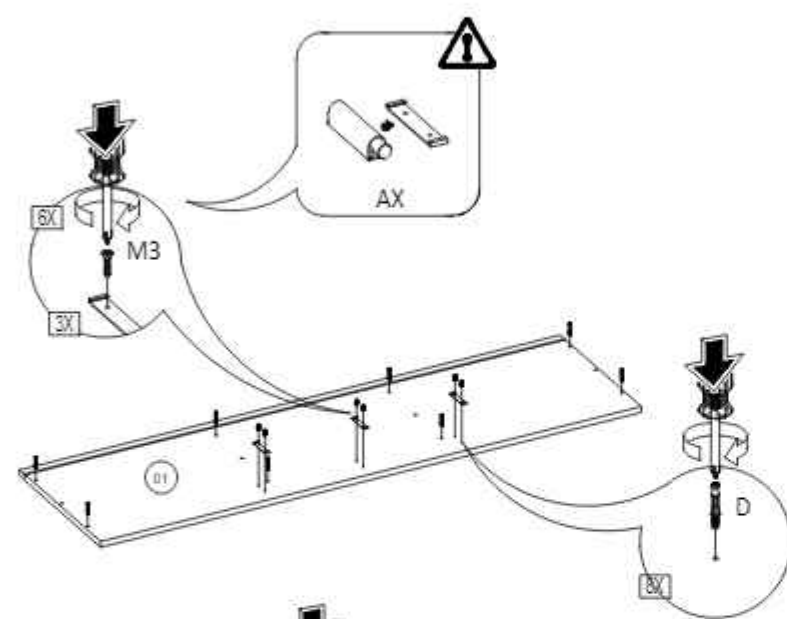


2

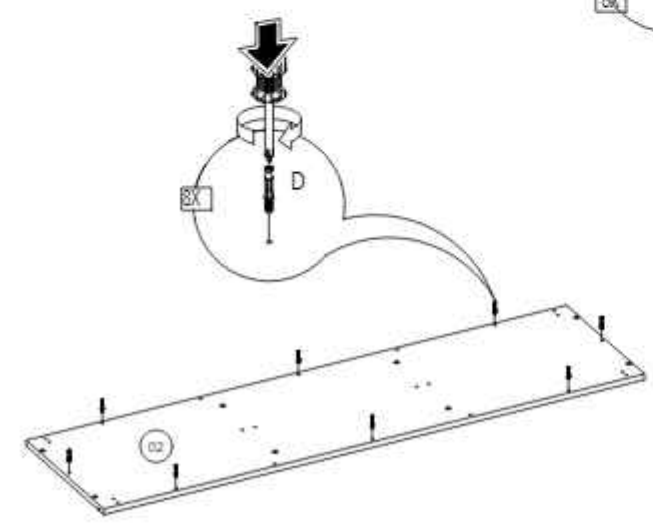


M3	AX	D
6 X	3 X	16 X

05

3

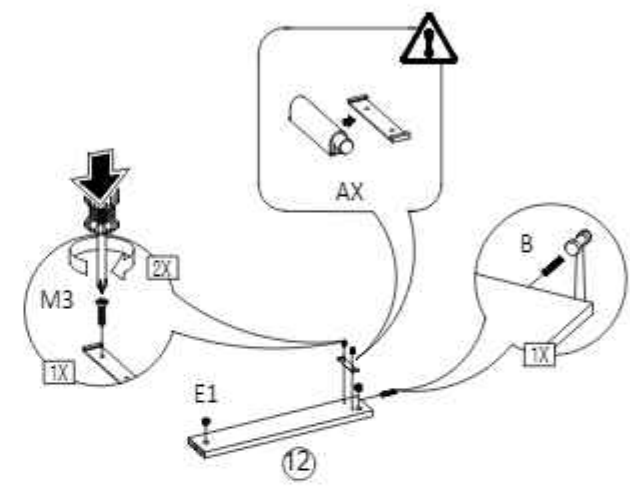


4

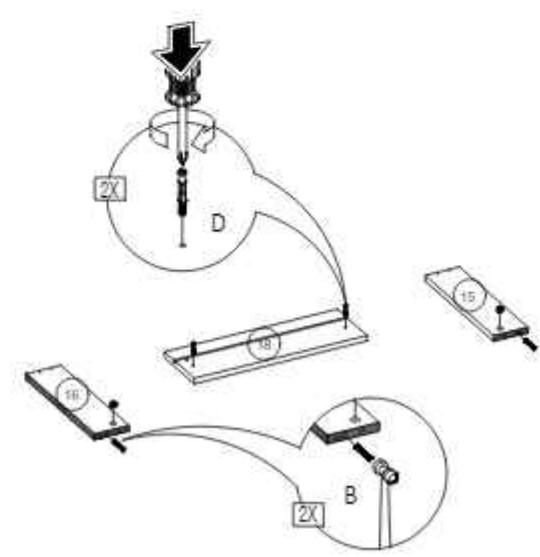



D	M3	AX	E1	B
2 X	2 X	1 X	4 X	3 X

06


5

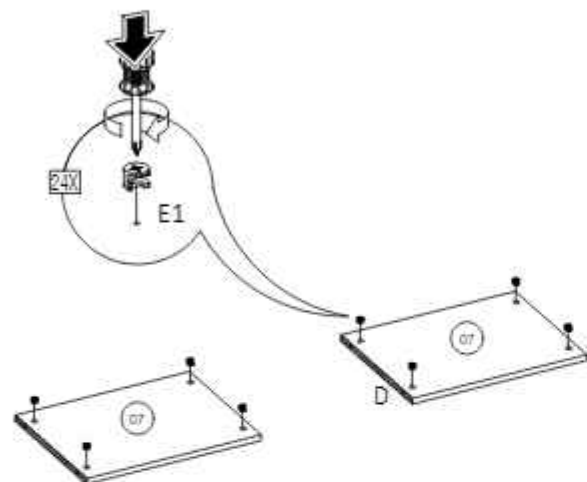


6

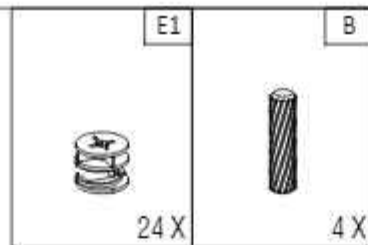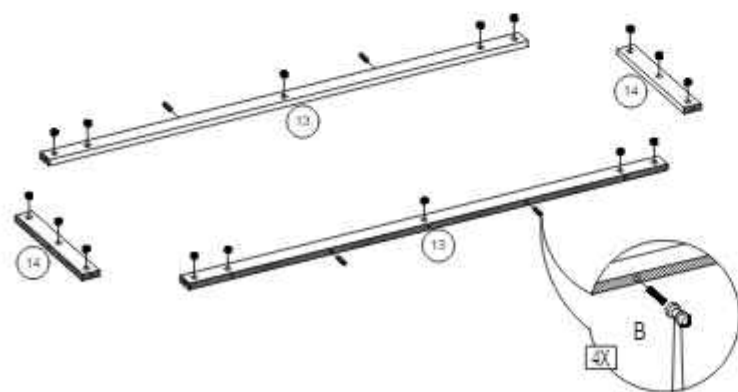



7

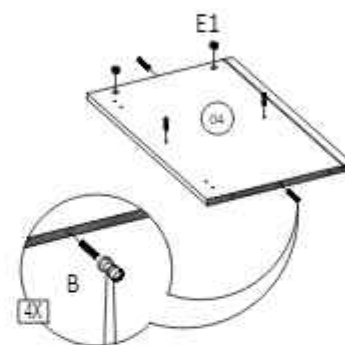

8

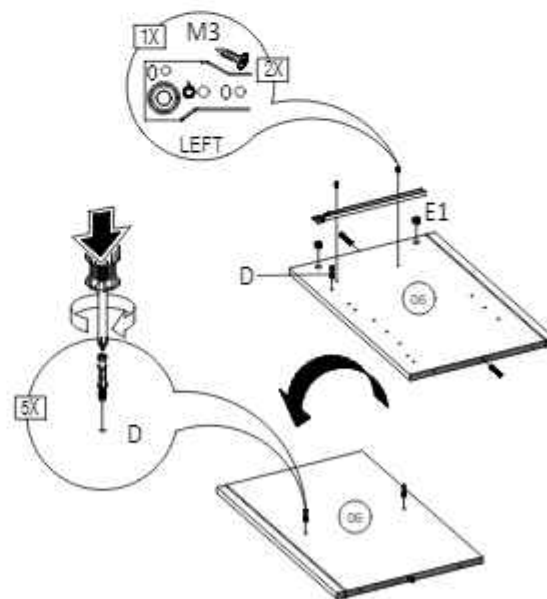


07

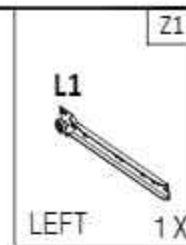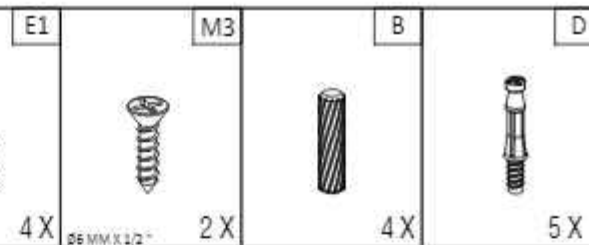


08

9

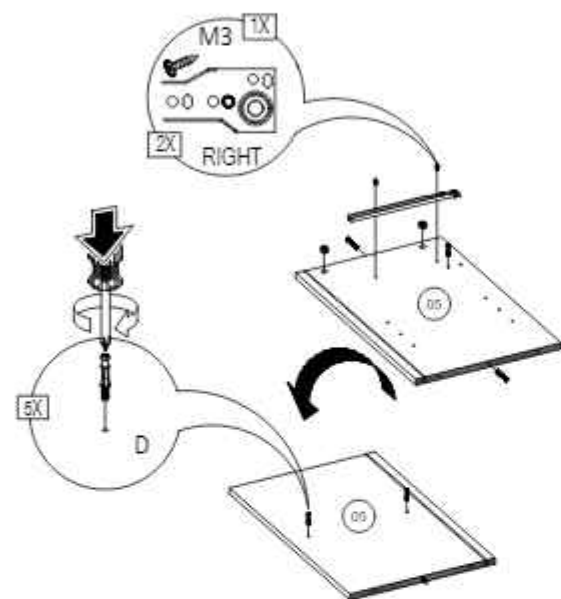


10

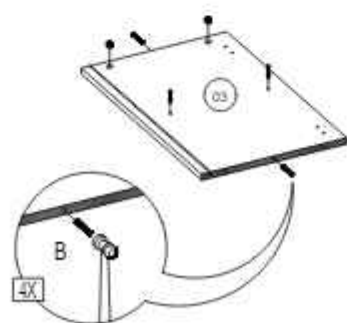


E1	Z1	B	M3	D
4 X	RIGHT	1 X	4 X	2 X
			Ø6 MM X 1/2"	5 X



11

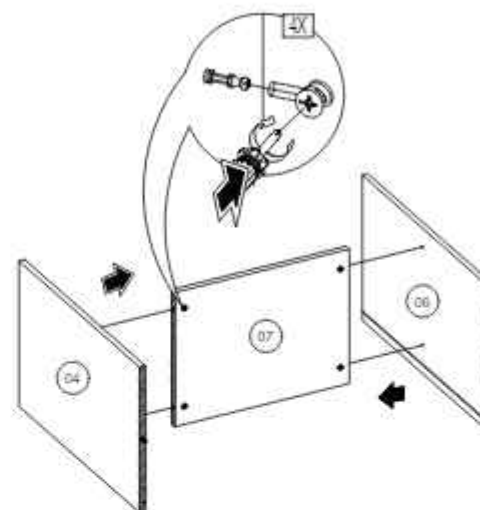


12

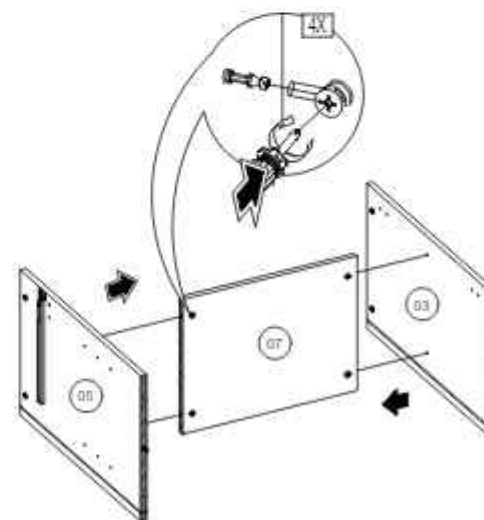

13

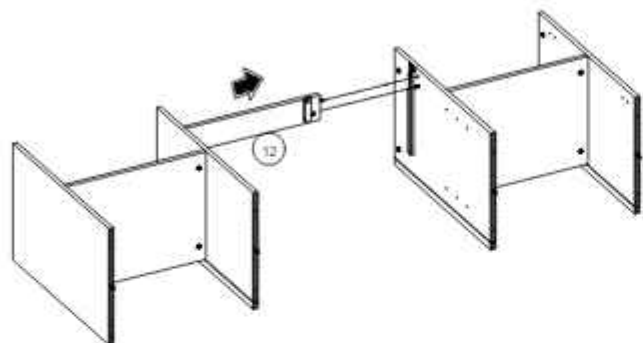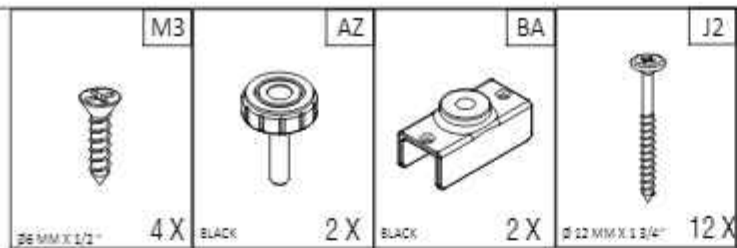


14

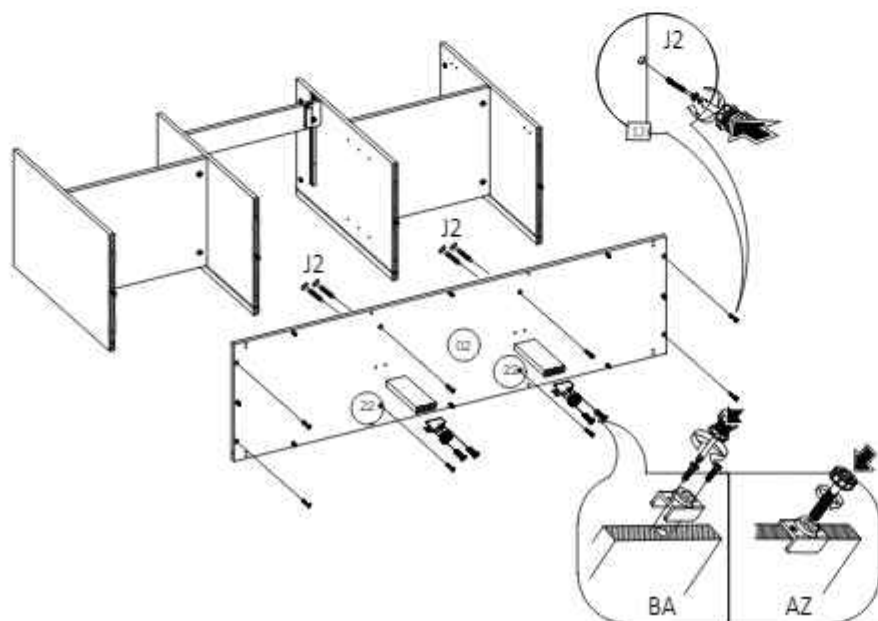


Pasang Kaki Tengah Dahulu ke Komponen Nomer 2!!

11

15

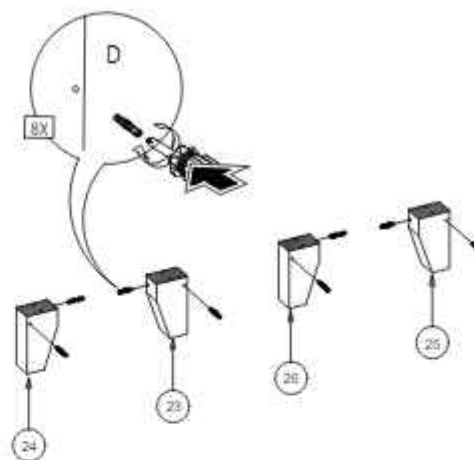

16

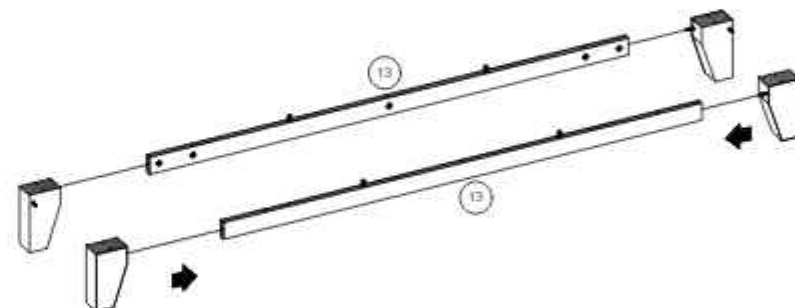


17




12

Pemasangan Komponen Kaki ke Komponen Nomer 2 minimal dilakukan oleh 2 orang!!


18

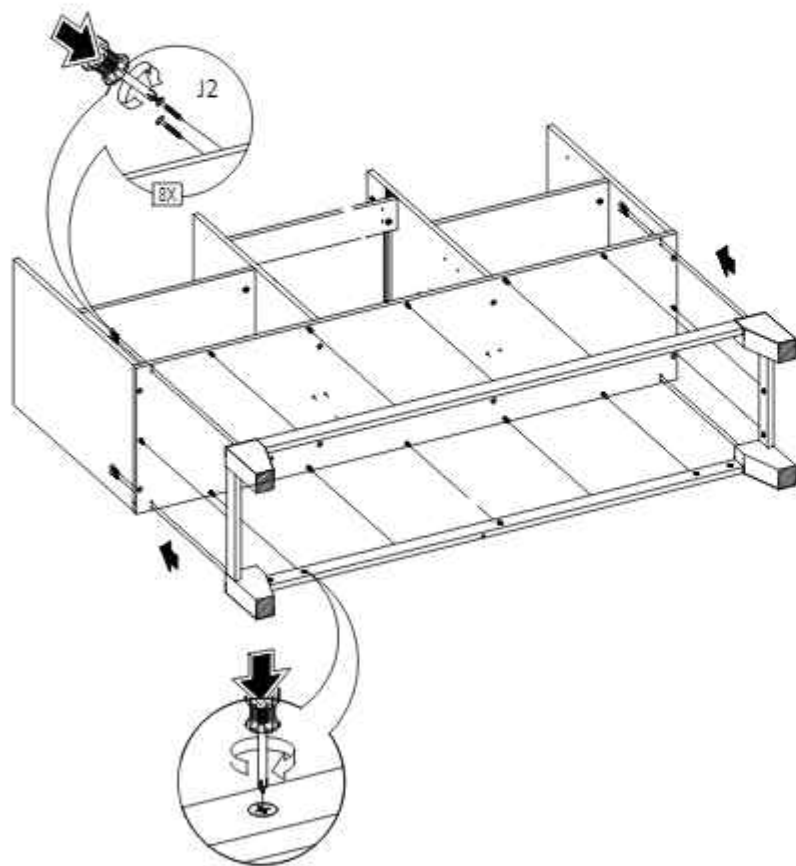

19

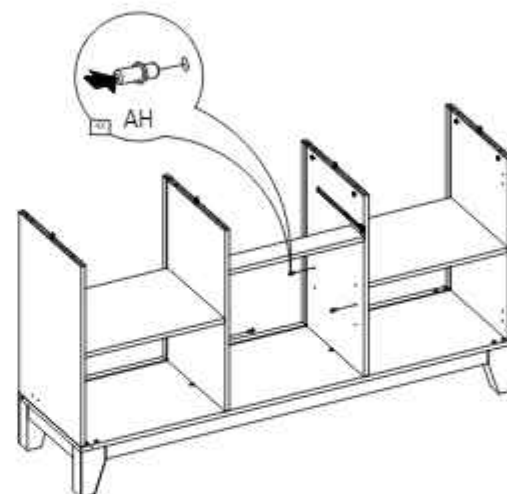

20

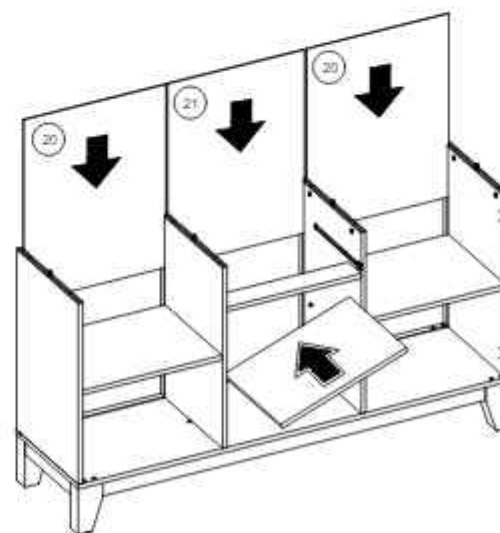

13


14

BT12	BT14	M1
		
BEIGE	AMERICAN WALNUT	
8 X	10 X	18 X


G

18 X

21

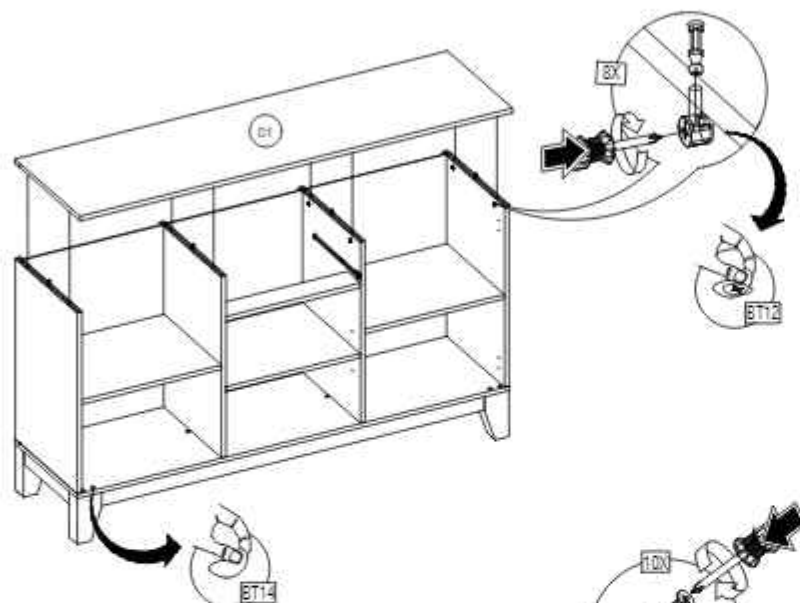


22

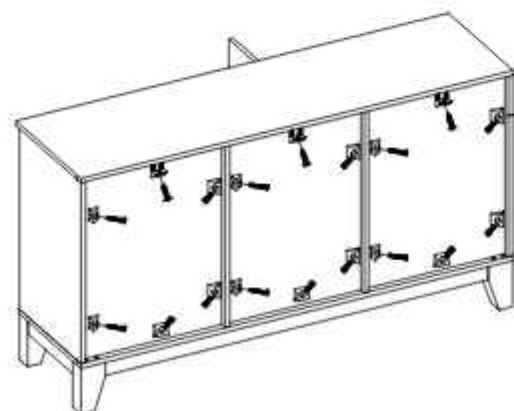


15

BT12	Z1	Z1	L	M3
				
BEIGE	R2	L2		
2 X	1 X	1 X	4 X	4 X


23

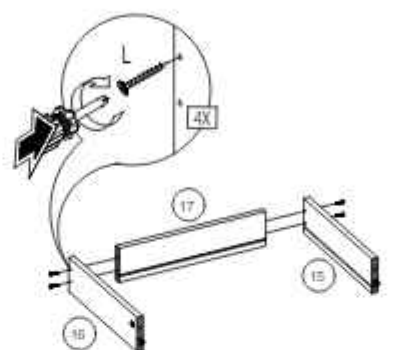


24

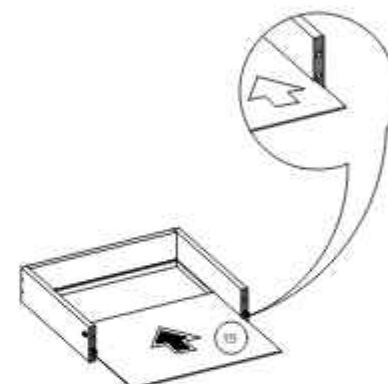

25

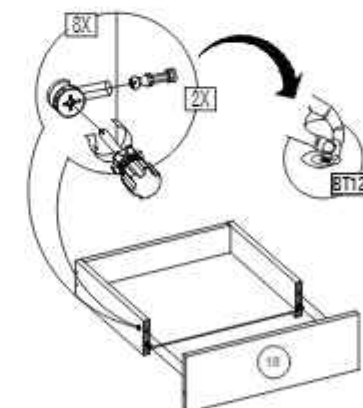


26

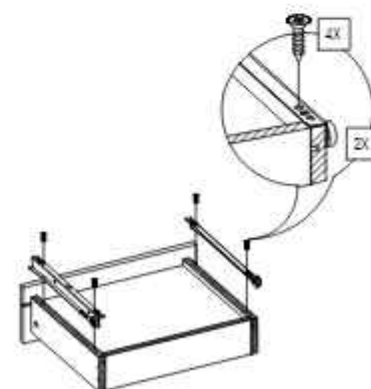

16

27

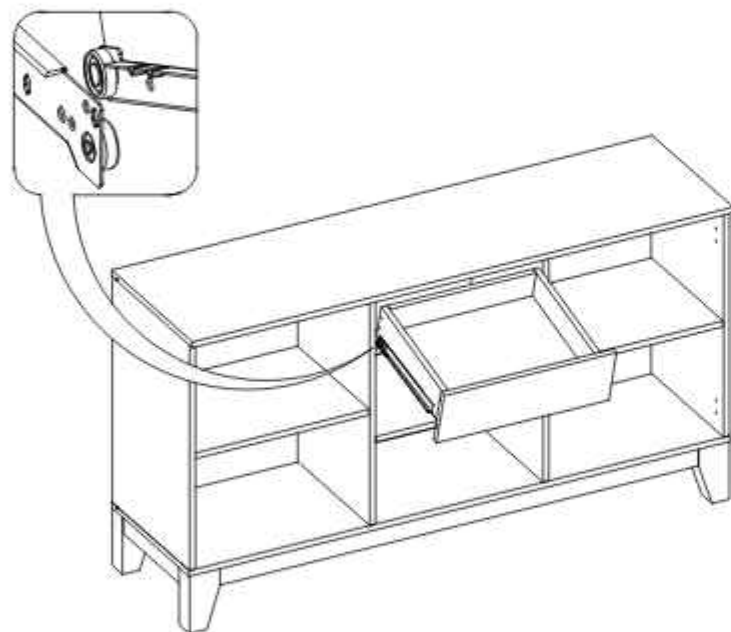


17

28



29

30

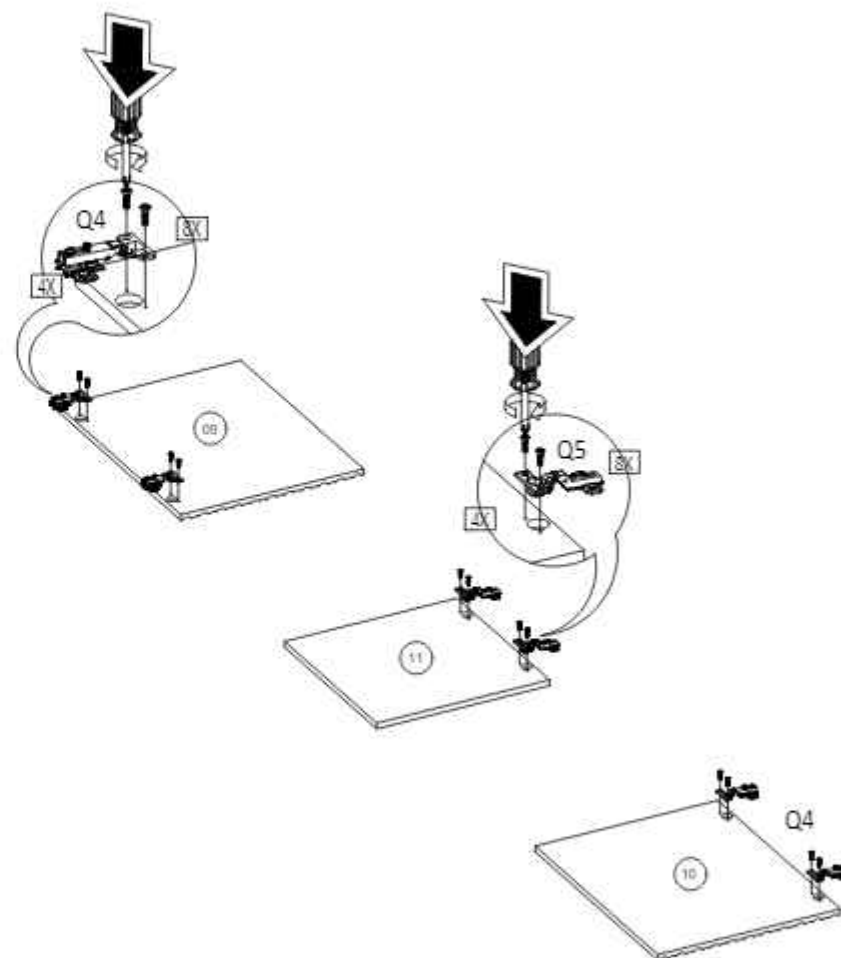


M3	Q5	Q4
25 mm x 1/2"	12 X	2 X
		4 X


18

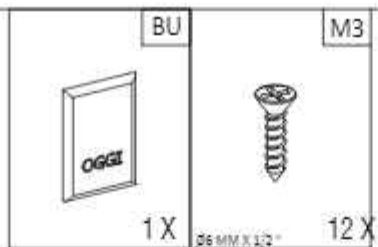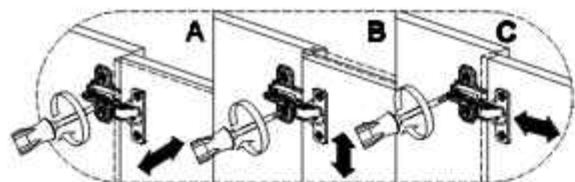

31

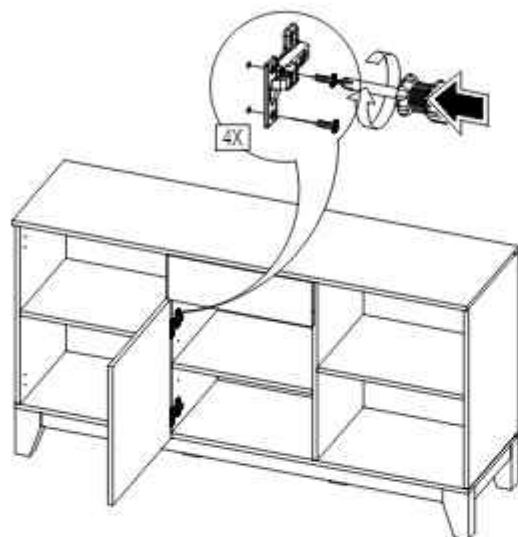

32

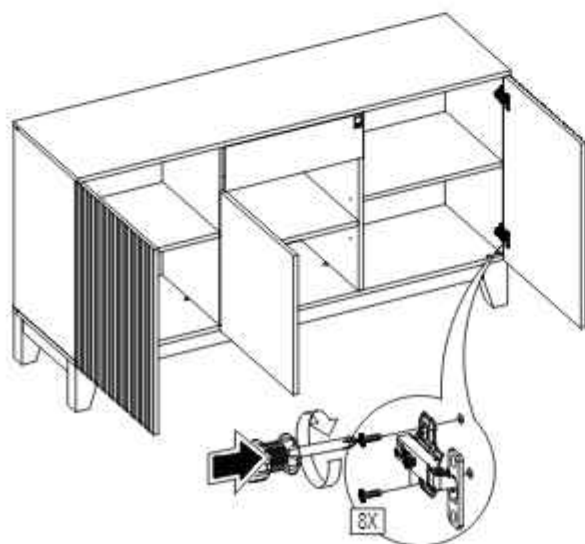

32

