



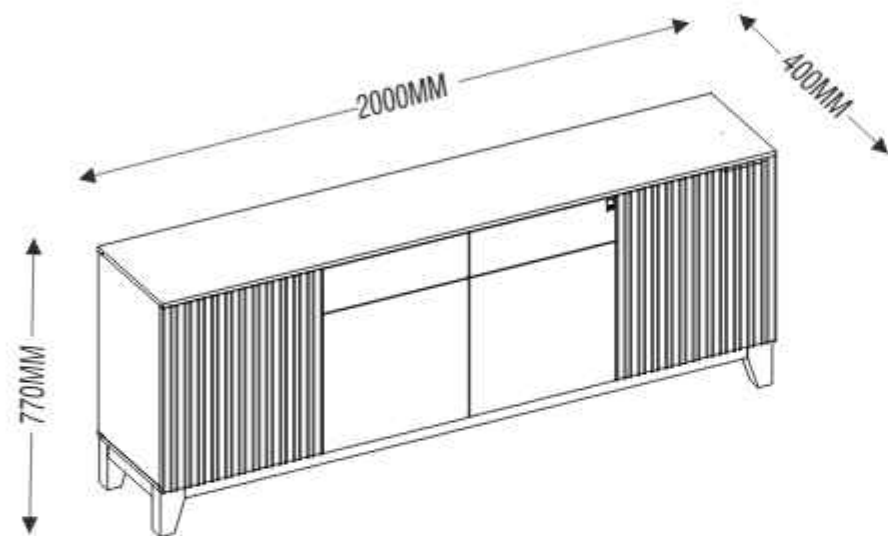


ASSEMBLING INSTRUCTION

DENVER SIDEBORD 200


BEIGE - AMERICAN WALNUT

01

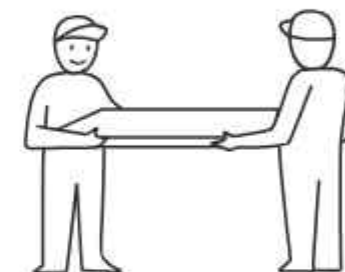
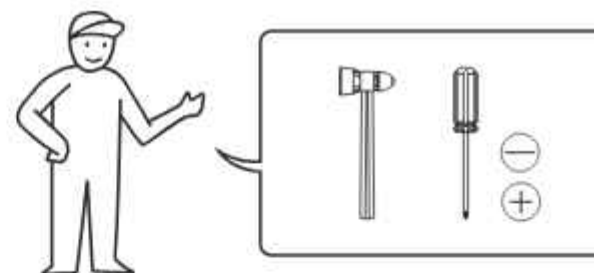


02

1

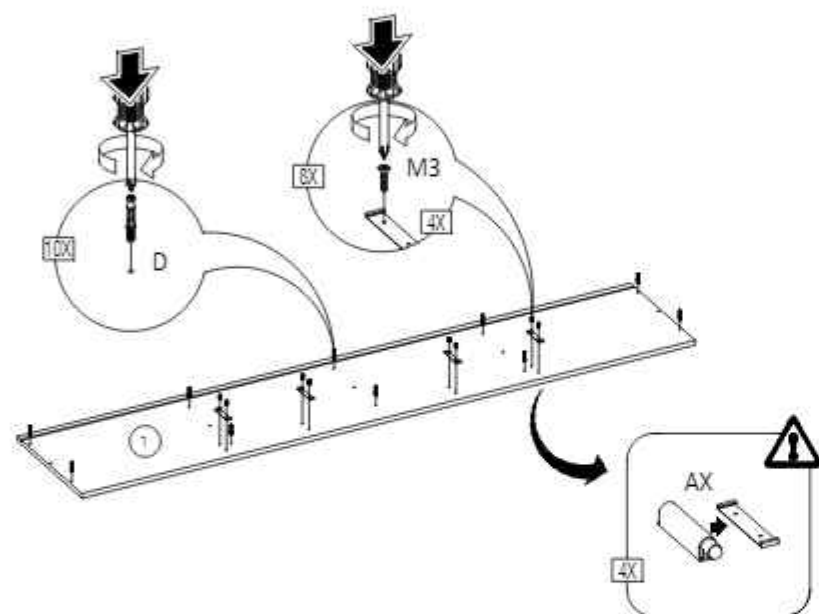


2

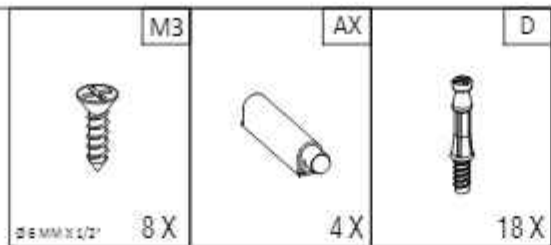
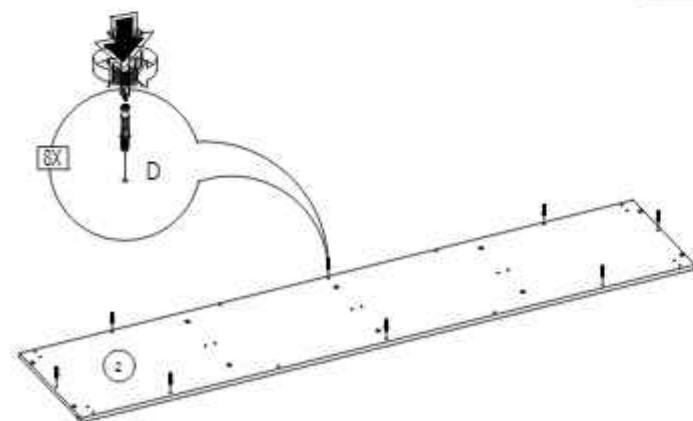


05

3

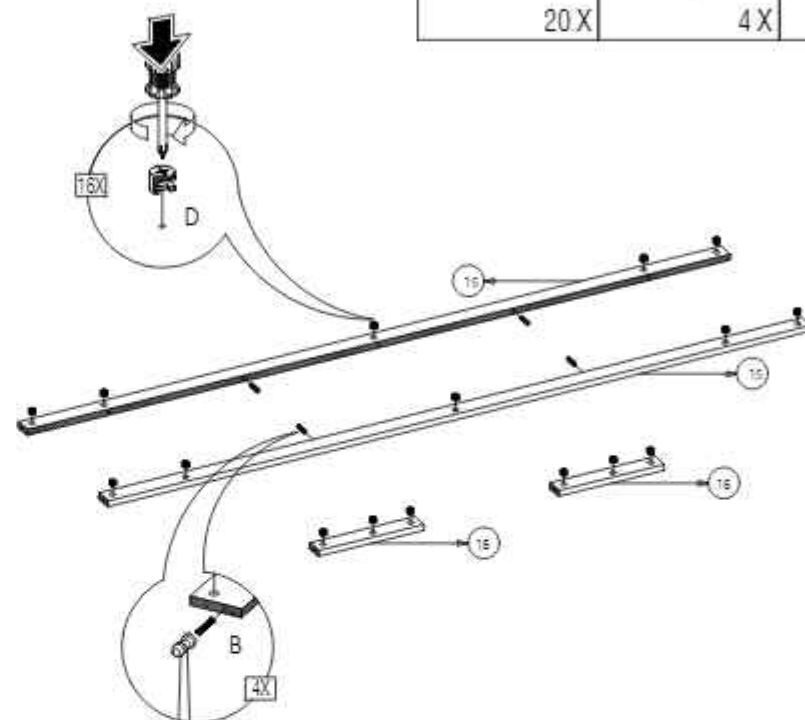


4

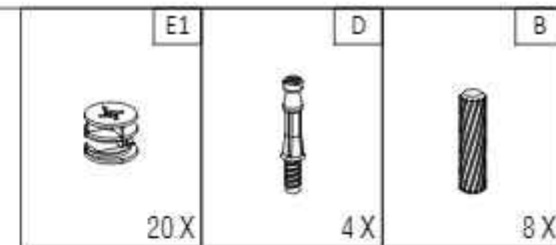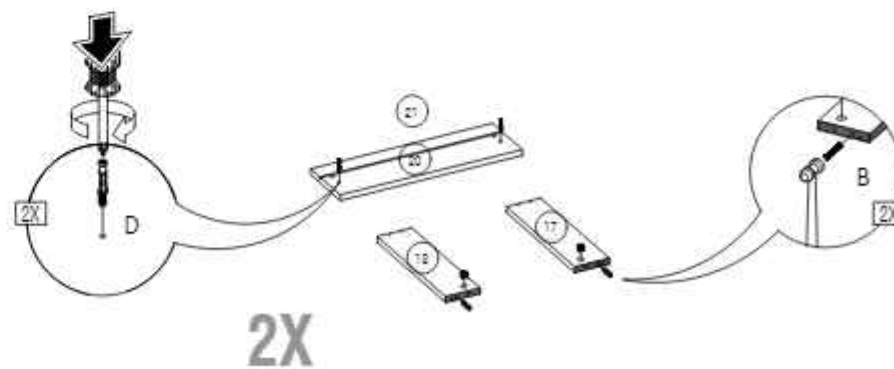

06


E1	M3	B	Z1	Z1	D
			L1 	R1 	
2 X	4 X	2 X	LEFT 1 X	RIGHT 1 X	2 X

7

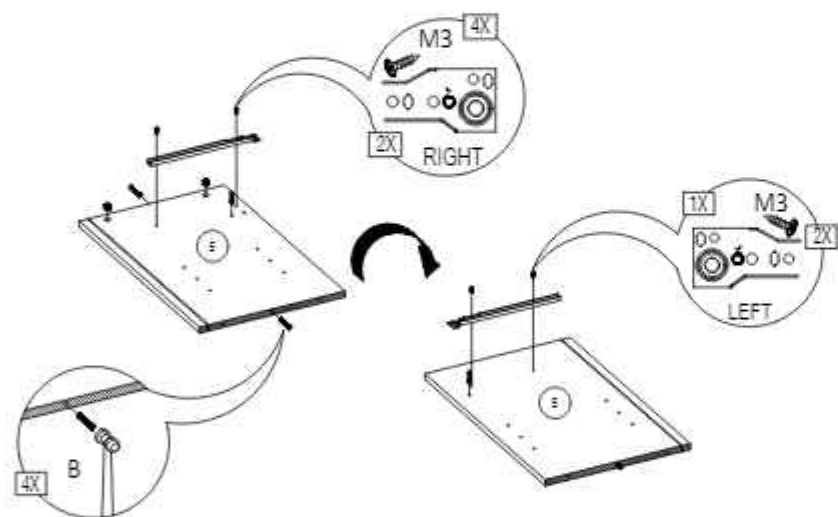


M3	E1	D	Z1	B
			R1 	
2 X	4 X	5 X	RIGHT 1 X	4 X


8

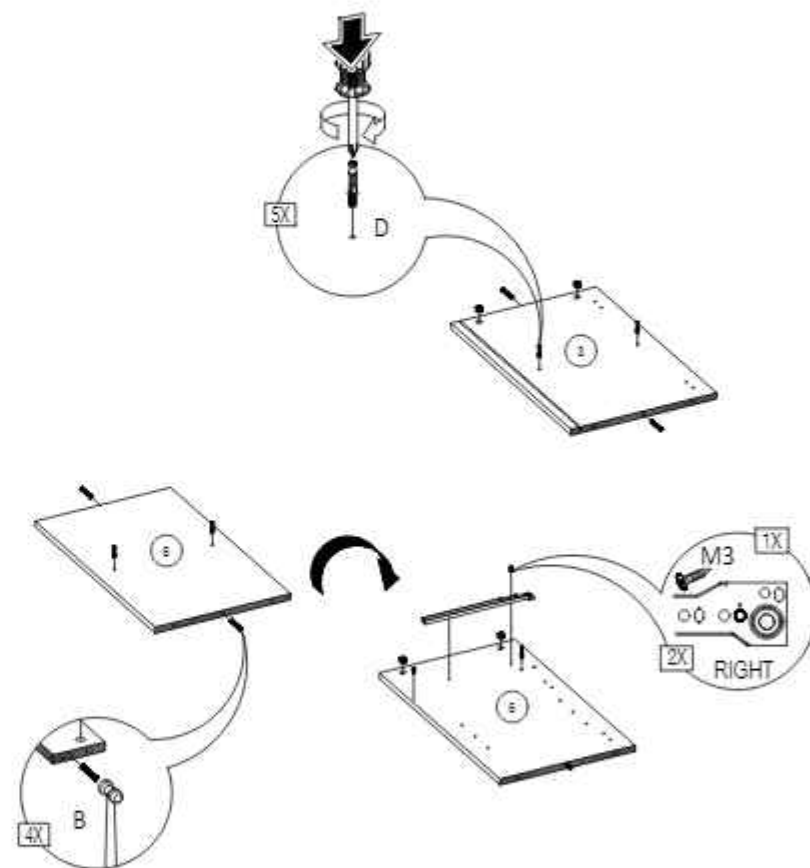


9

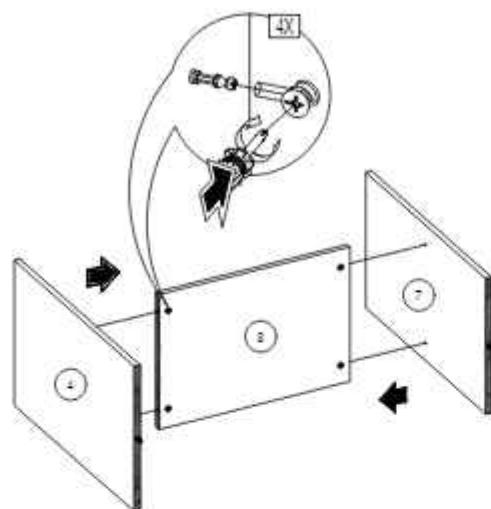


10

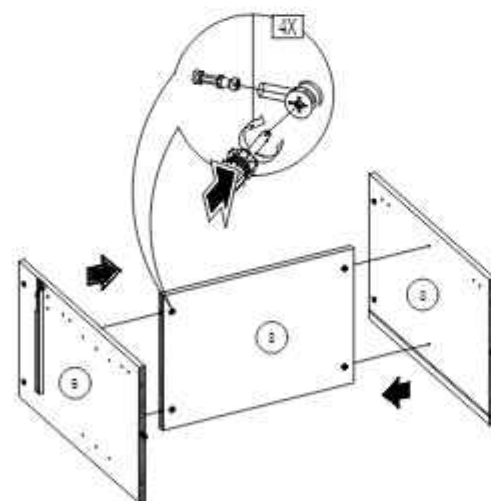


11

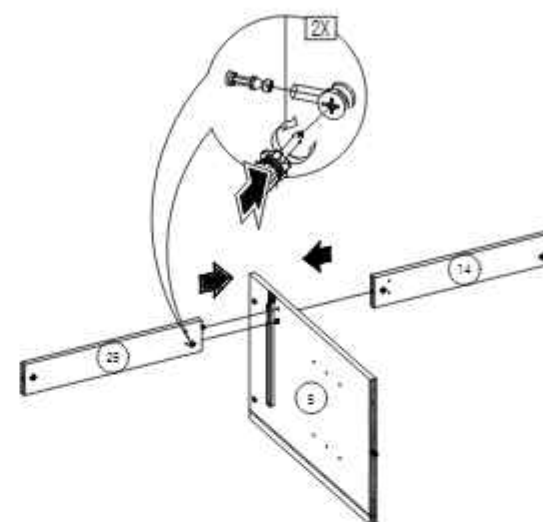

12

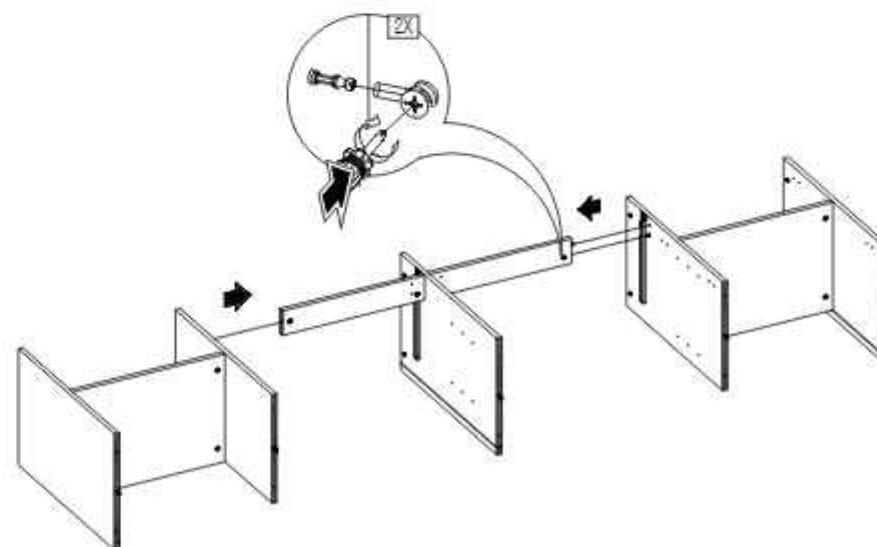


13

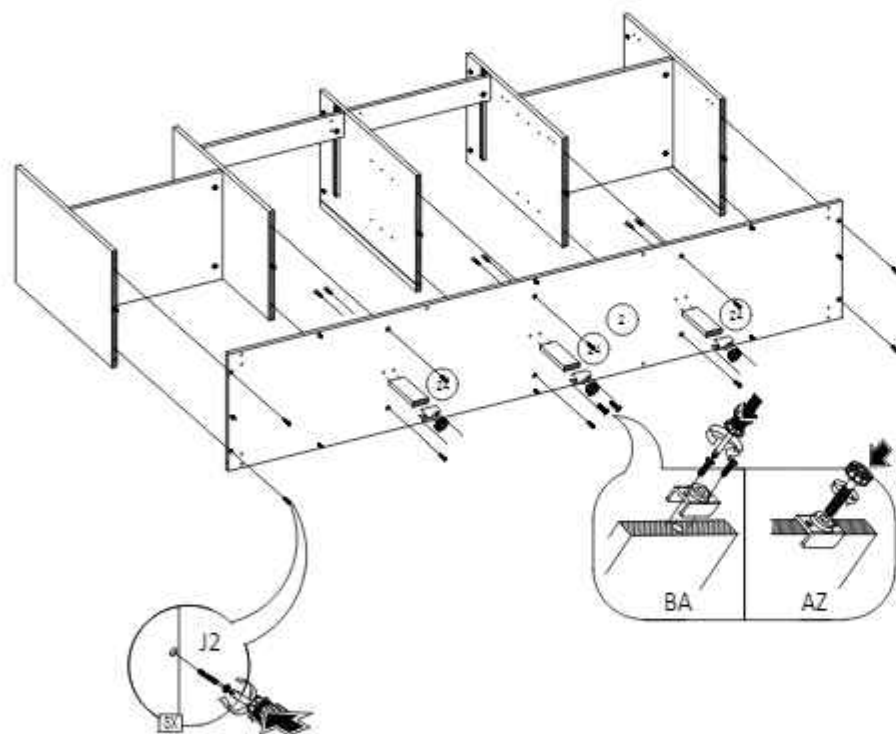


Pasang Kaki Tengah Dahulu ke Komponen Nomer 2!!

13


14

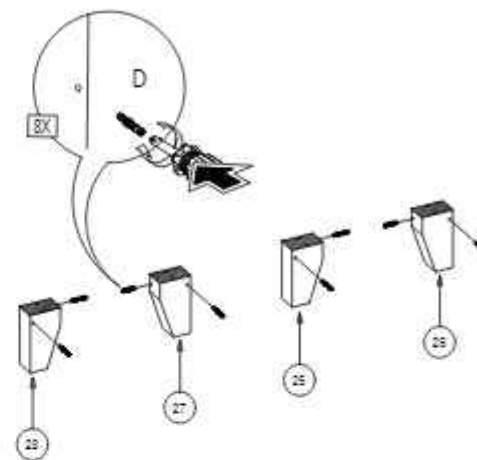

15

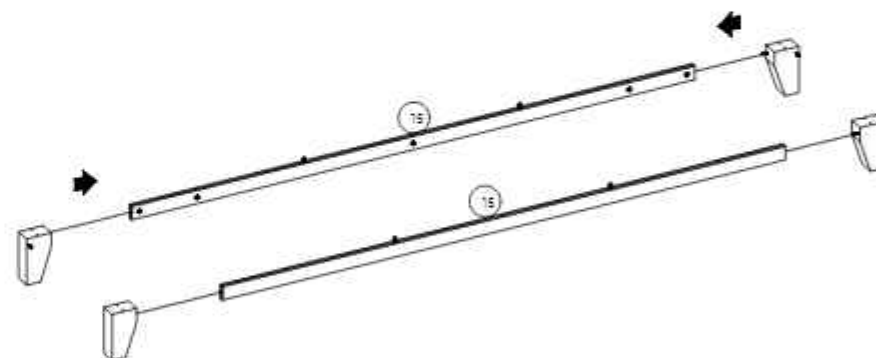

16


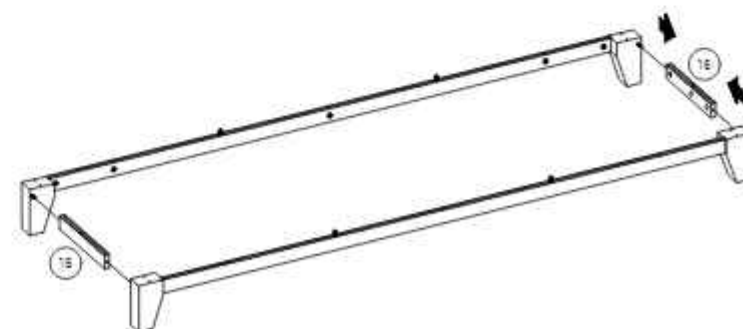


14





Pemasangan Komponen Kaki ke Komponen Nomer 2 minimal dilakukan oleh 2 orang!!

17

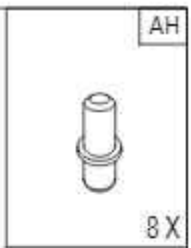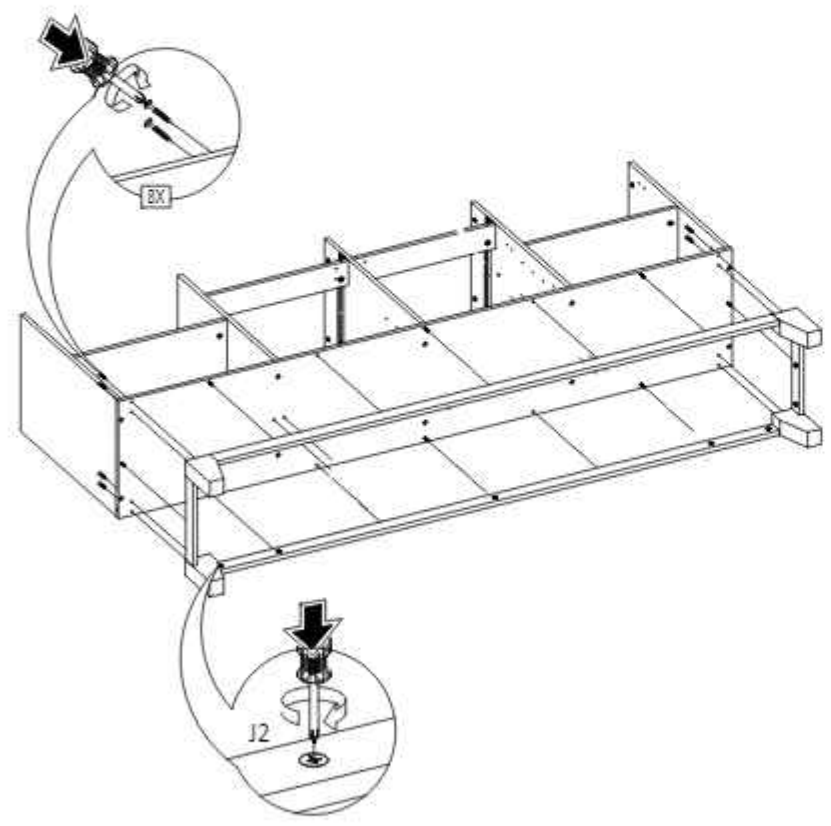


18


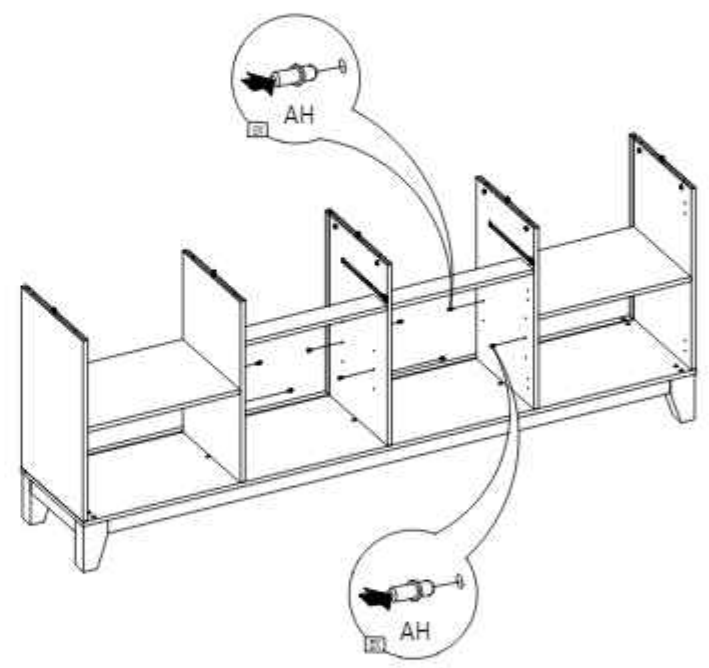


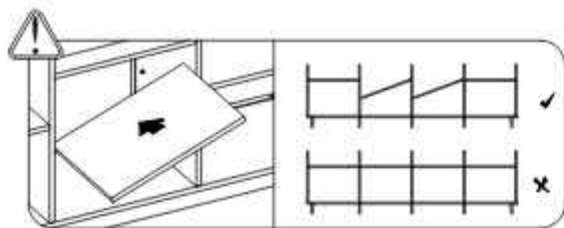


19

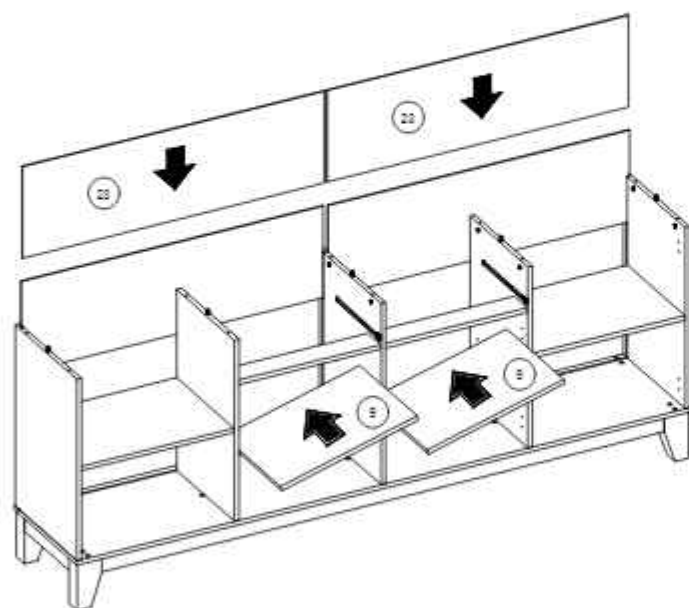

20

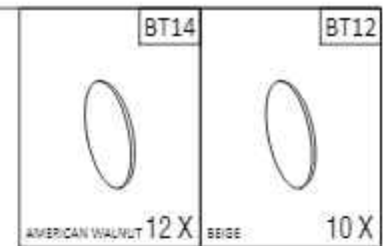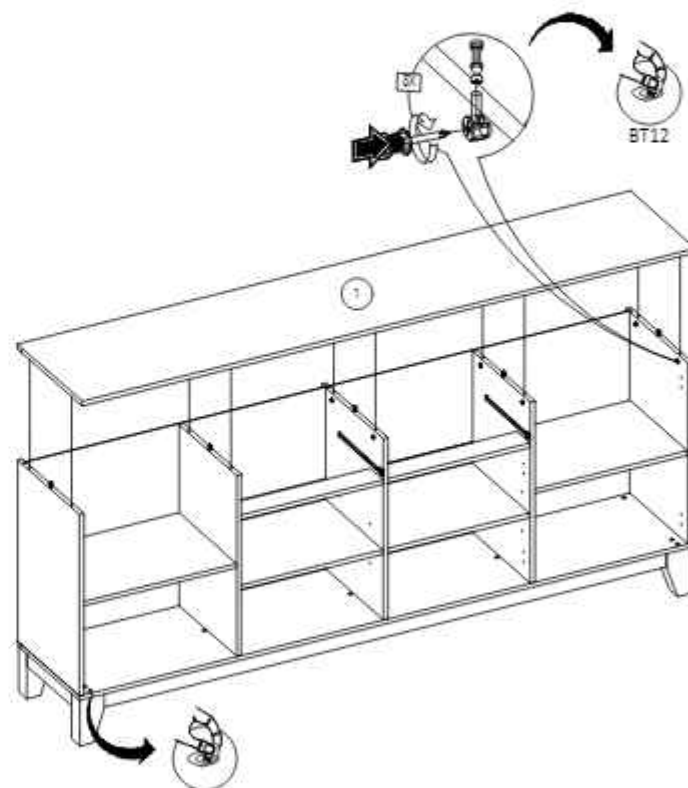

21

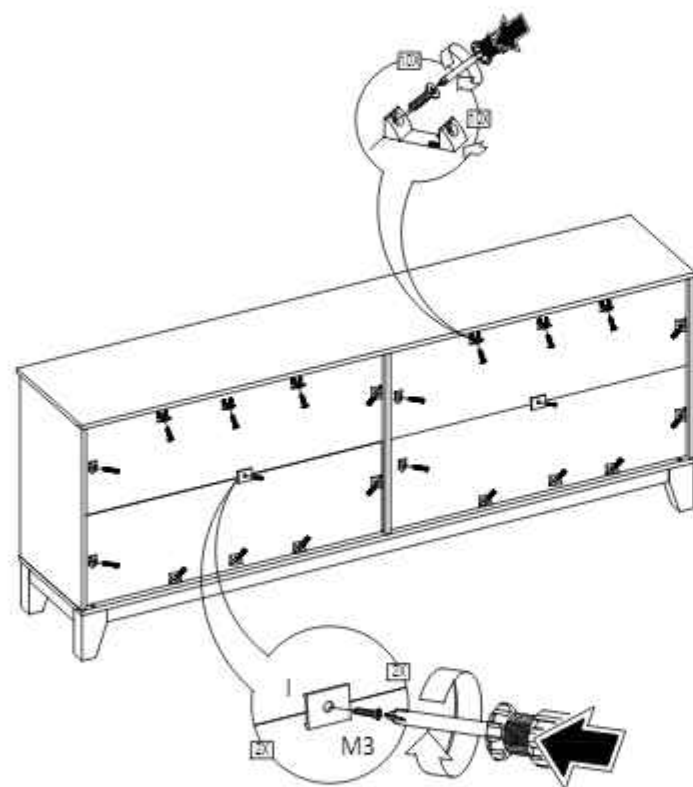


M	I	M1	G
			
Ø 6 MM X 1/2"	2 X	Ø 4 MM X 5/8"	20 X

19

2X


22

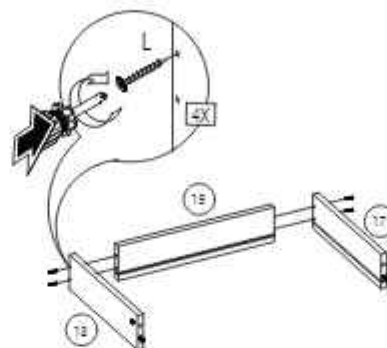


23



24

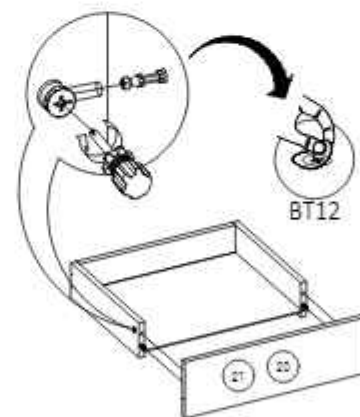


25

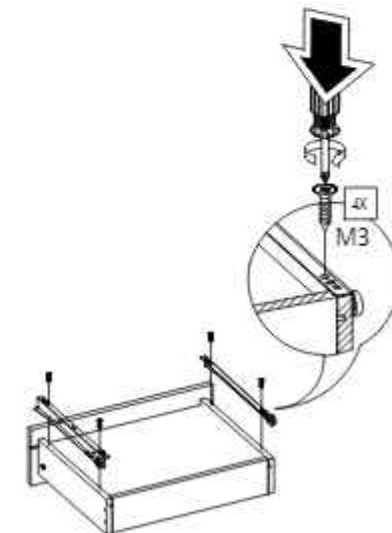

L	BT12	M3
		
Ø 6 MM X 1 1/2"	8 X	Ø 6 MM X 1/2"


20

26

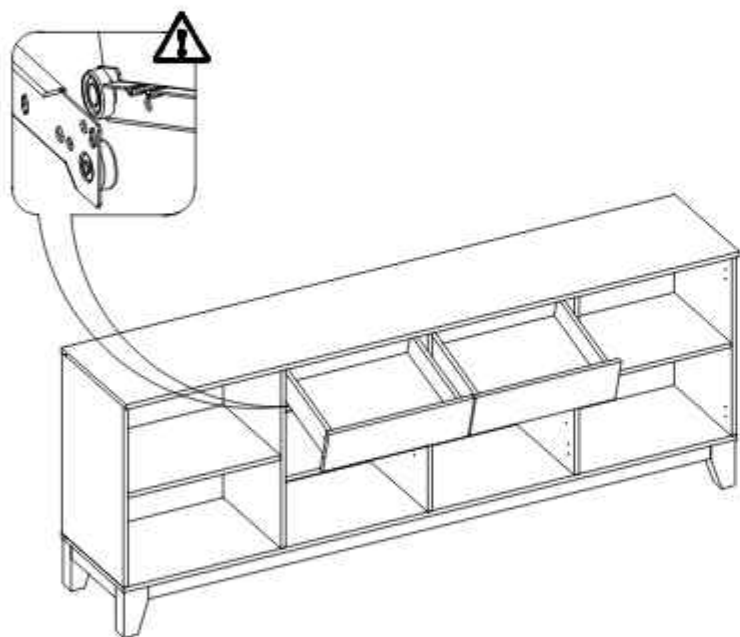


21

27

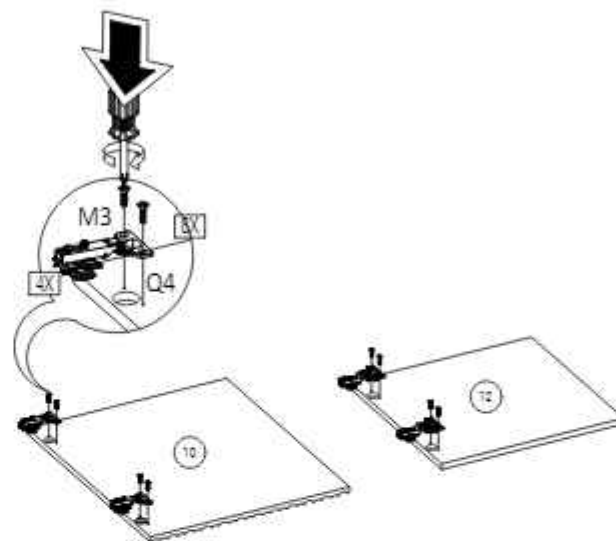



28

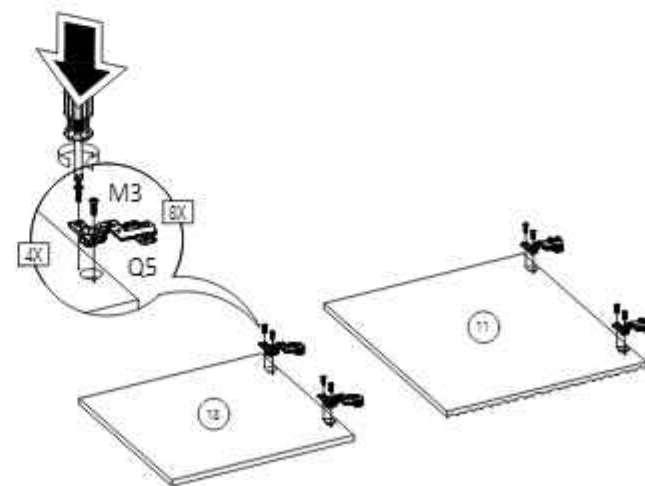


M3	Q5	Q4
		
16 X	4 X	4 X

Ø6 MM X 1/2"

22

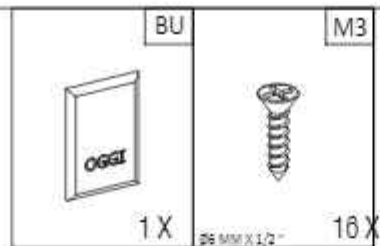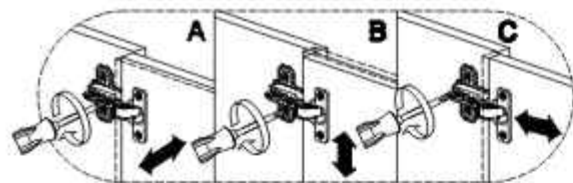

29

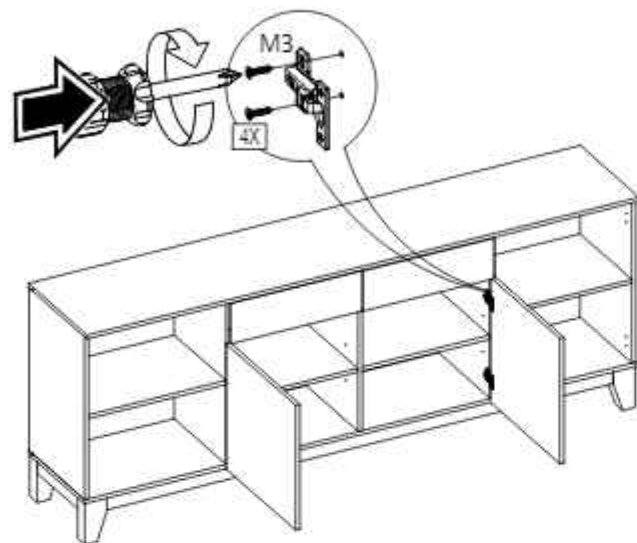

30

