

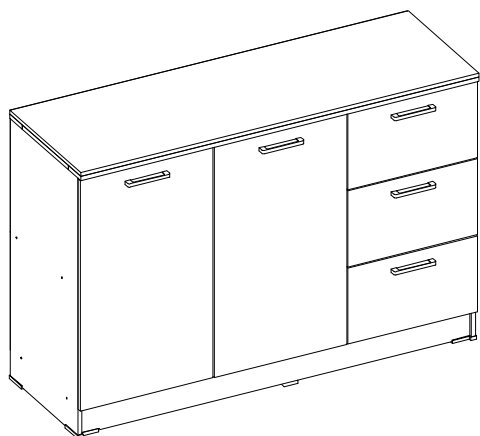
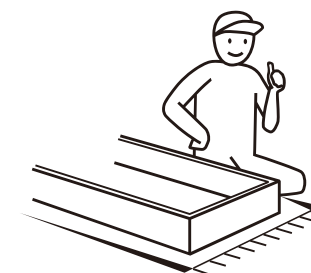
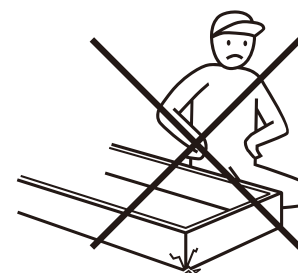
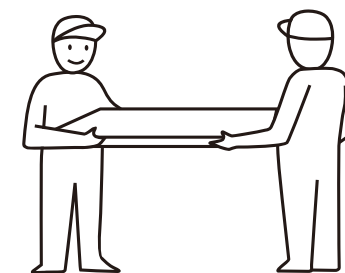
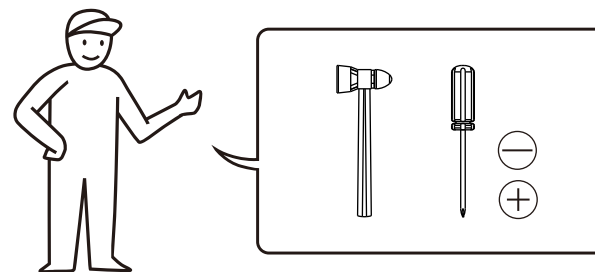
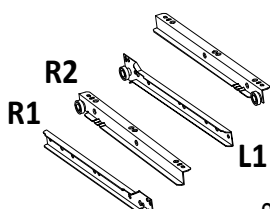









ASSEMBLING INSTRUCTION

REA KITCHEN BASE CABINET 3D




 M3 Ø 6 MM X 13 MM 40 X	 Z1 300 MM 3 SET		 E Ø12 MM X 10 MM 13 X	 B1 Ø6 MM X 30 MM 35 X	 D 13 X
 J1 Ø 10 MM X 44 MM 10 X	 BB6 12 MM 2 X	 BB 12 MM 2 SET	 M6 Ø 6 MM X 16 MM 14 X	 F1 19 MM 15 g	 W17 5 X
 L Ø 6 MM X 38 MM 12 X	 Q4 INSET 2 X	 Q5 HALF OVERLAY 2 X			

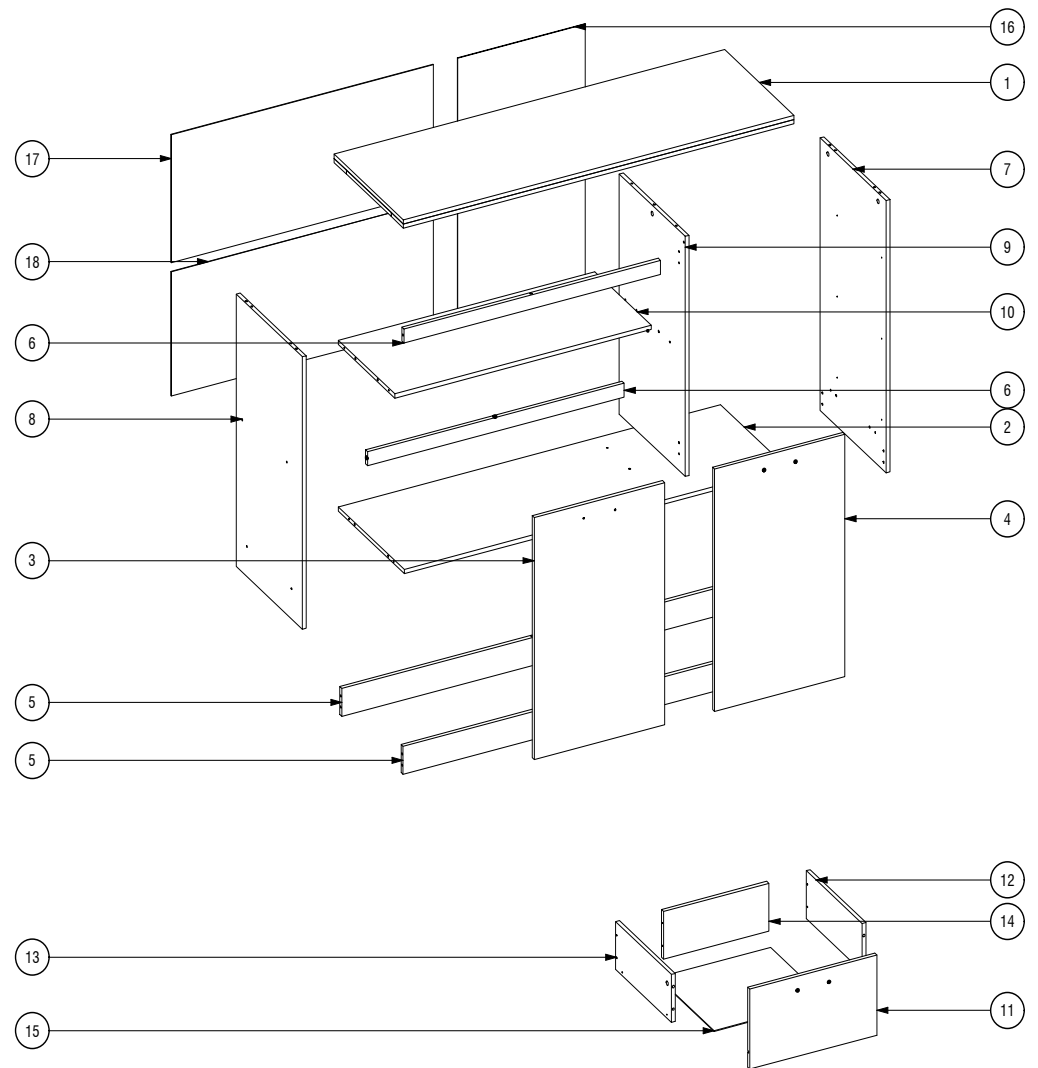


M3 Ø 6 MM X 13 MM 12 X	R2 R1 Z1 L2 L1 3 SET	E Ø12 MM X 10 MM 7 X	B1 Ø6 MM X 30 MM 29 X	D 7 X
--	--	--	---	--


1

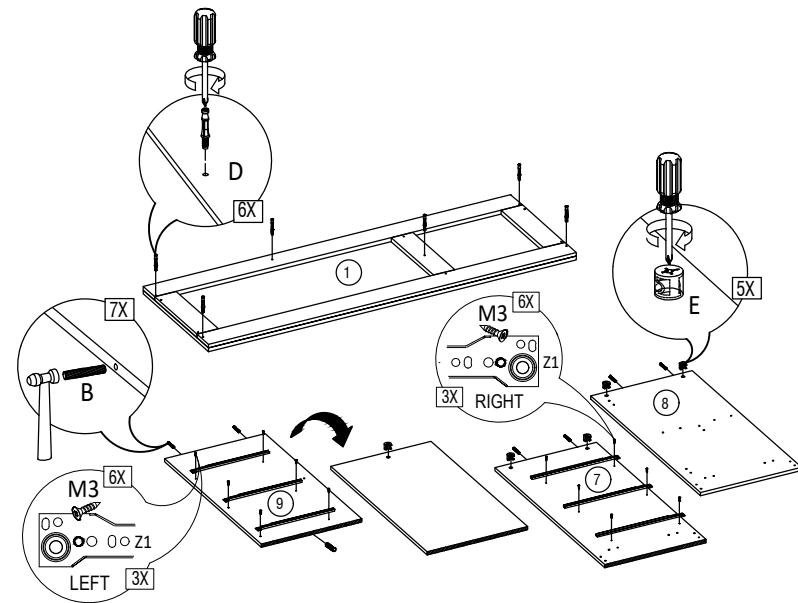


2

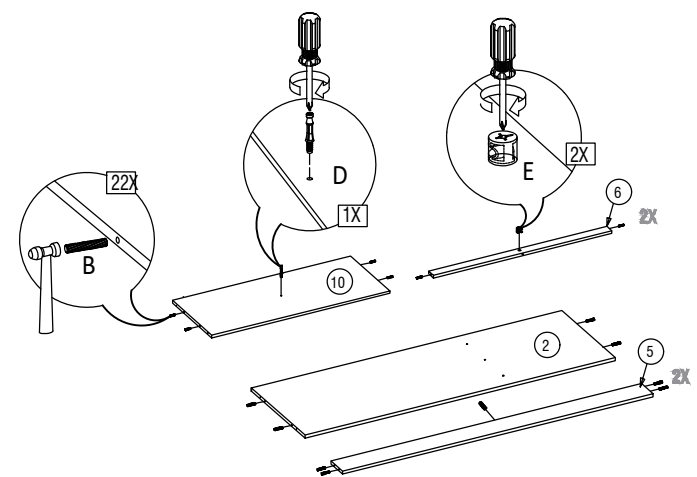

3

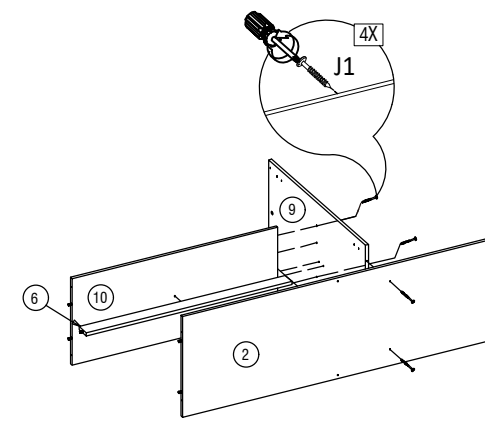


4

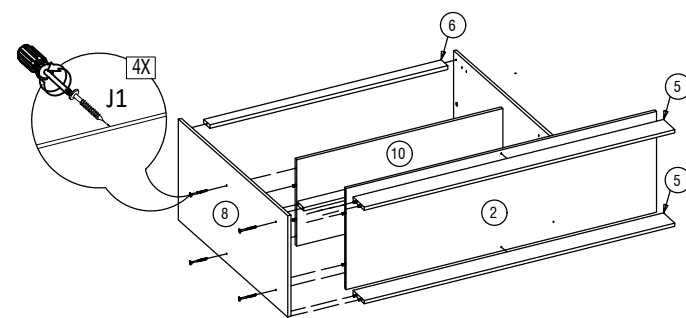


	J1
Ø 10 MM X 44 MM	
8 X	

5

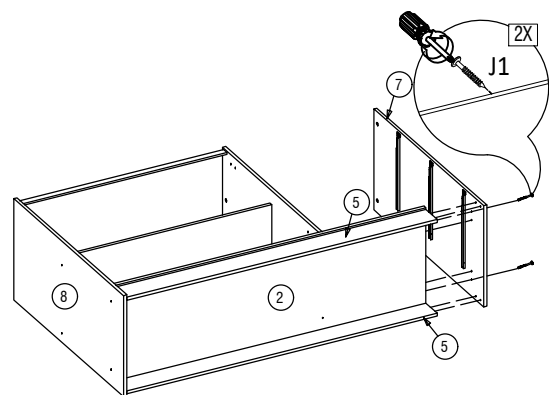


6

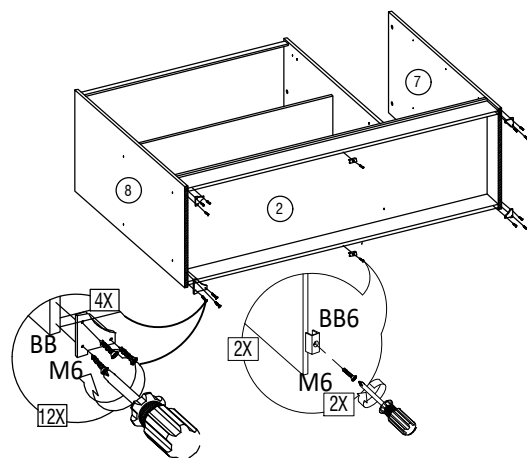


05




7

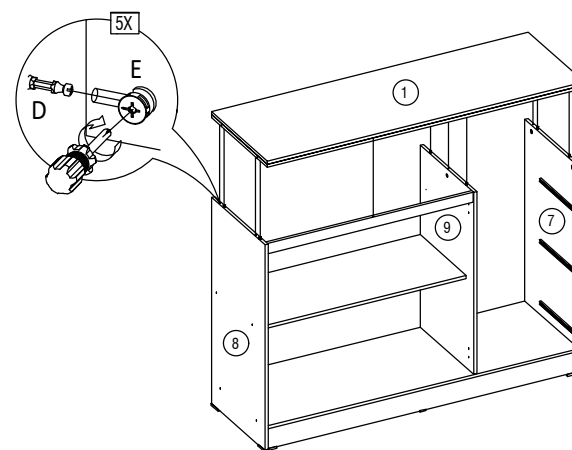






8

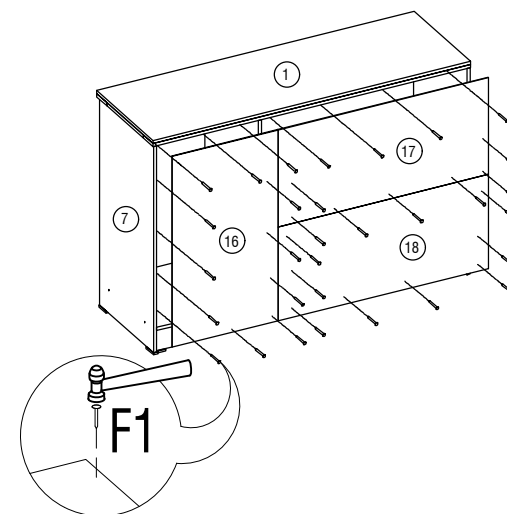


06

BB6  12 MM 2 X	BB  12 MM 2 SET	M6  Ø 6 MM X 16 MM 14 X	J1  Ø 10 MM X 44 MM 2 X
--	--	---	--


F1  19 MM 10 g
--

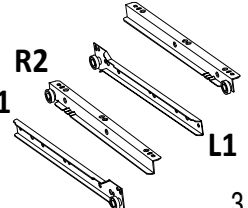 B1 6 X	 W17 3 X	 L 12 X	 F1 5 g	 D 6 X	 E 6 X	 M3 28 X	 R1 R2 L1 L2 3 SET	 Q4 2 X	 Q5 2 X	 W17 2 X
--	--	---	--	--	--	---	--	--	--	--

9

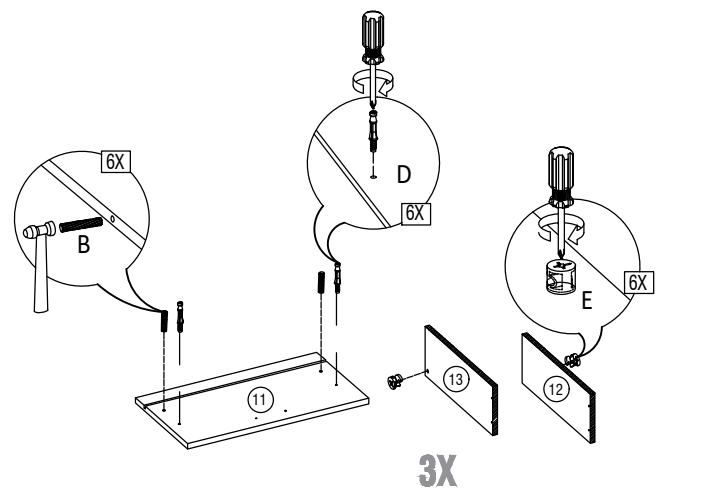


10

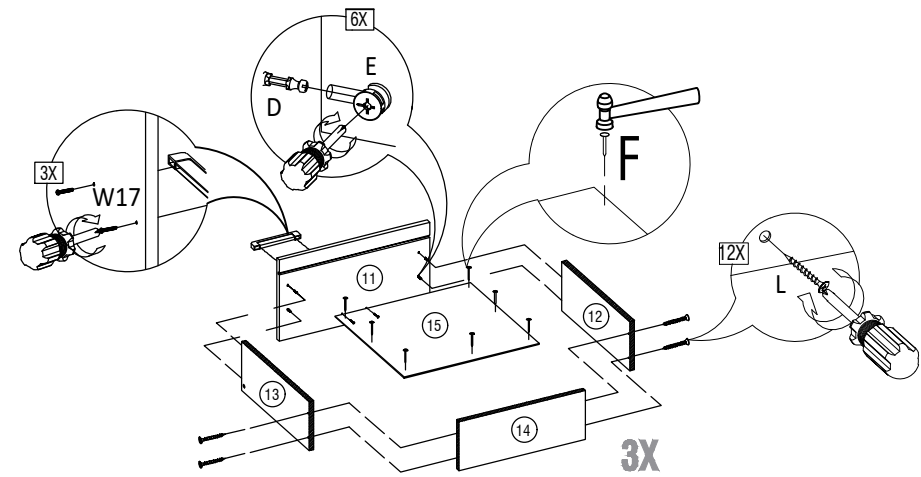


07

11

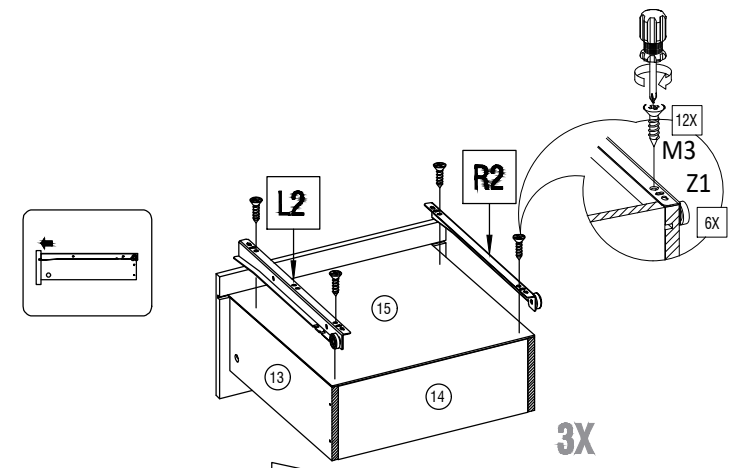

12

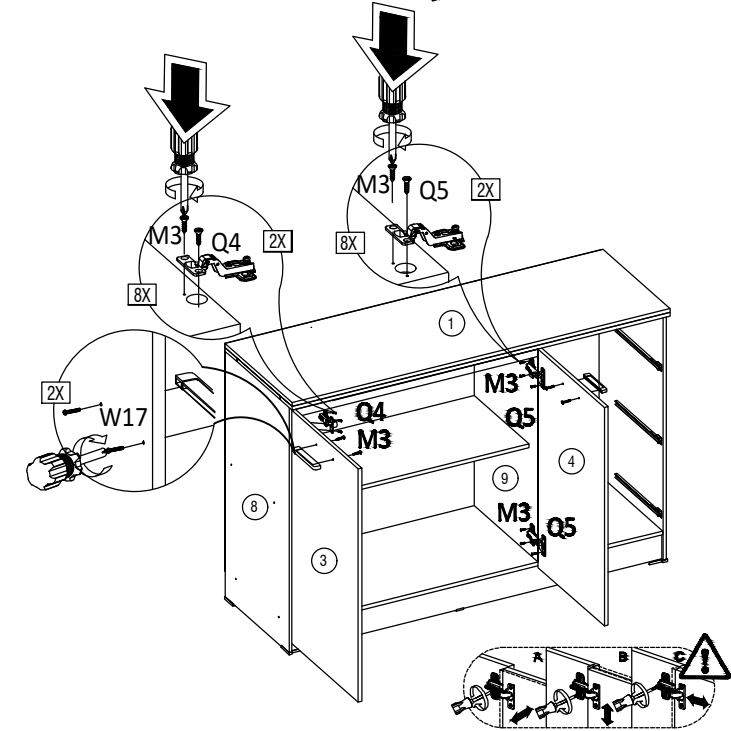

08

10

