

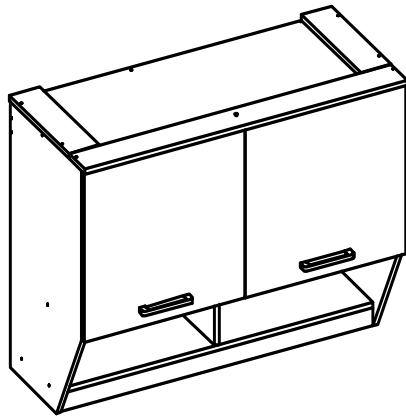
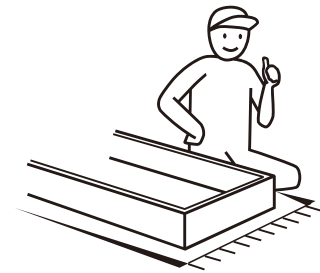
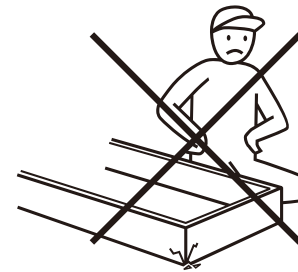
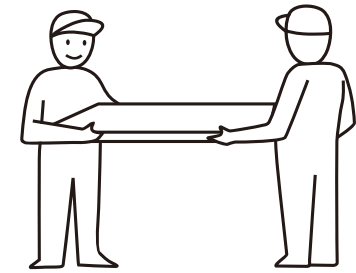
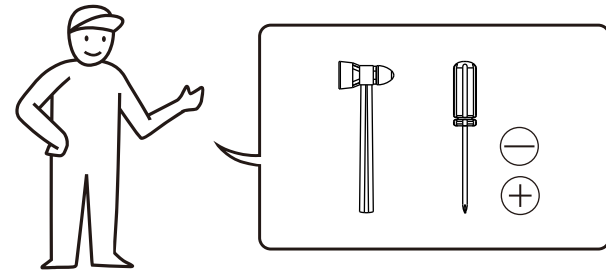





ASSEMBLING INSTRUCTION


REA KITCHEN WALL CABINET 2D




 Ø 6 MM X 38 MM 9 X	 Ø 10 MM X 44 MM 13 X	 Ø 12 MM X 10 MM 2 X	 2 X	 Ø 6 MM X 30 MM 17 X	 Ø 6 MM X 16 MM 1 X
 3 X	 2 X	 19 MM 2 g	 INSET 4 X	 Ø 6 MM X 13 MM 16 X	 Ø 4 MM X 16 MM 4 X
 2 X	 Ø 12 MM X 48 MM 3 X	 4 X			

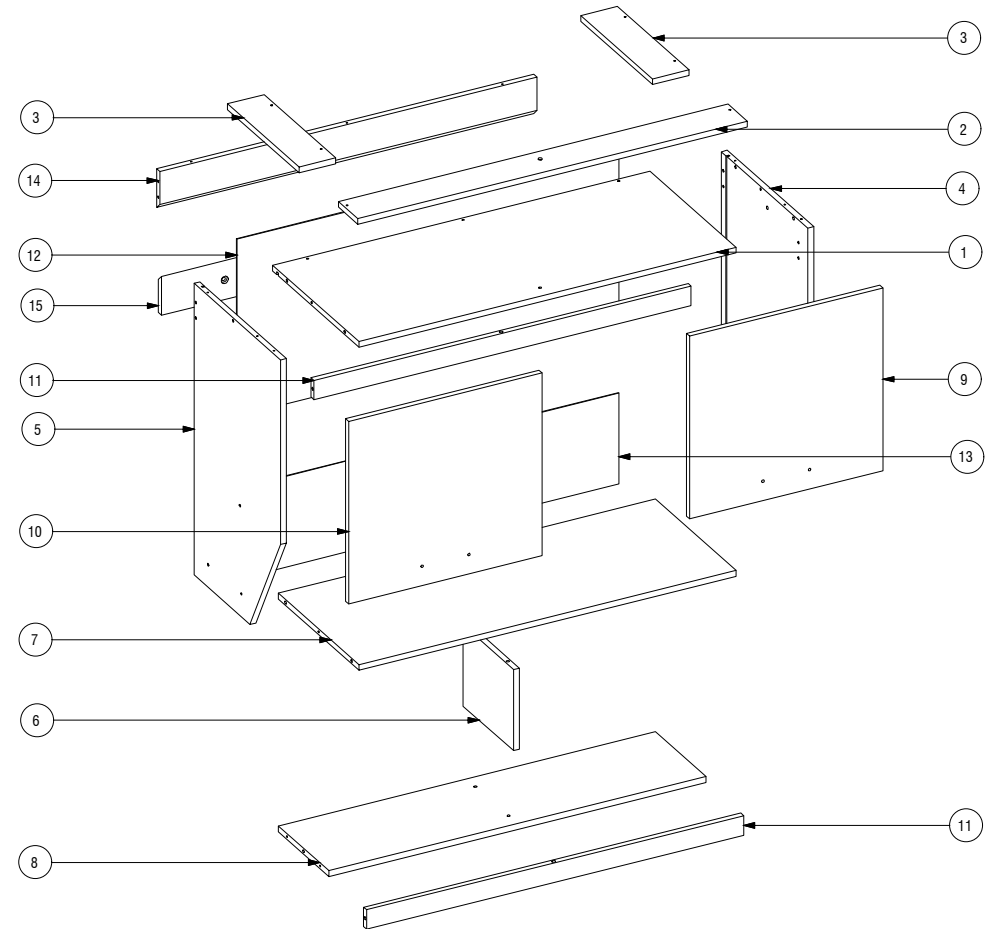


1

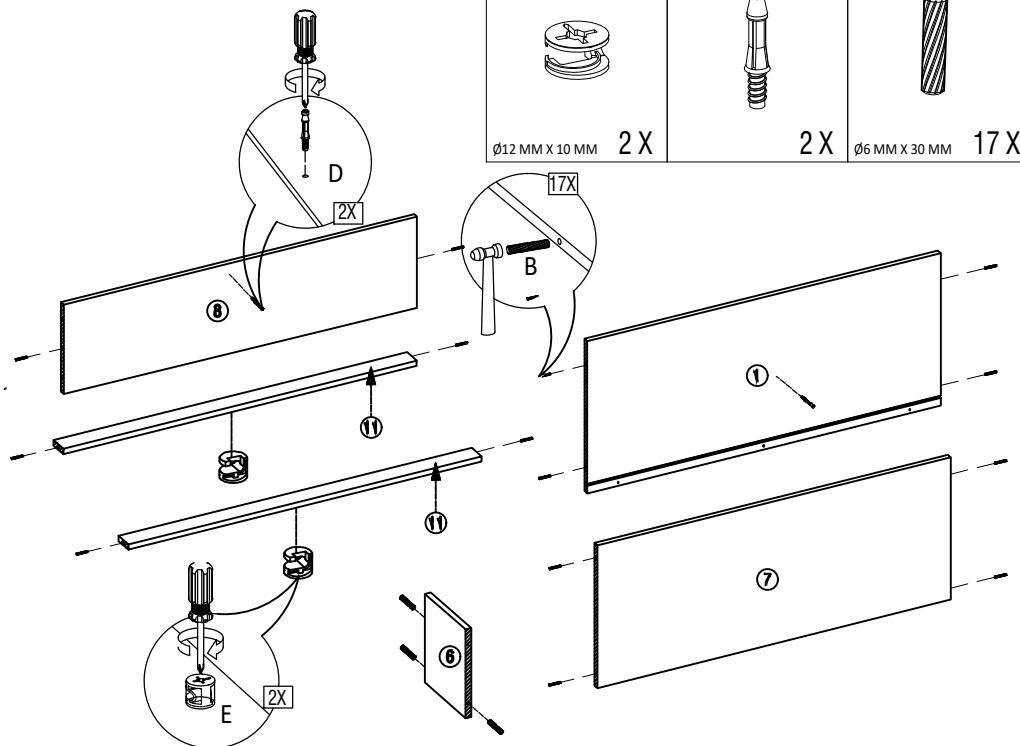


2

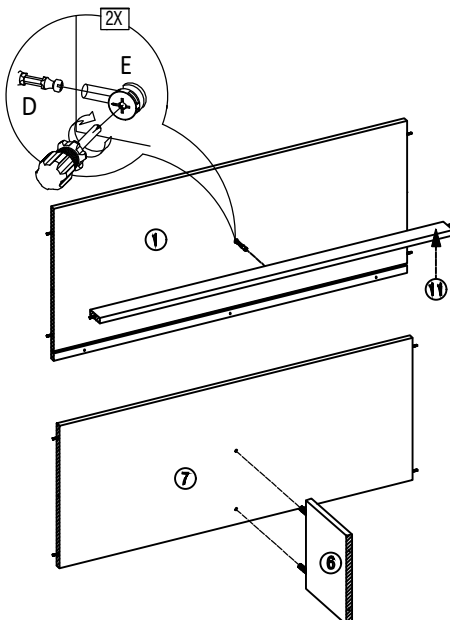

3

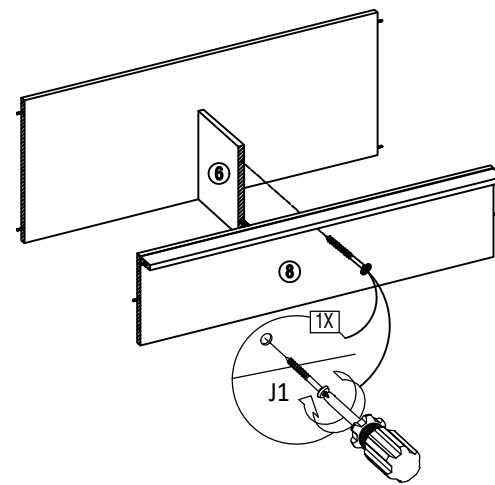

4

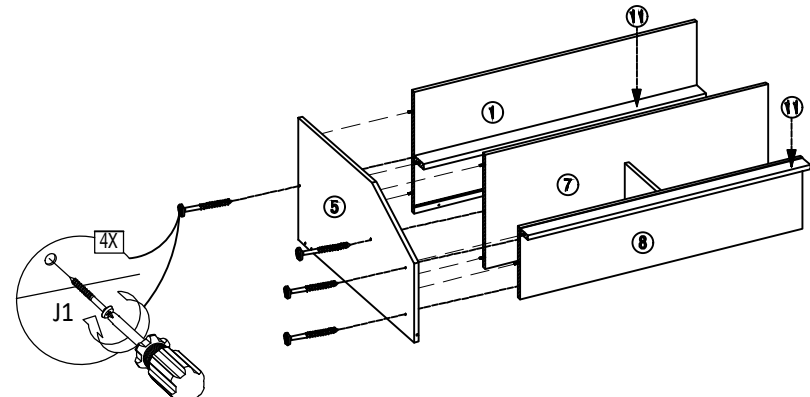

E

D

B1




Ø12 MM X 10 MM 2 X

2 X


Ø6 MM X 30 MM 17 X

J1




Ø 10 MM X 44 MM 5 X

5

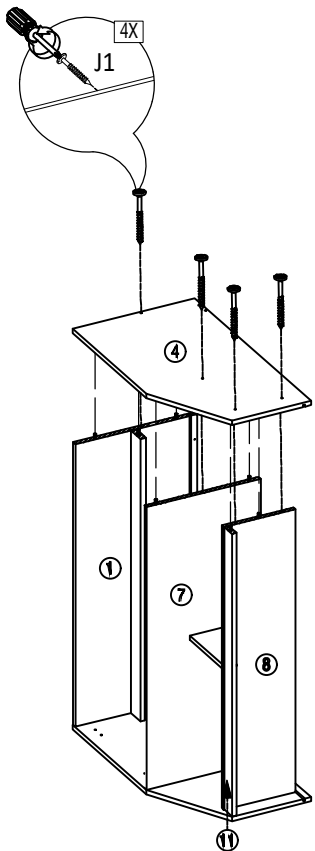


6

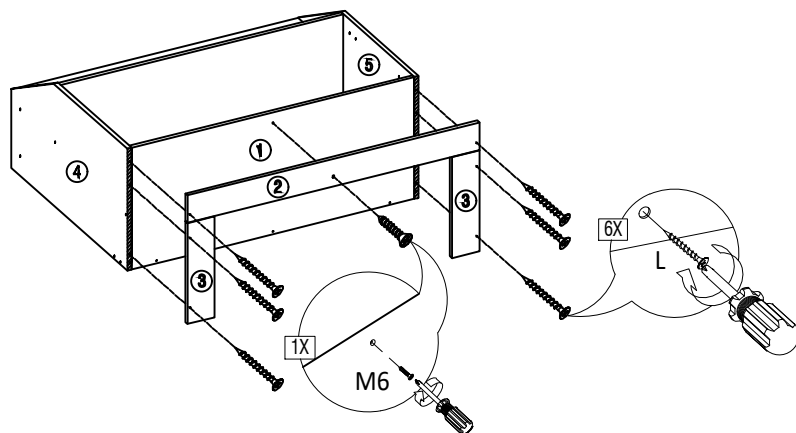


L	M6	J1
		
Ø 6 MM X 38 MM 6 X	Ø 6 MM X 16 MM 1 X	Ø 10 MM X 44 MM 4 X

05

7

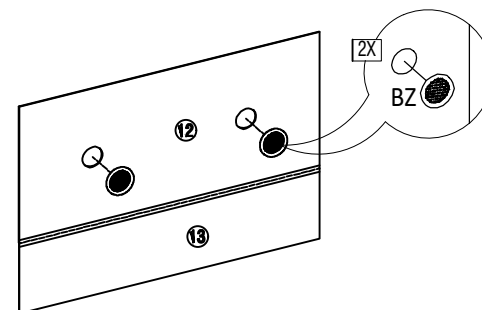

8

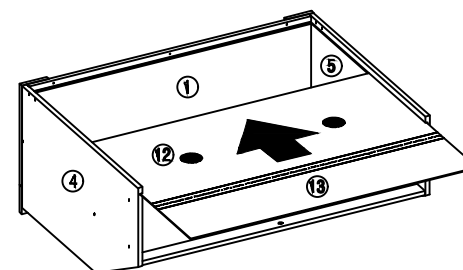

BZ

2 X

06

