
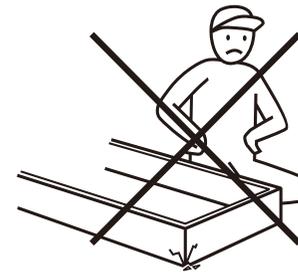
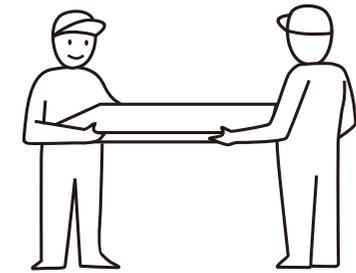
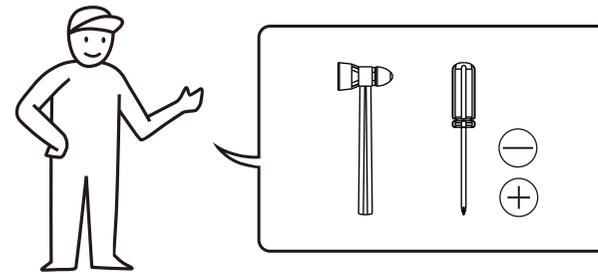





ASSEMBLING INSTRUCTION

DENVER SHOWCASE 1D

BEIGE - AMERICAN WALNUT





M1  Ø 4 MM X 16 MM 10 X	G  10 X	J2  Ø 12 X 44 MM 18 X	AE1  12 X	D  22 X	B  Ø 8 X 30 MM 10 X
V  1 X	AY1  Ø 9 MM X 21 MM 2 X	AX  1 X	BT17  AMERICAN WALNUT 10 X	E1  Ø 15 MM X 12 MM 22 X	M3  Ø 6 MM X 13 MM 22 X
S  3 X	AN1  1 X	BR1  1 X	BS1  1 X	AA1  3 M'	BP1  1 X
BU  1 X		M  Ø 4 MM X 13 MM 2 X	A5  Ø 4 MM X 10 MM 1 X	Q3  FULL OVERLAY 2 X	


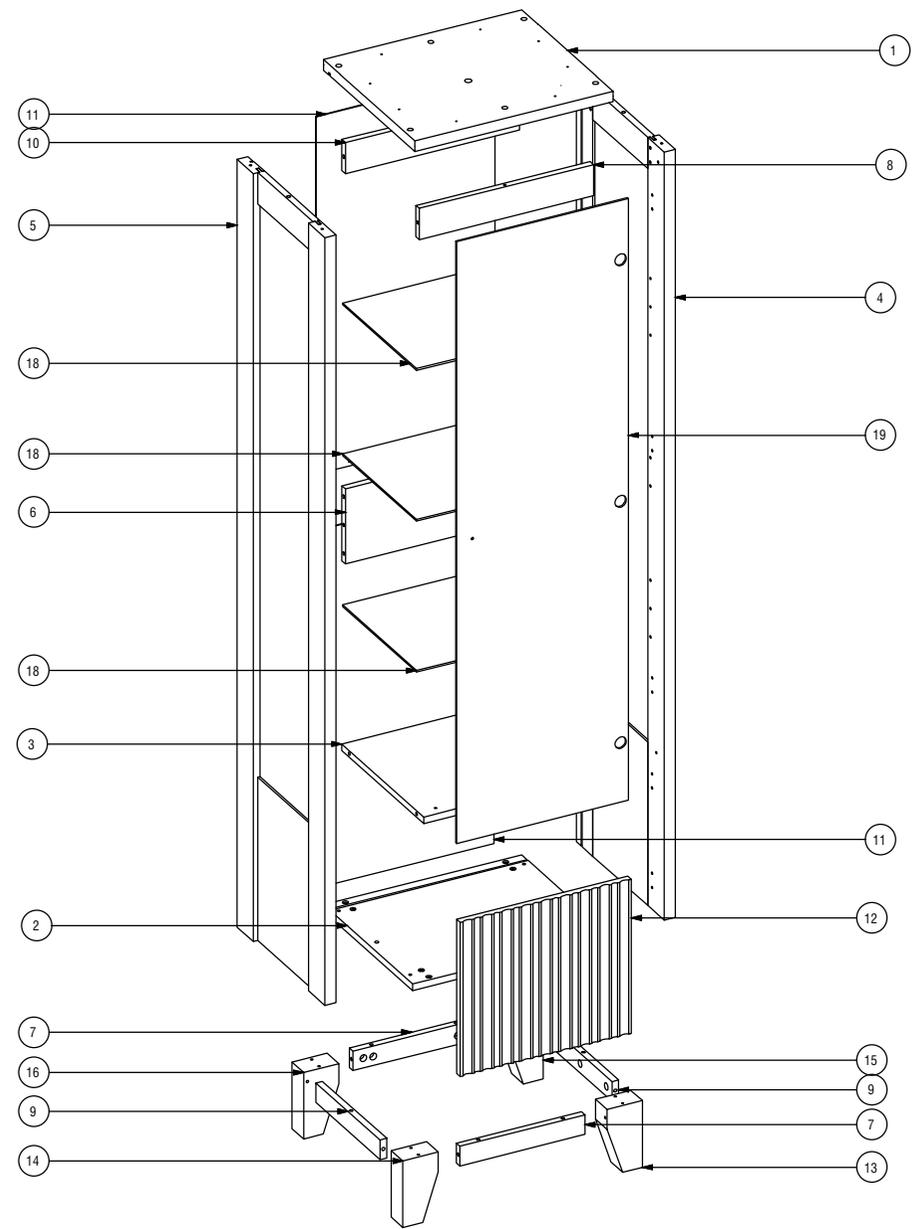


 x2 ±120 M 


<p>D</p>  <p>8 X</p>	<p>B</p>  <p>Ø8 X 30 MM</p>	<p>AY1</p>  <p>Ø9 MM X 21 MM</p>	<p>AX</p>  <p>1 X</p>	<p>BT17</p>  <p>AMERICAN WALNUT</p>	<p>E1</p>  <p>Ø15 MM X 12 MM</p>	<p>M3</p>  <p>Ø6 MM X 13 MM</p>	<p>B</p>  <p>Ø8 X 30 MM</p>
---	--	---	--	--	--	---	--

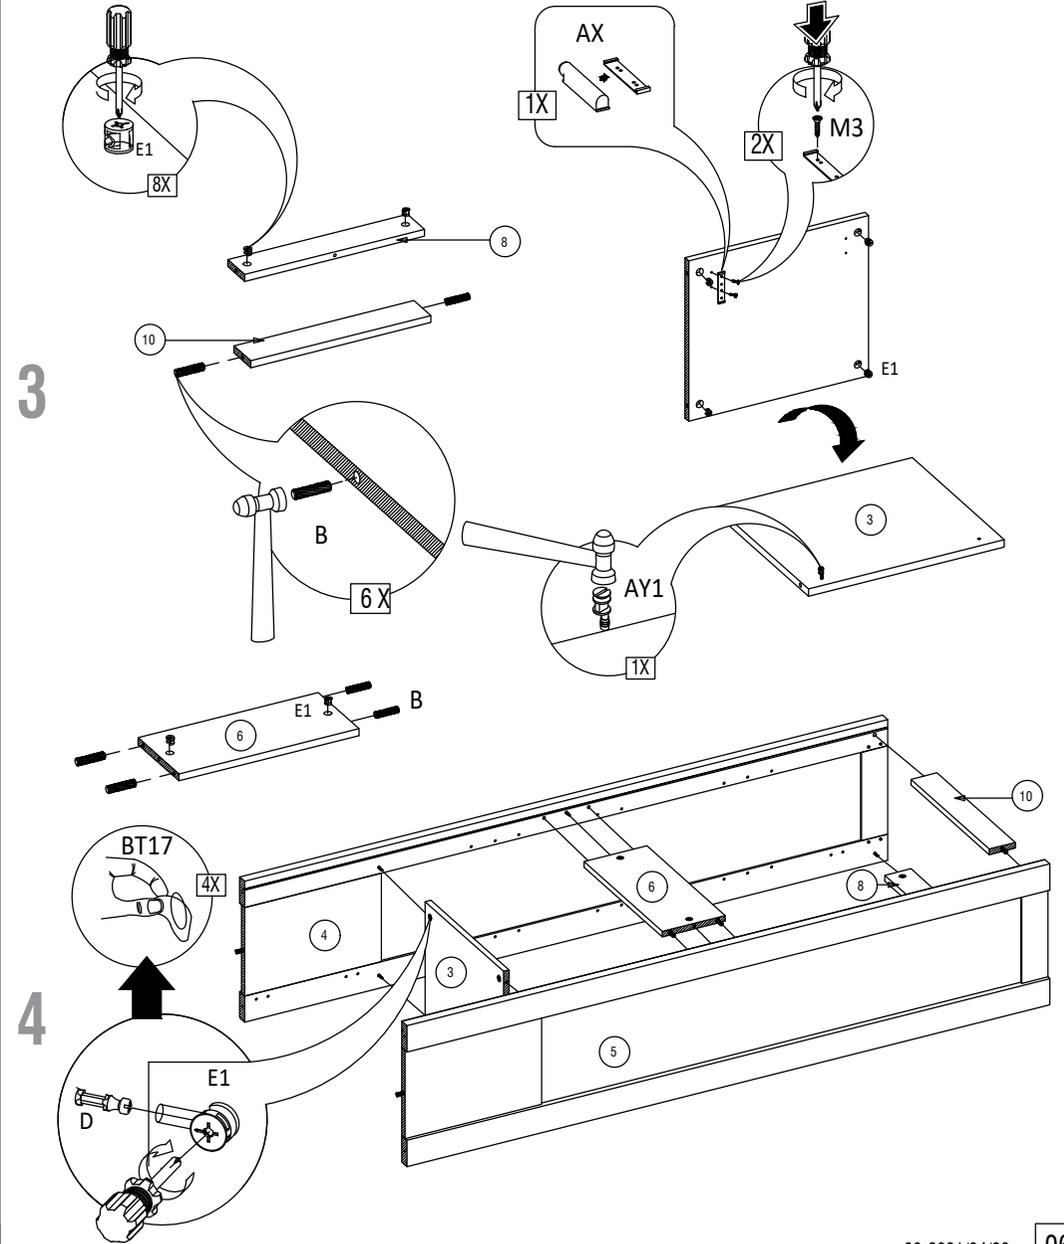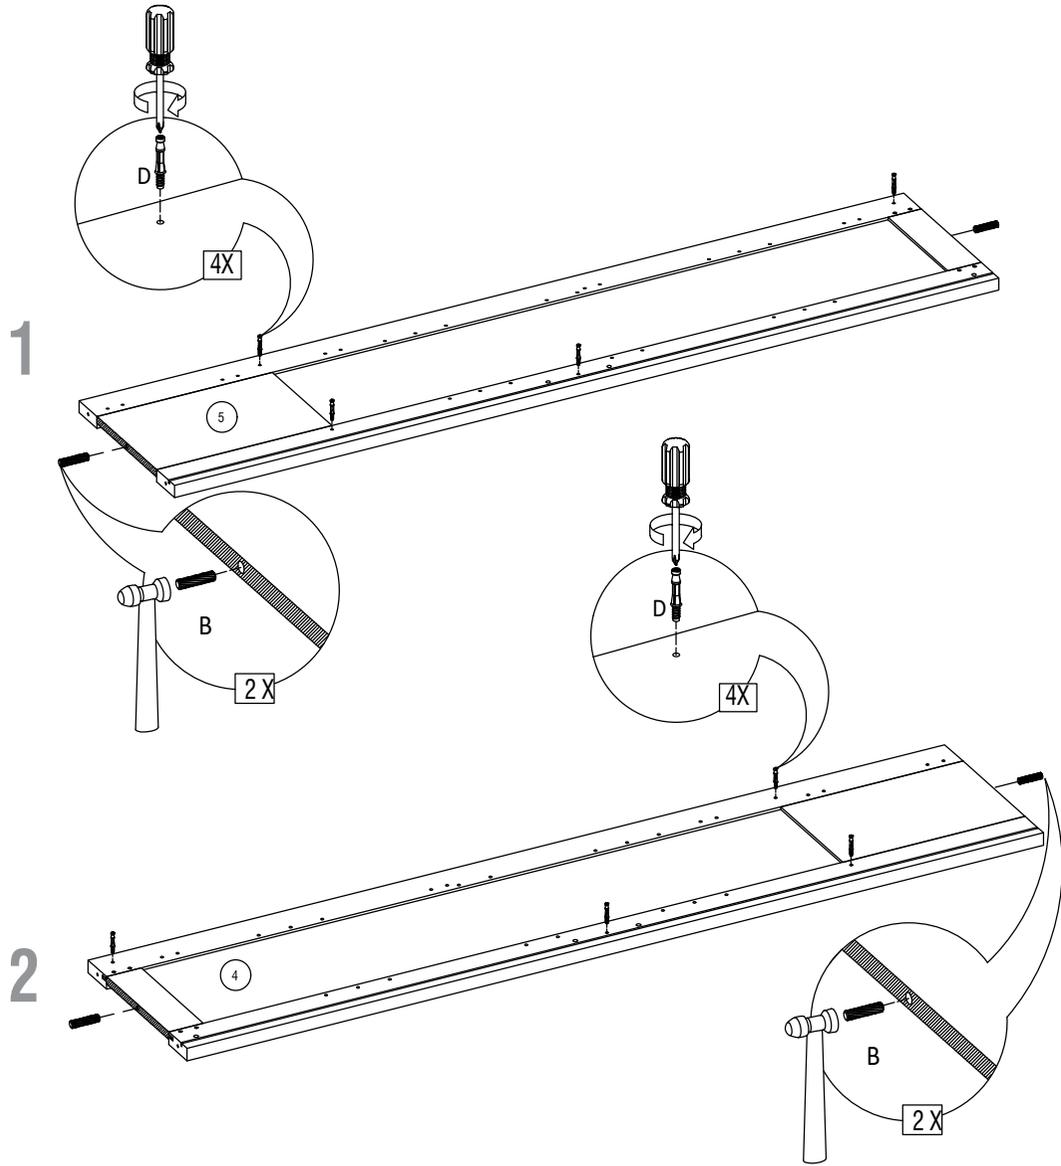




5

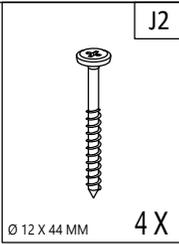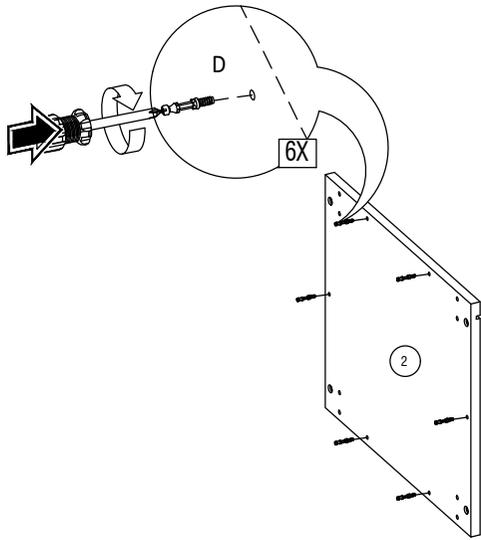


6

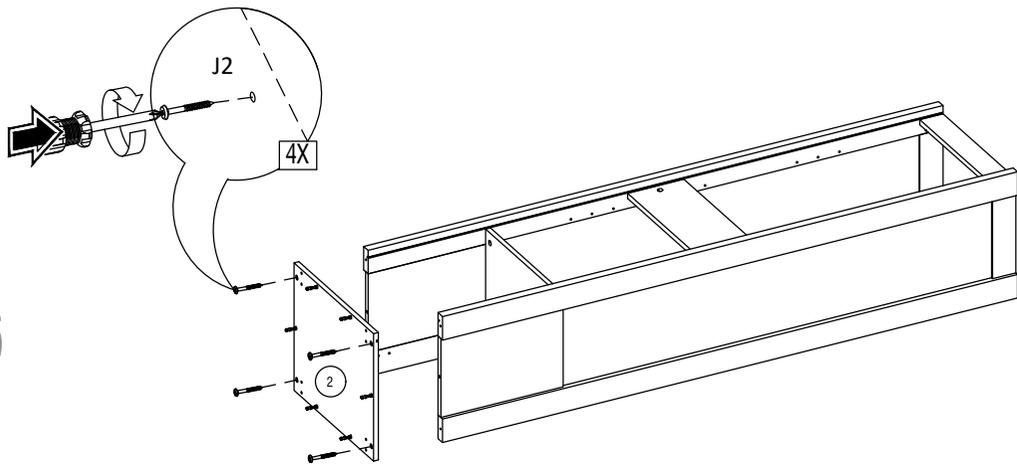



7

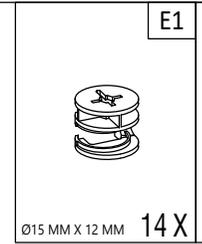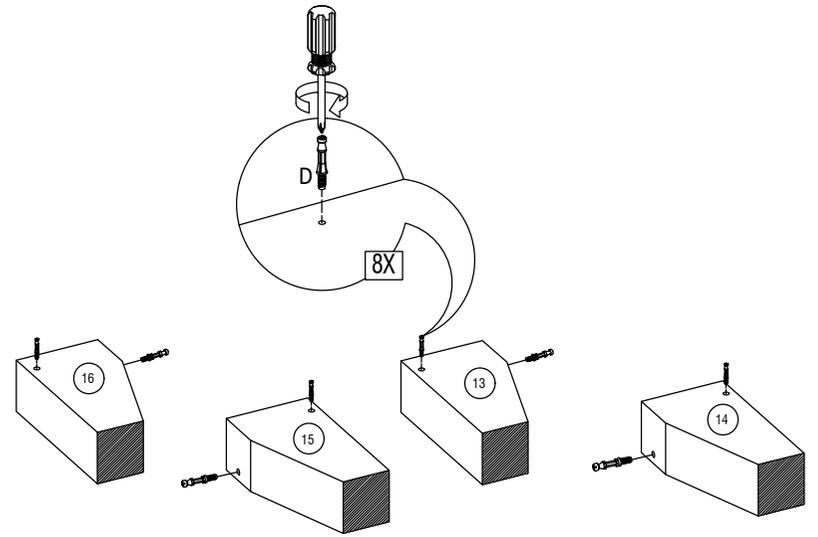

8

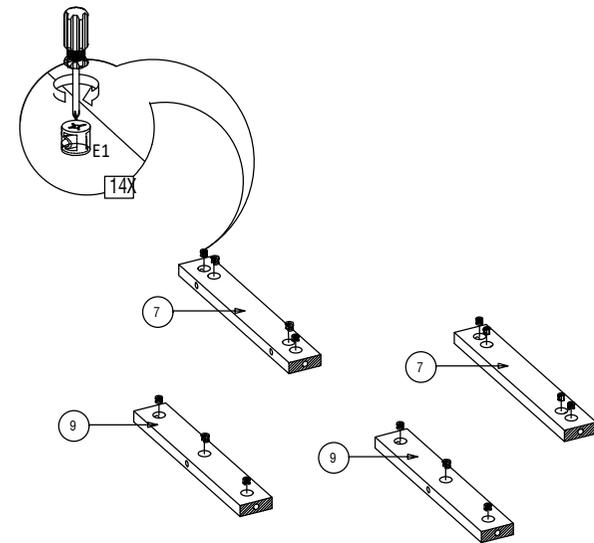



9

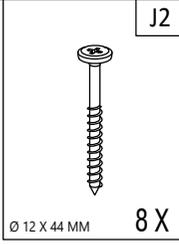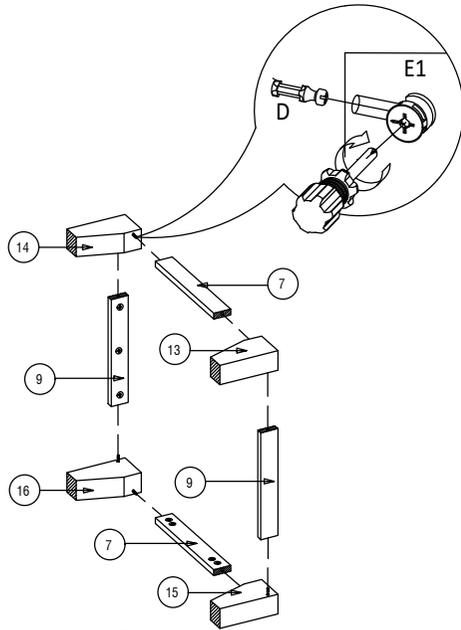

J2

8 X

10


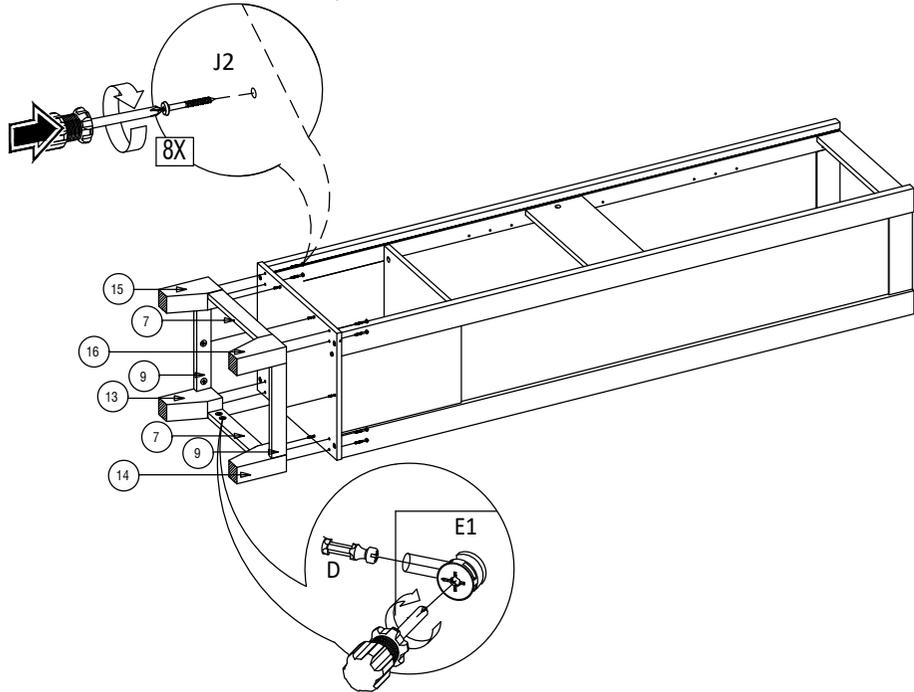


J2

8 X

E1


11

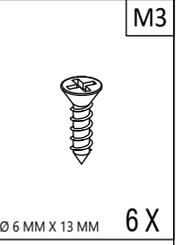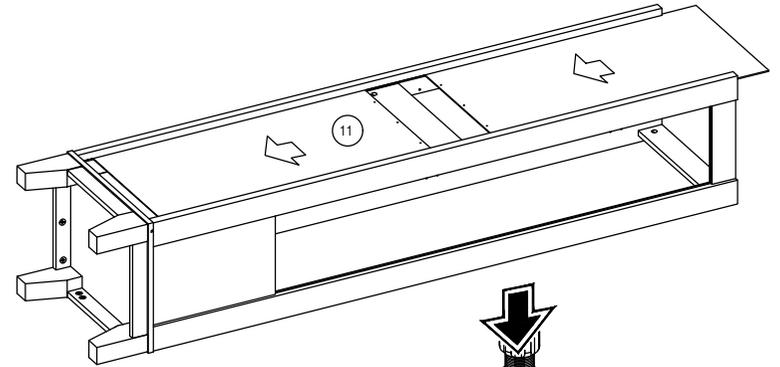

M3

6 X




12

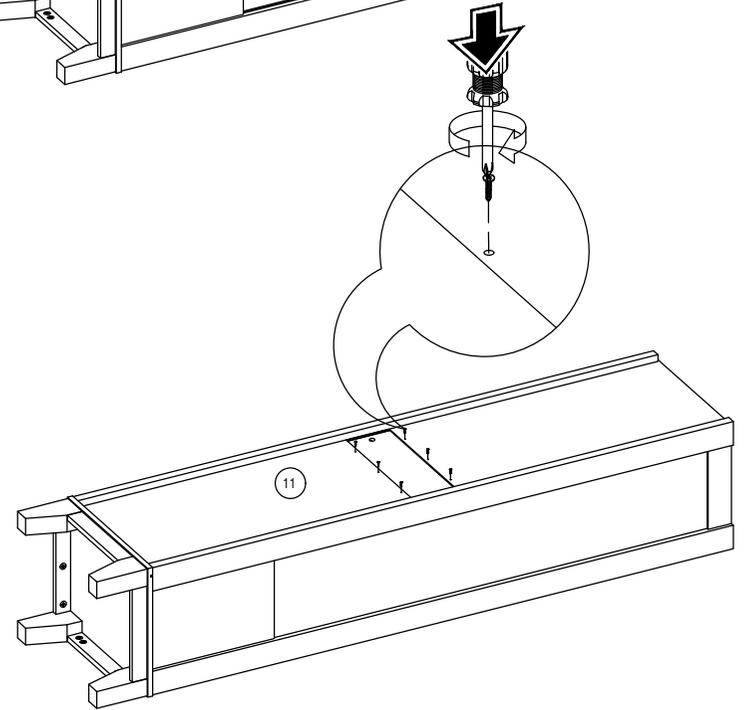


J2 Ø 12 X 44 MM 6 X	BR1 1 X	BS1 1 X	AA1 3 M'	BP1 1 X	M3 Ø 6 MM X 13 MM 6 X	AE1 12 X	BU 1 X	BT17 AMERICAN WALNUT 6 X	M1 Ø 4 MM X 16 MM 10 X	G 10 X
---------------------------	------------	------------	-------------	------------	-----------------------------	-------------	-----------	--------------------------------	------------------------------	-----------

M Ø 4 MM X 13 MM 2 X


13

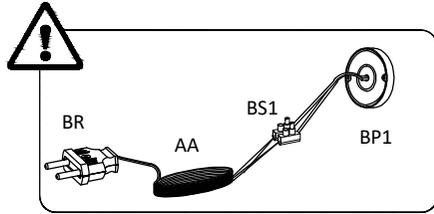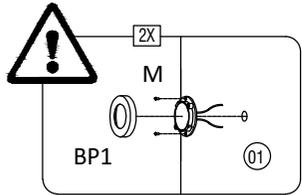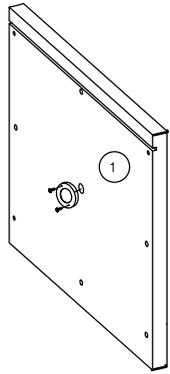


14

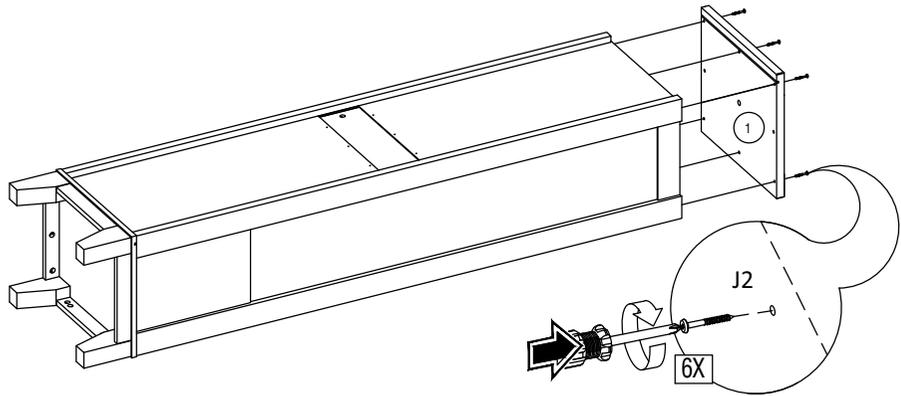



15

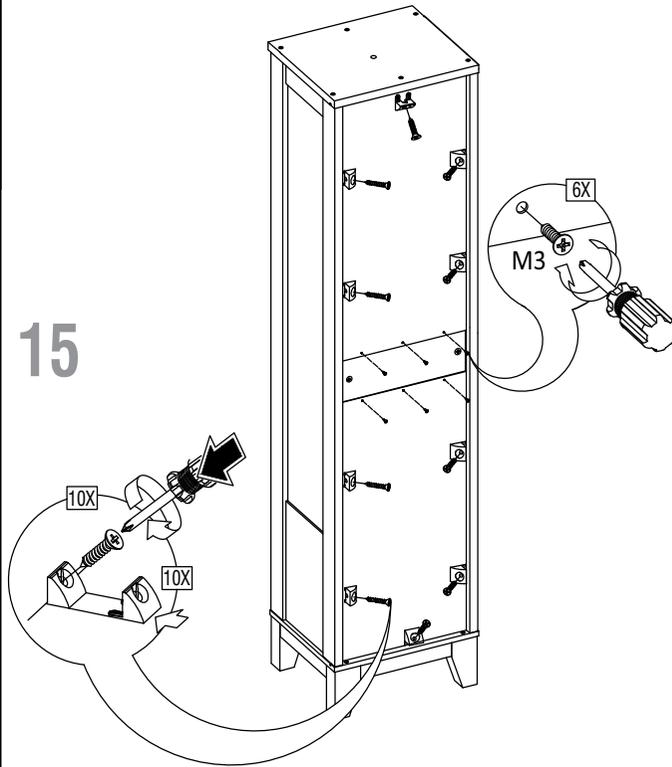

16

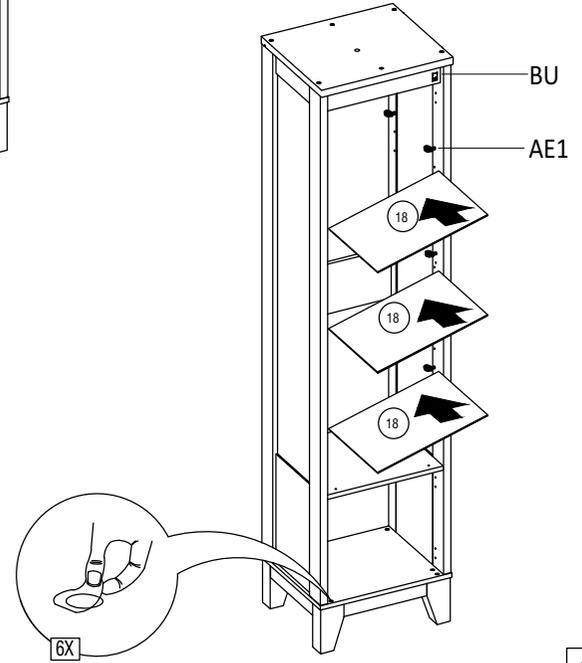

S	AN1	V	A5	M3	Q3
					
3 X	1 X	1 X	Ø4 MM X 10 MM 1 X	Ø 6 MM X 13 MM 10 X	FULL OVERLAY 2 X

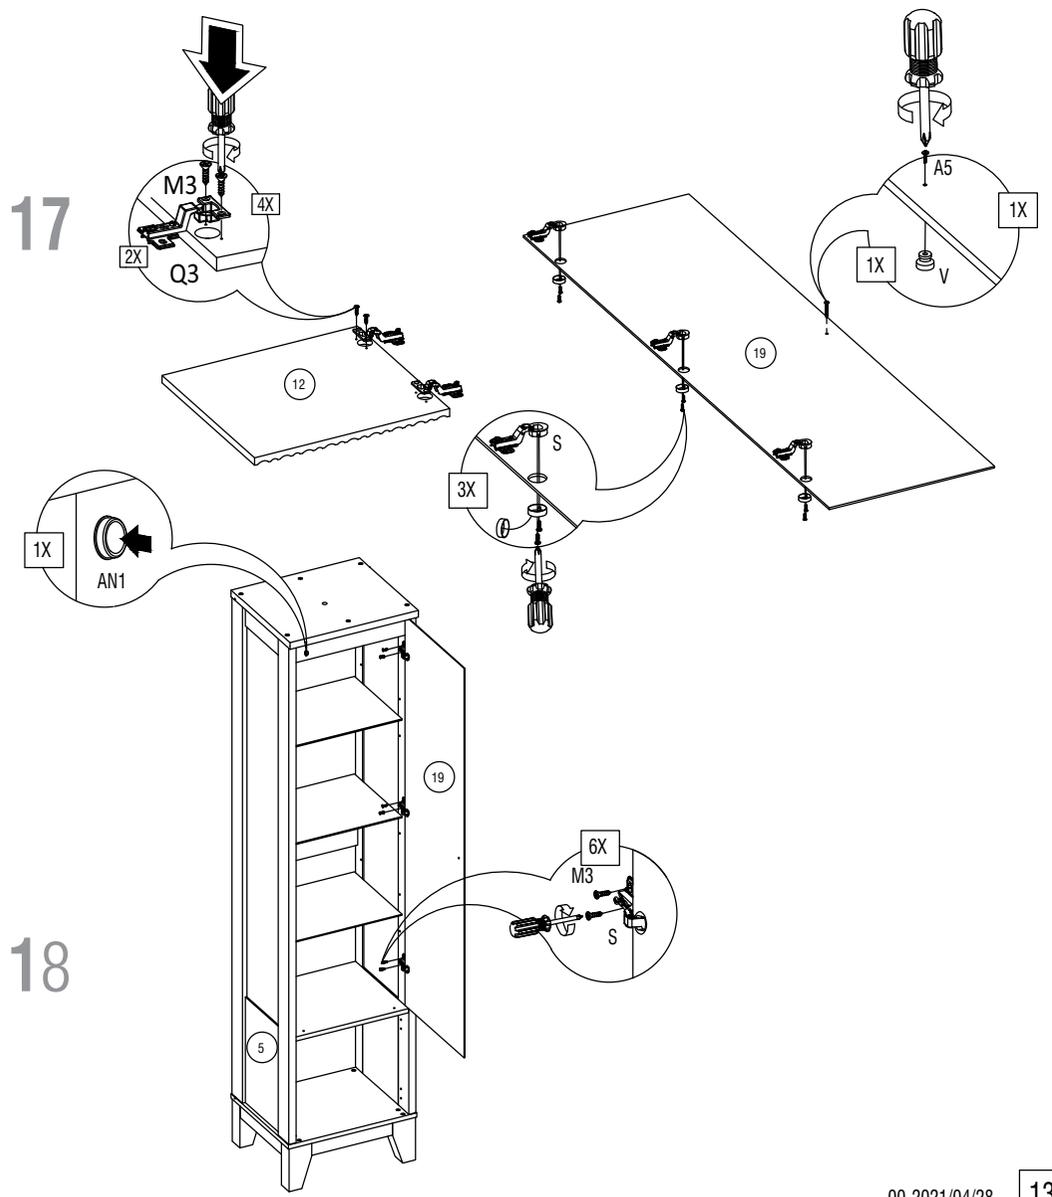


17

18

19

20

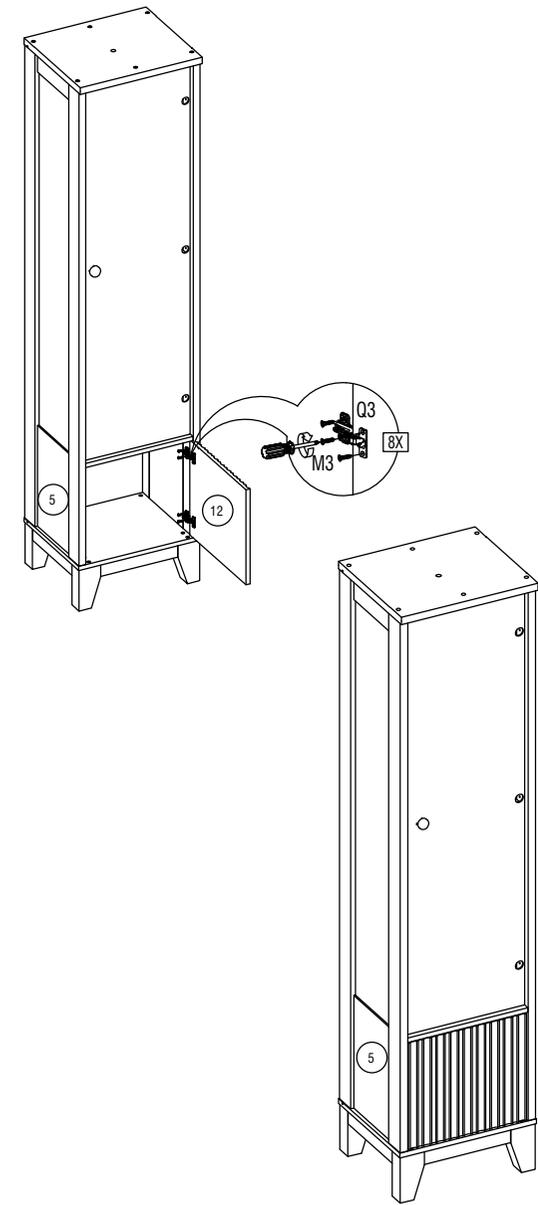

M3

Ø 6 MM X 13 MM 4 X