
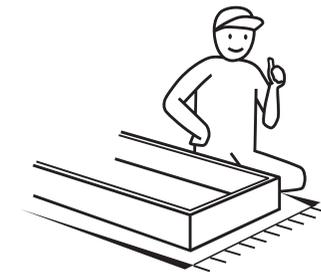
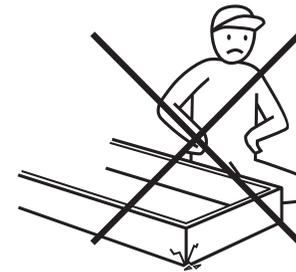
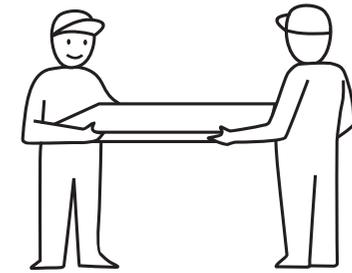


ASSEMBLING INSTRUCTION

NARA WORKING DESK 120M

AMERICAN WALNUT-GRAPHITE

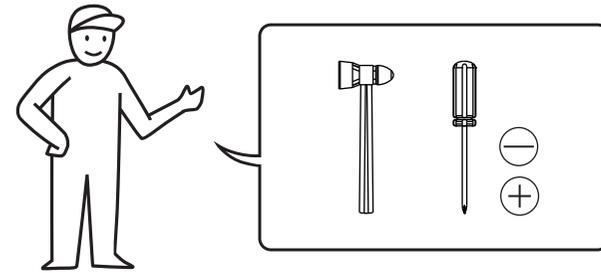

D



3 X

E1



Ø15 MM X 12 MM 3 X

J



Ø 10 X 44 MM 4 X

WHY



Ø6 MM X 60 MM 4 X

BU




1 X

BT12



GRAPHITE 3 X

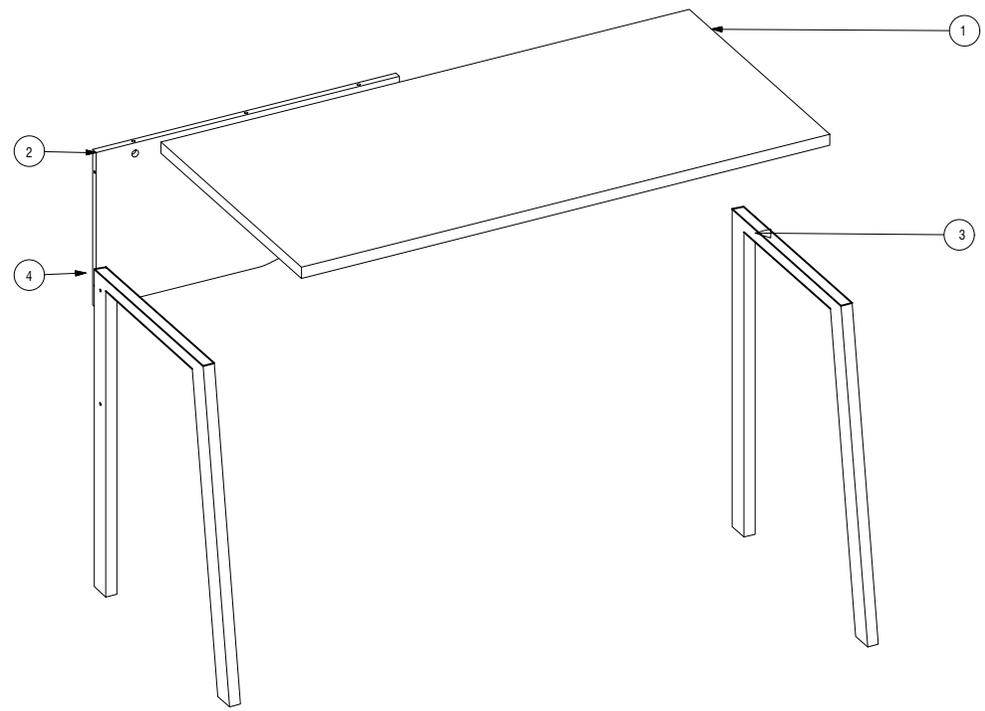

 x2 ±45 M 

01

02

D



3 X

E1



Ø15 MM X 12 MM 3 X

J



Ø 10 X 44 MM 4 X

WHY



Ø6 MM X 60 MM 4 X

BU




1 X

BT12



GRAPHITE 3 X

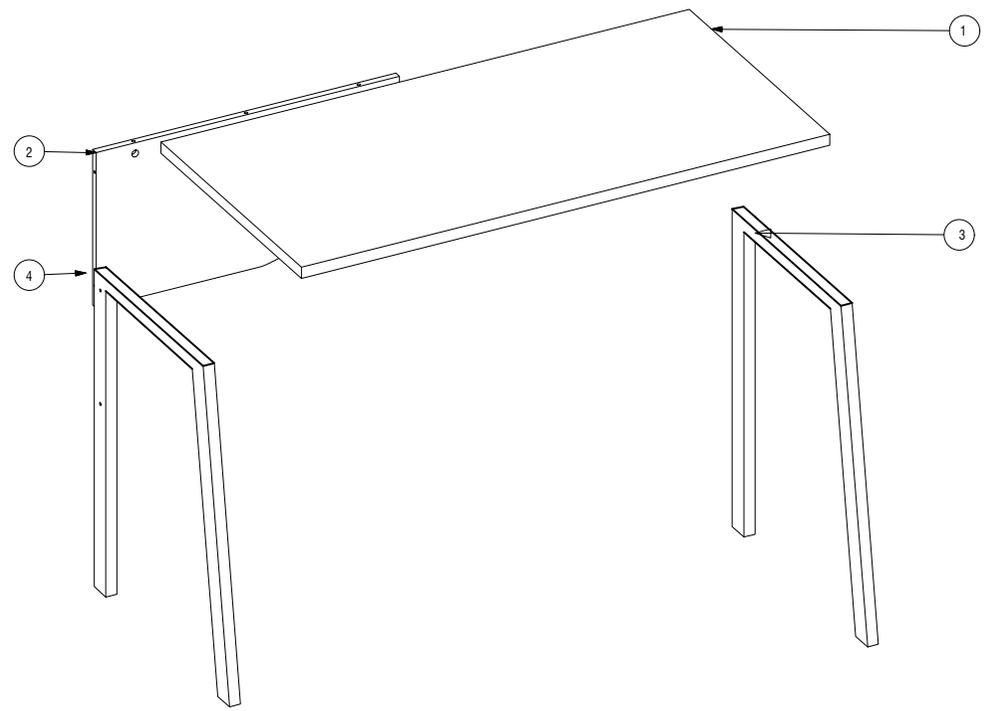


 x2 ±45 M 

01


02

1

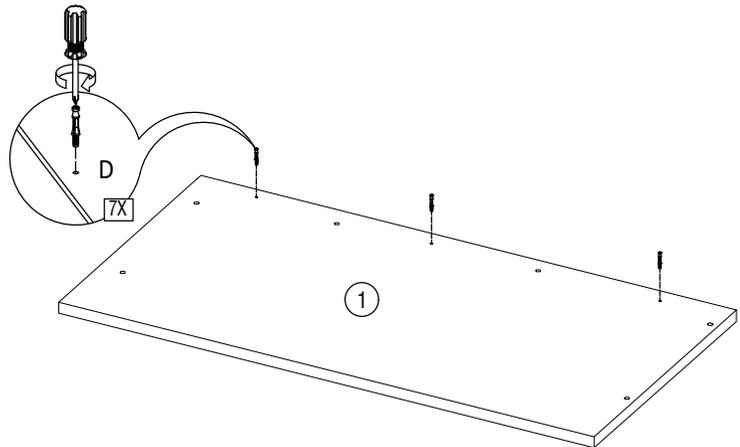


D	E1
	
3 X	3 X
<small>Ø15 MM X 12 MM</small>	

2

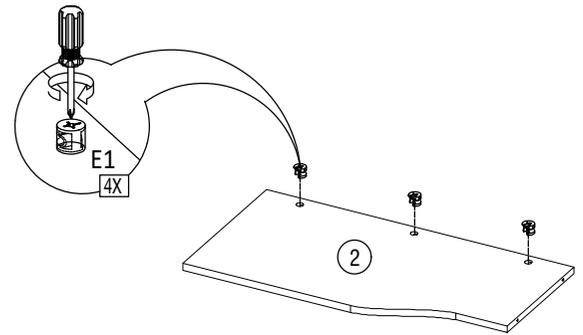


03

3

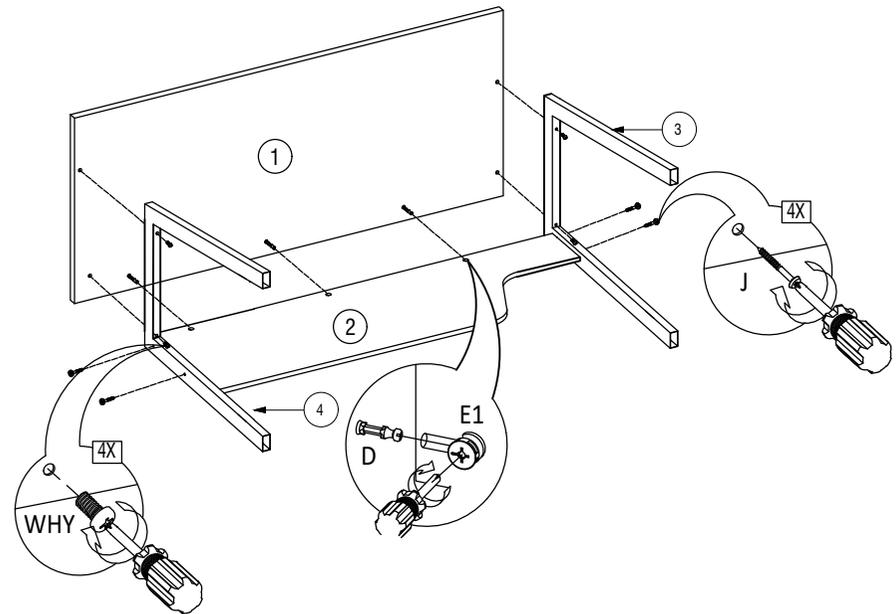

WHY	J
	
4 X	2 X
<small>Ø6 MM X 60 MM</small>	
<small>Ø10 X 44 MM</small>	

4

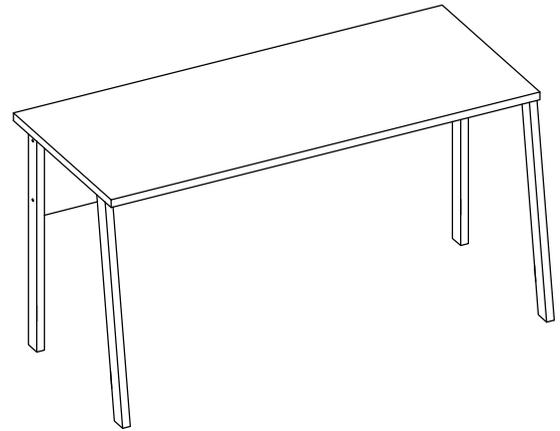

04