

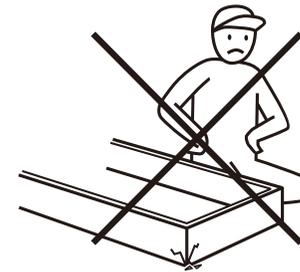
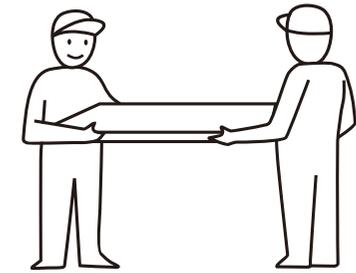
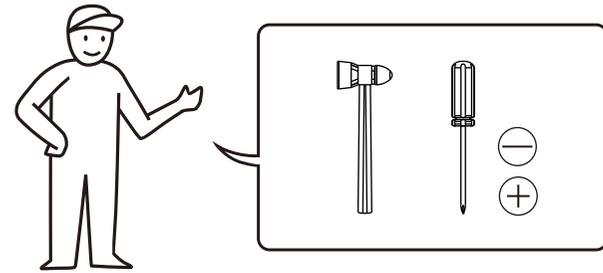





ASSEMBLING INSTRUCTION

BIANCA BABY LOCKER 80




 D 6 X Ø12 MM X 10 MM	 E 6 X Ø6 MM X 30 MM	 B1 28 X Ø6 MM X 10 MM	 J1 14 X Ø 10 MM X 44 MM	 M3 26 X Ø 6 MM X 13 MM	 M6 12 X Ø 6 MM X 16 MM
 Q4 4 X INSET	 W21 2 X Ø16 MM	 U 2 X SAYAP BLACK 12MM	 CA3 1 X	 AG 2 X 12 MM	 BB 2 SET
 F1 19 MM 12 g					

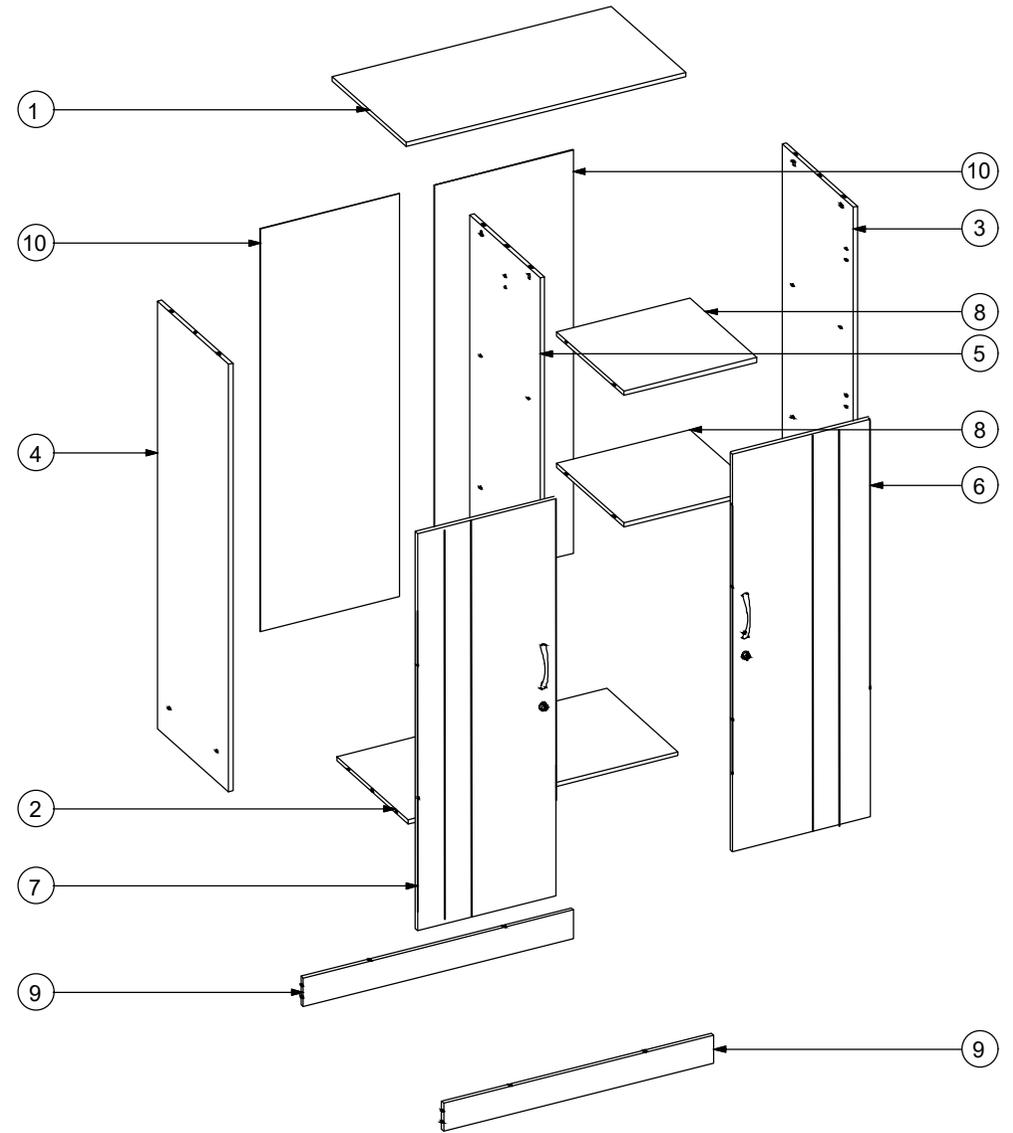


 x2 ±45 M 


1

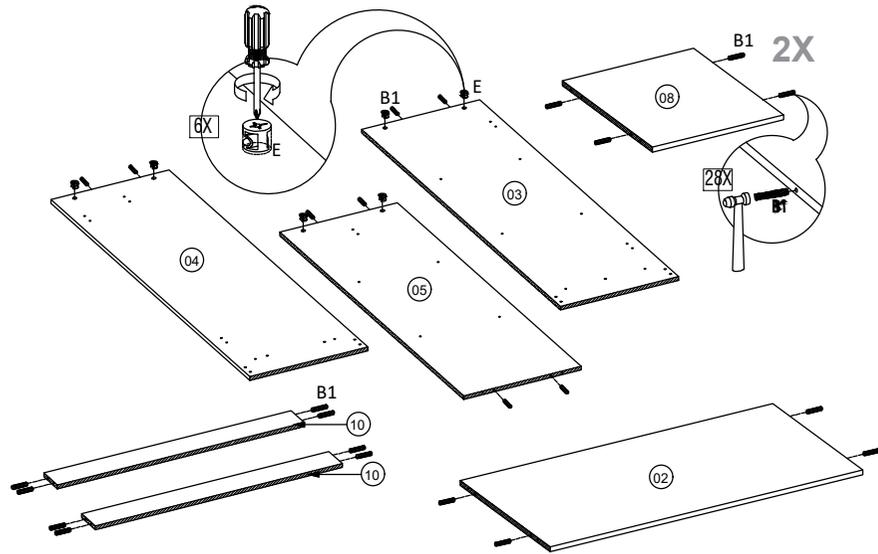


2

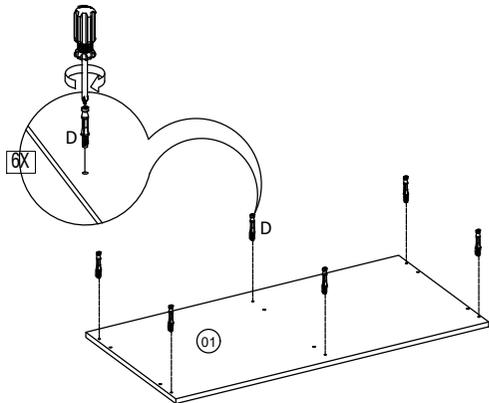


03

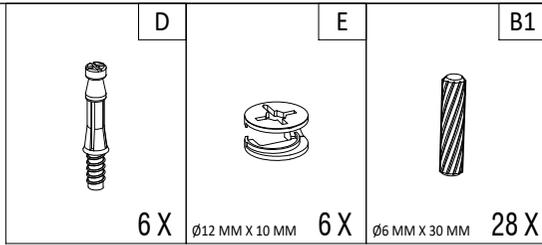


3

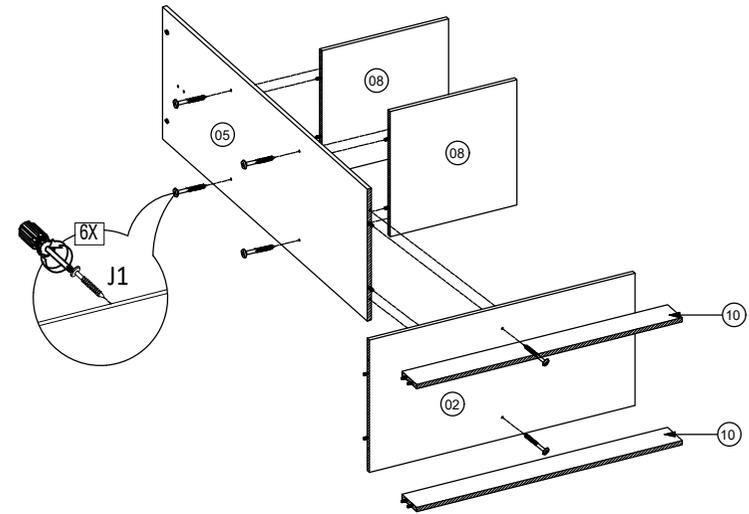

4

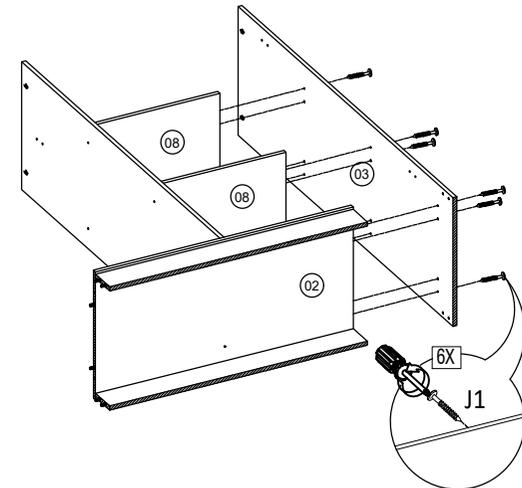


04

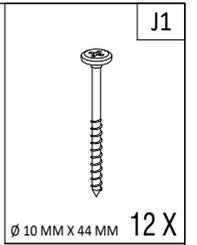


CA3	BB	M3	M6	J1
SAYAP BLACK 12MM 1 X	12 MM 4 SET	Ø 6 MM X 13 MM 2 X	Ø 6 MM X 16 MM 12 X	Ø 10 MM X 44 MM 2 X

5

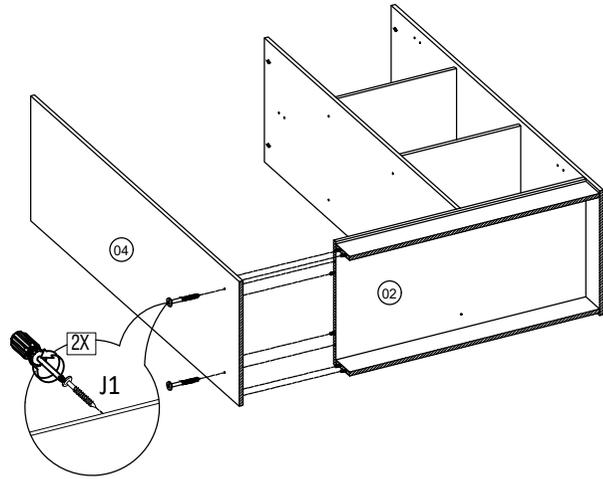


6

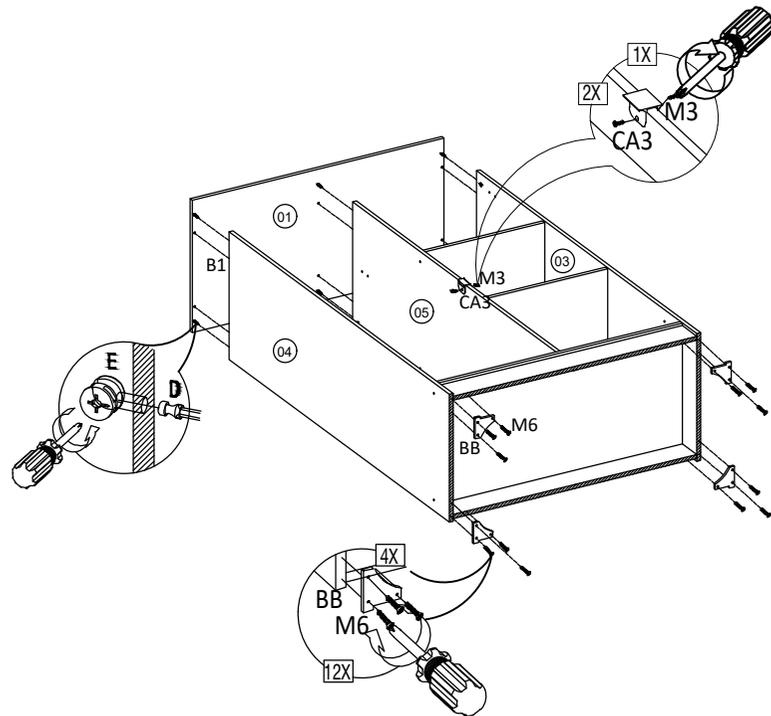


05

M3	AG	↑↑	W21	U	Q4
Ø 6 MM X 13 MM 24 X	2 X		2 X	Ø16 MM 2 X	INSET 4 X

7

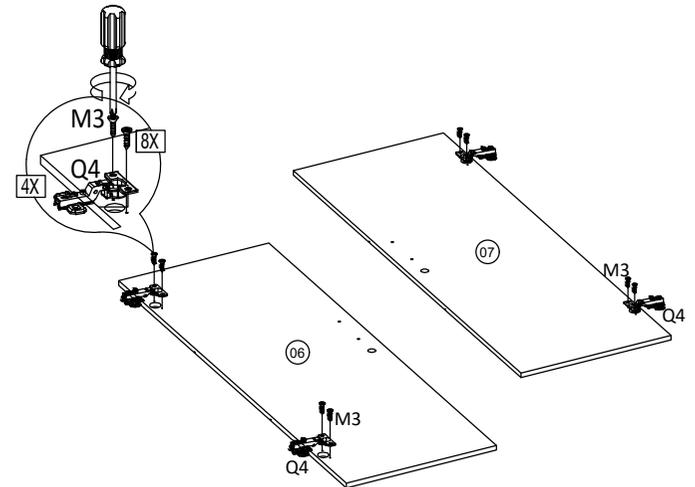

8

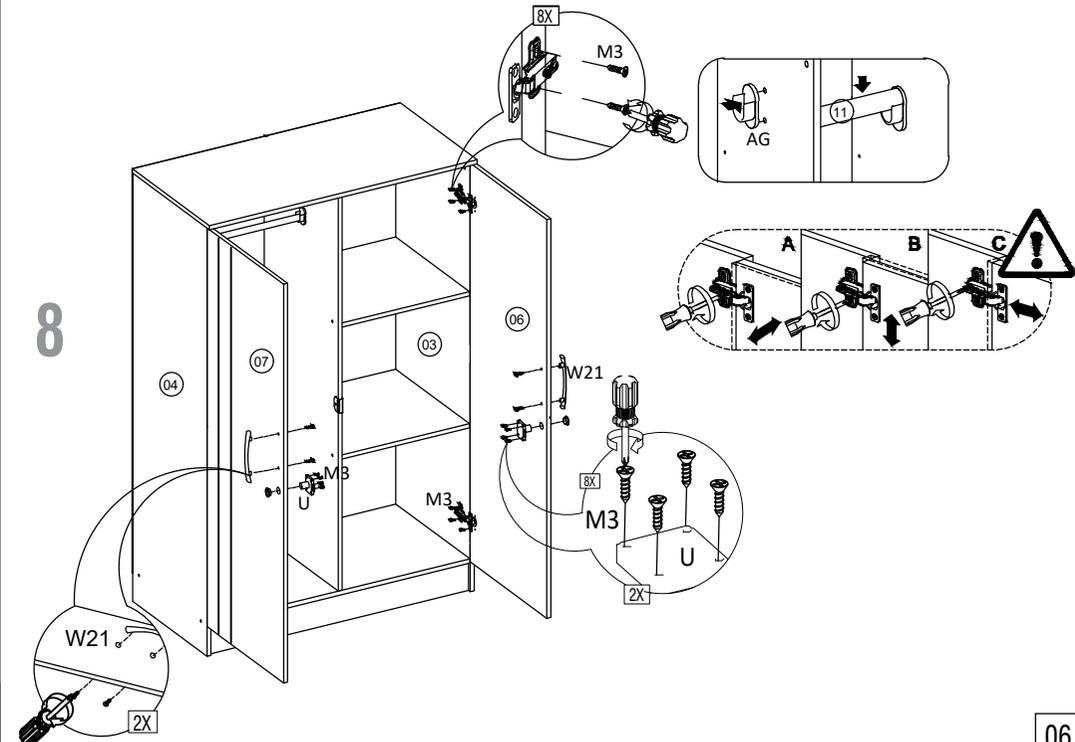

06


F1




19 MM

12 g

9

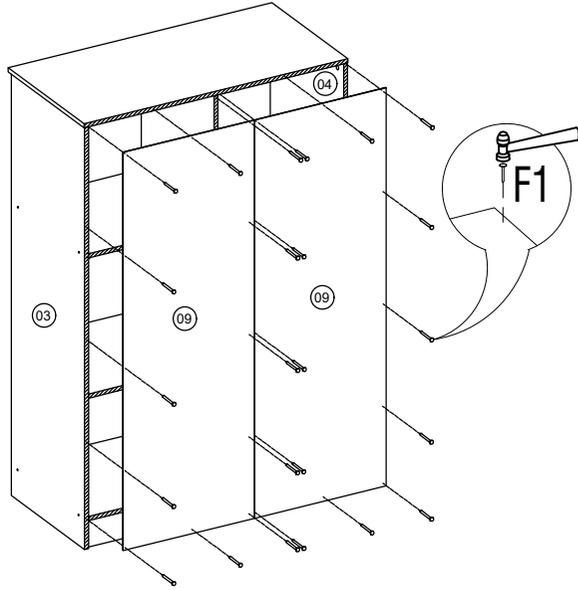

10

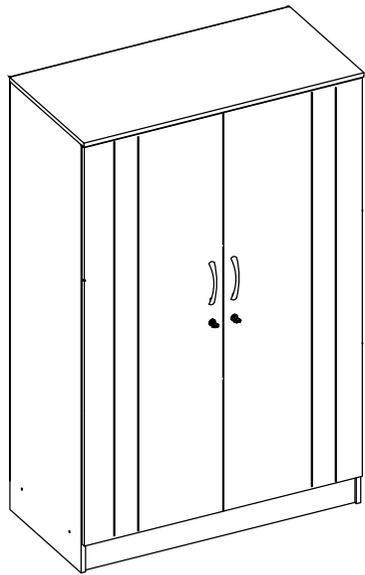

07

08