

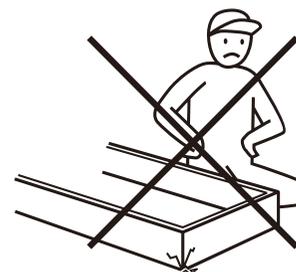
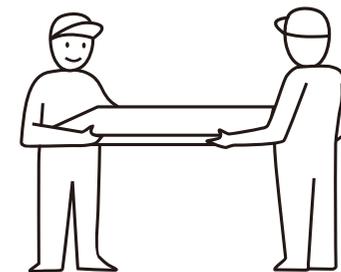
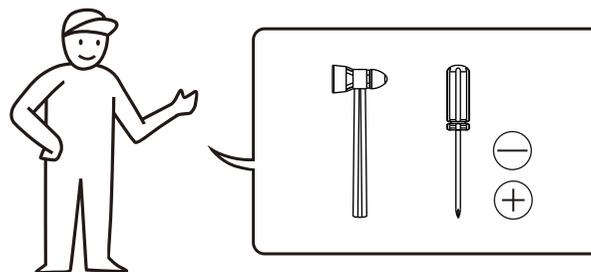



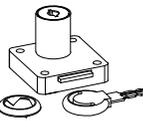


ASSEMBLING INSTRUCTION


MORPHO WARDROBE 2D



 Q4 INSET 6 X	 M2 Ø 6 MM X 25 MM 3 X	 BB6 12 MM 2 X	 M6 Ø 6 MM X 16 MM 14 X	 B1 Ø6 MM X 30 MM 12 X
 J1 Ø 10 MM X 44 MM 26 X	 M3 Ø 6 MM X 13 MM 34 X	 CA3 SAYAP BLACK 12MM 1 X	 U Ø16 MM 2 X	 W31 2 X
 BB 12 MM 2 SET	 AG 4 X	 F1 19 MM 8 g	 F 13 MM 3 g	

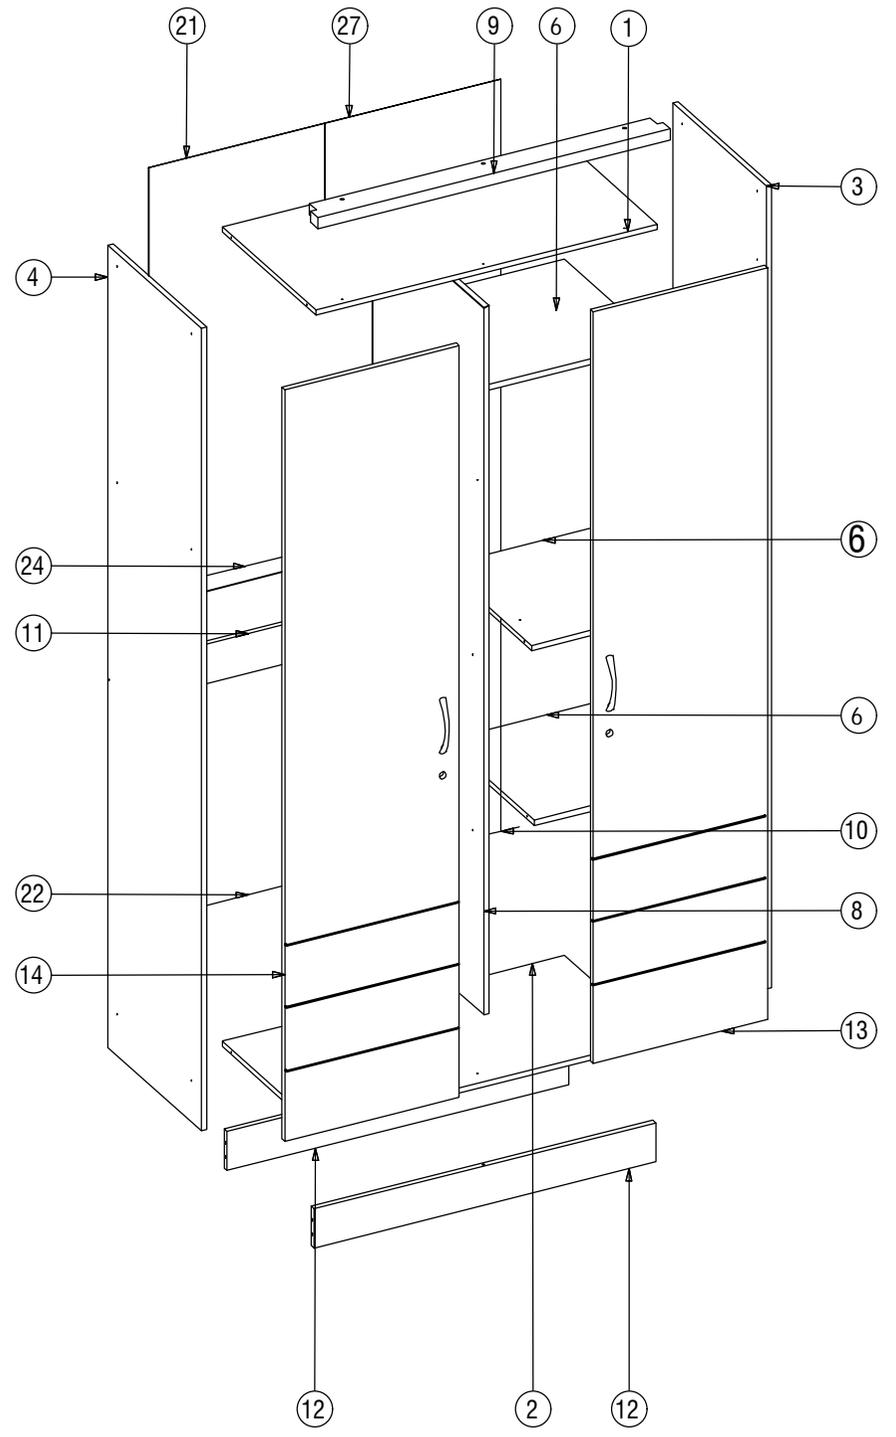


 x2 ±45 M 

<p>Q4</p>  <p>INSET</p>	<p>B1</p>  <p>∅6 MM X 30 MM</p>	<p>M3</p>  <p>∅6 MM X 13 MM</p>
6 X	12 X	12 X


<p>J1</p>  <p>∅10 MM X 44 MM</p>	<p>M3</p>  <p>∅6 MM X 13 MM</p>
7 X	2 X

<p>CA3</p>  <p>SAYAP BLACK 12MM</p>
1 X

1

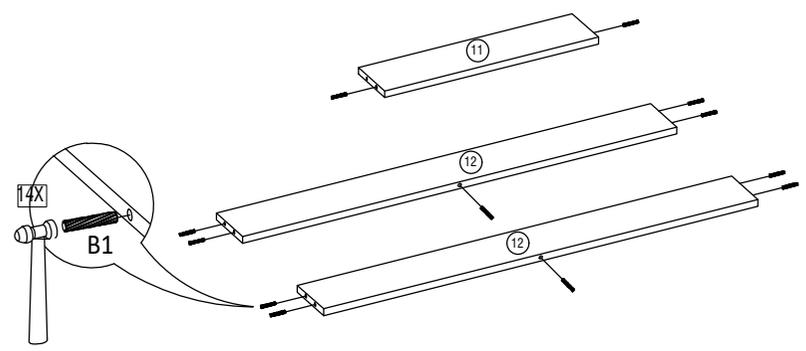


2

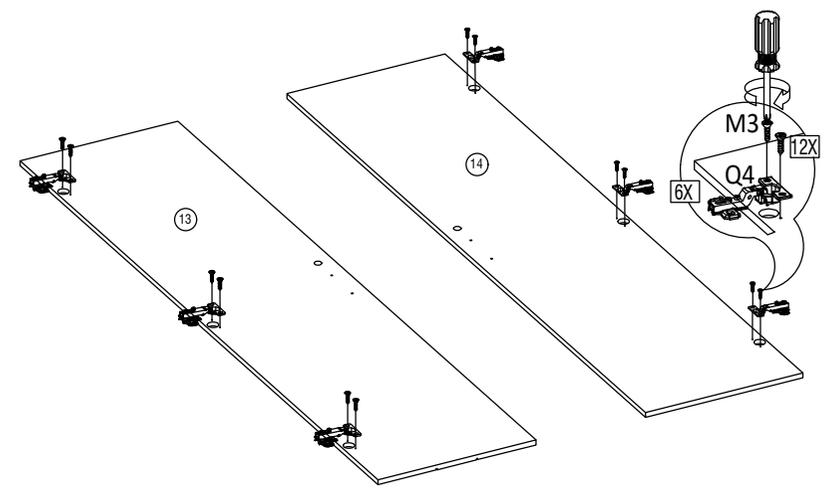


03

3


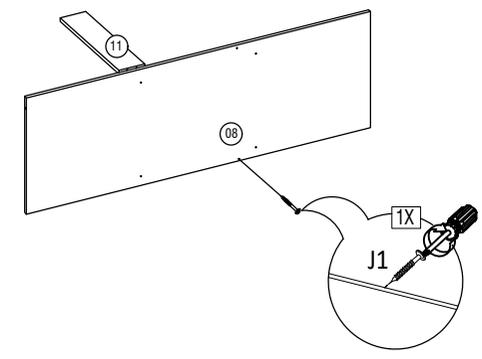


4

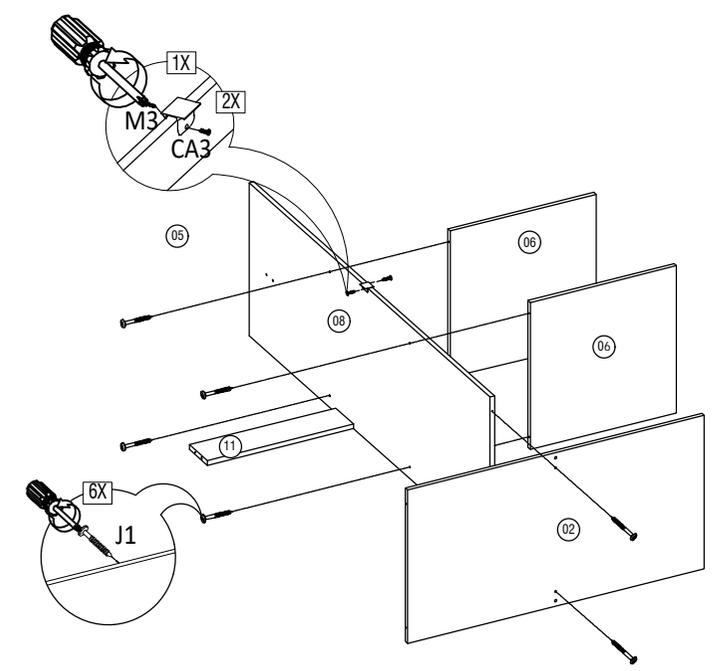


04

5

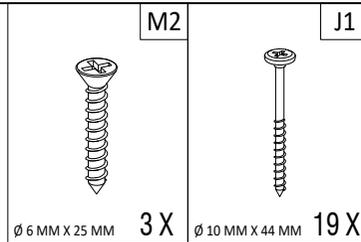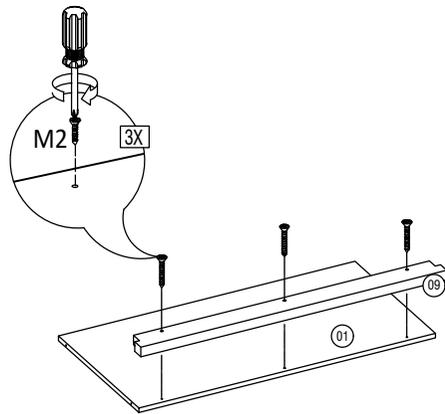


6

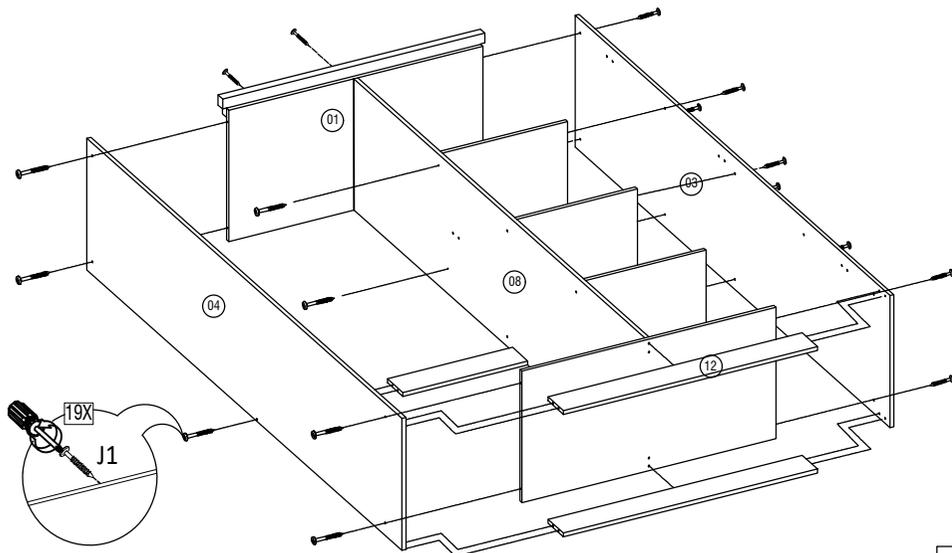



05

7

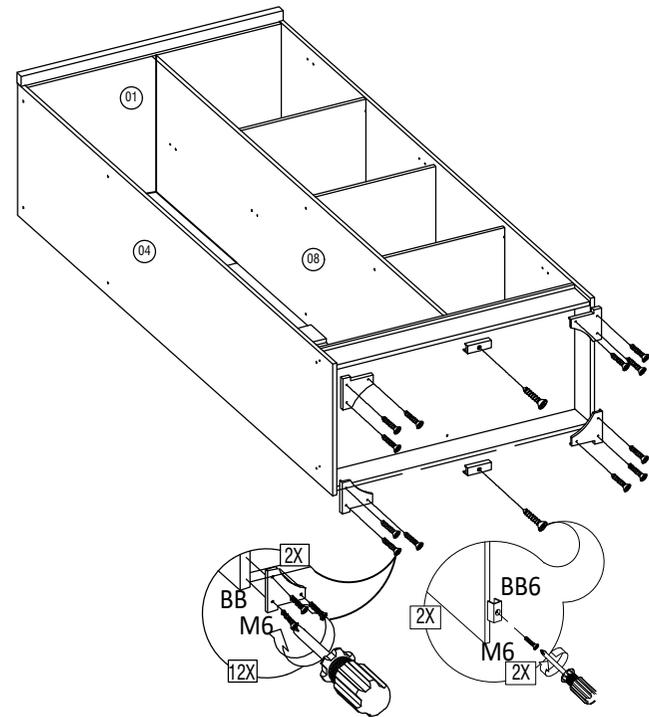


06

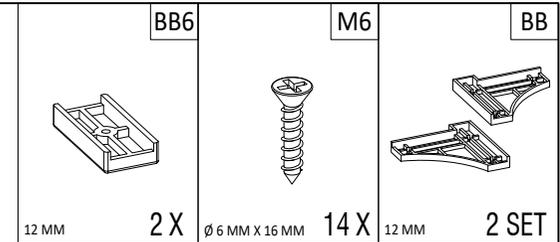

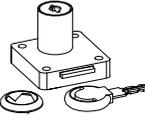M3  ∅ 6 MM X 13 MM	20 X	W31  2 X	AG  4 X	U  ∅ 16 MM 2 X
---	------	--	---	--


F  13 MM	3 g	F1  19 MM	8 g
---	-----	--	-----

8

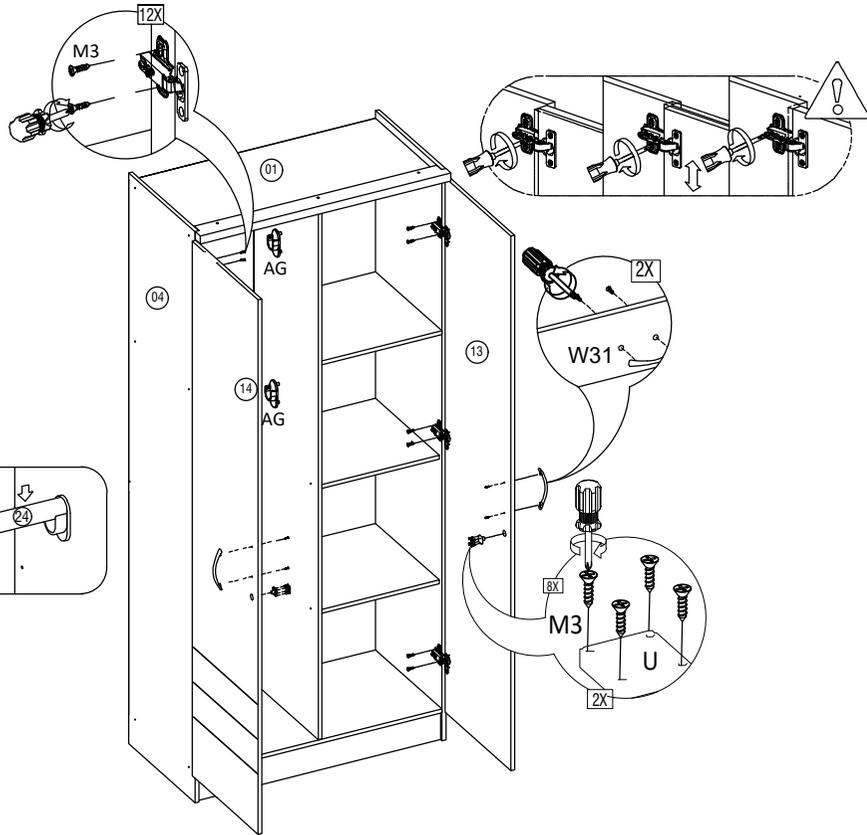

07

9

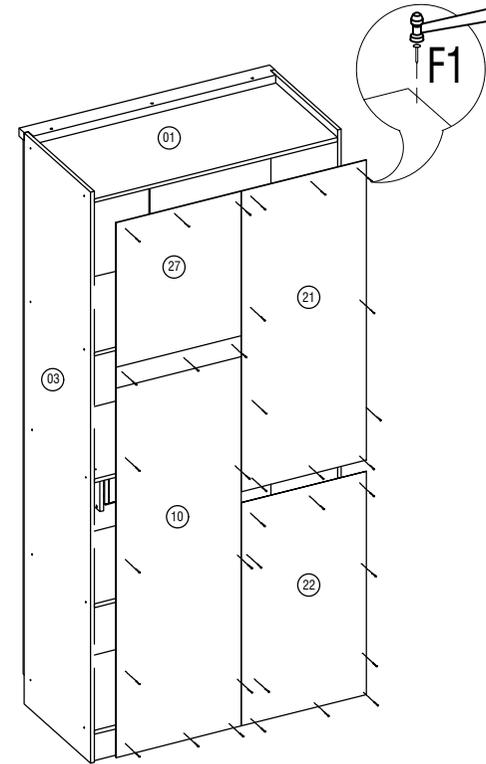

08