

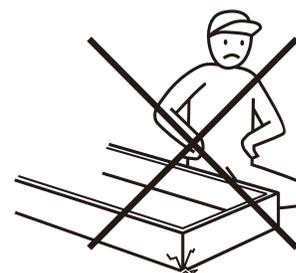
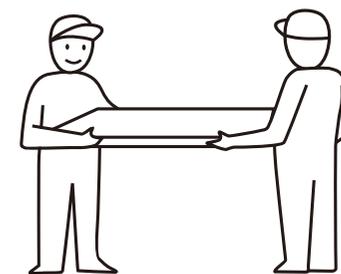
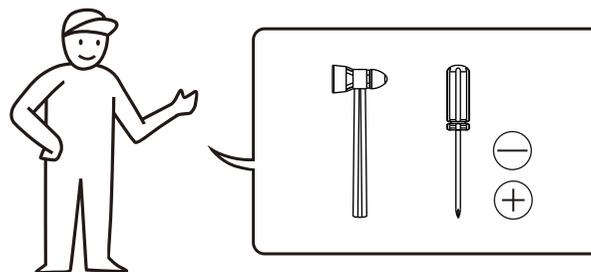


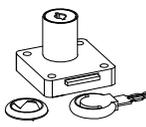
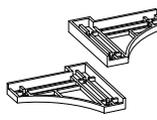



ASSEMBLING INSTRUCTION



MORPHO WARDROBE 2DF




 M2 Ø 6 MM X 25 MM 3 X	 AI2 WHITE 8 X	 BB6 12 MM 2 X	 M6 Ø 6 MM X 16 MM 14 X	 B1 Ø6 MM X 30 MM 12 X
 J1 Ø 10 MM X 44 MM 26 X	 M3 Ø 6 MM X 13 MM 50 X	 CA3 SAYAP BLACK 12MM 1 X	 U Ø16 MM 2 X	 W31 2 X
 BB 12 MM 2 SET	 AG 4 X	 F1 19 MM 8 g	 Q4 INSET 6 X	 F 13 MM 3 g

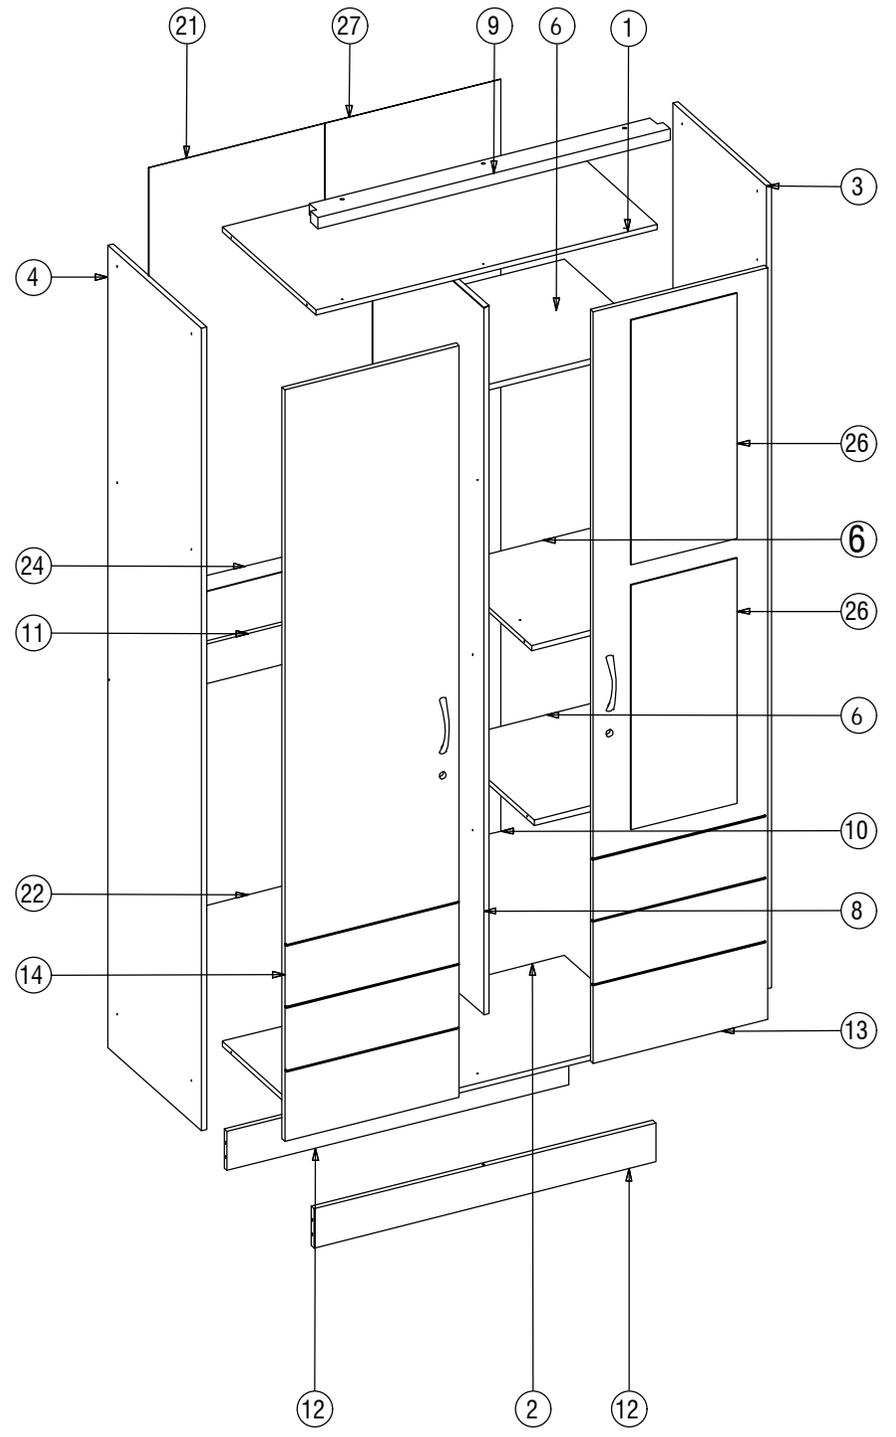


 <p>INSET</p>	 <p>Ø6 MM X 30 MM</p>	 <p>Ø 6 MM X 13 MM</p>
6 X	12 X	12 X

 <p>Ø 10 MM X 44 MM</p>	 <p>Ø 6 MM X 13 MM</p>	 <p>WHITE</p>	 <p>SAYAP BLACK 12MM</p>
7 X	18 X	8 X	1 X

1

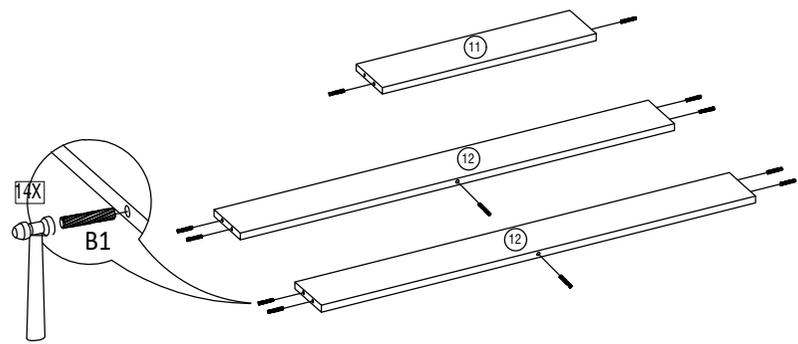


2

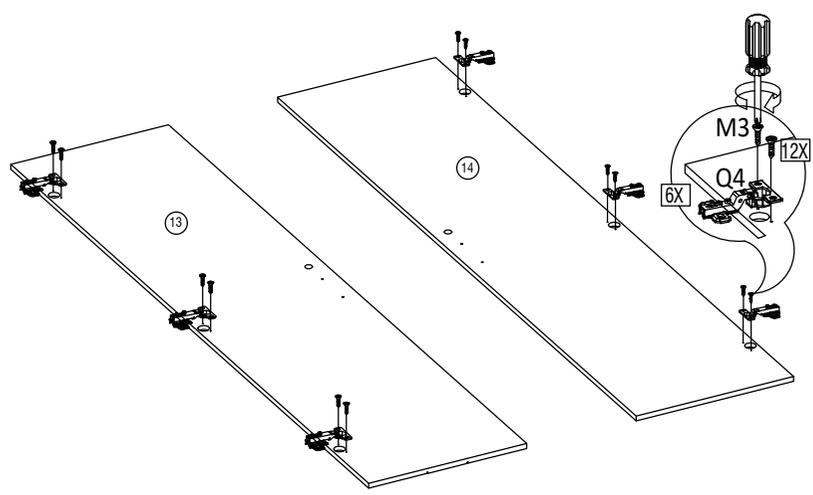


03

3


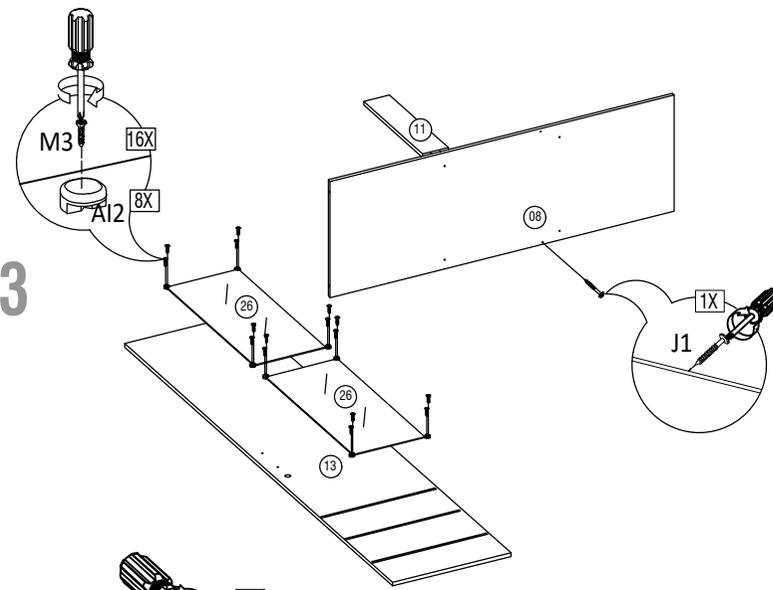


4

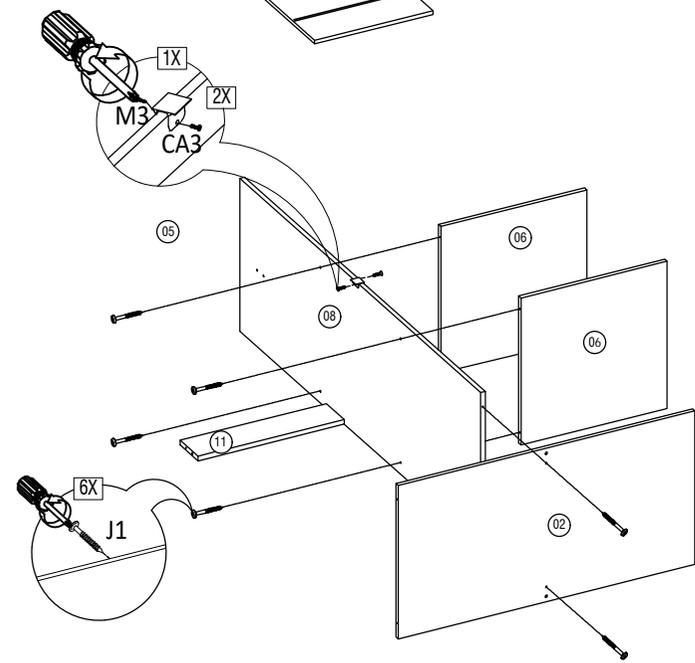


04

5

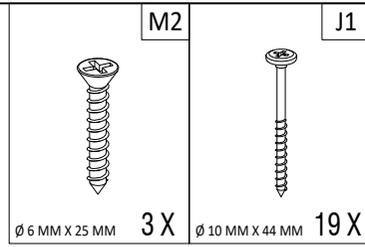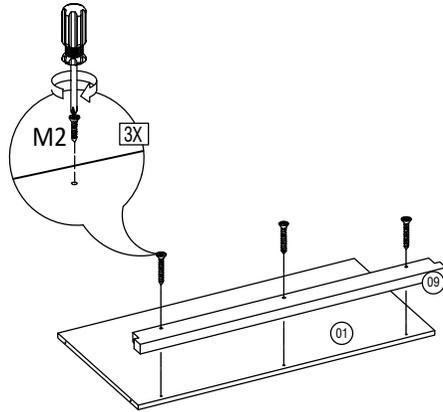


6

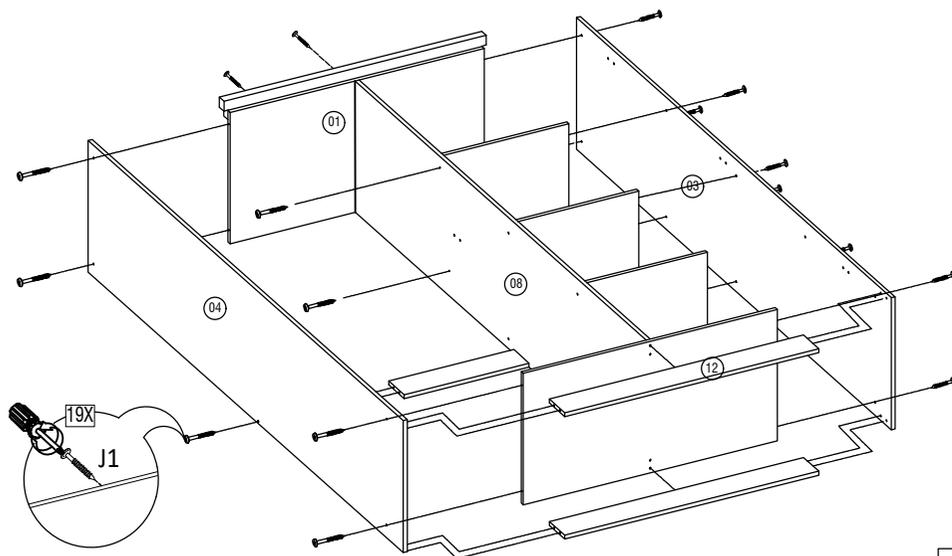


05

7

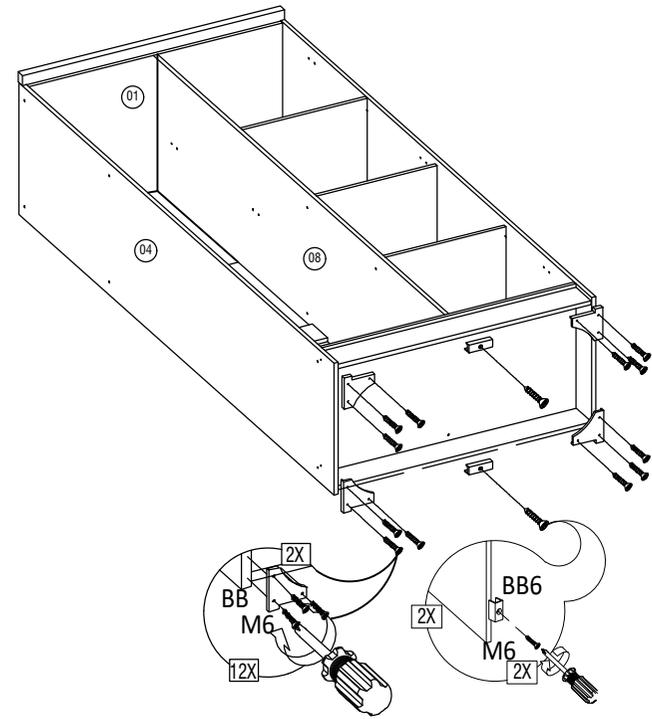

06

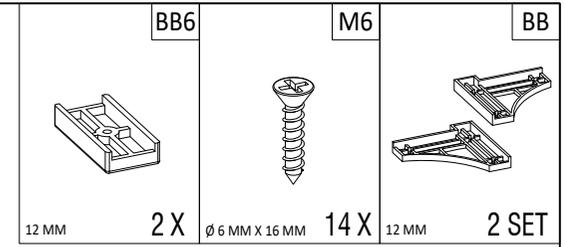

M3



W31

AG

U




20 X



2 X



4 X

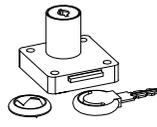

Ø 16 MM

2 X

Ø 6 MM X 13 MM

F

F1



13 MM


3 g




19 MM

8 g

8

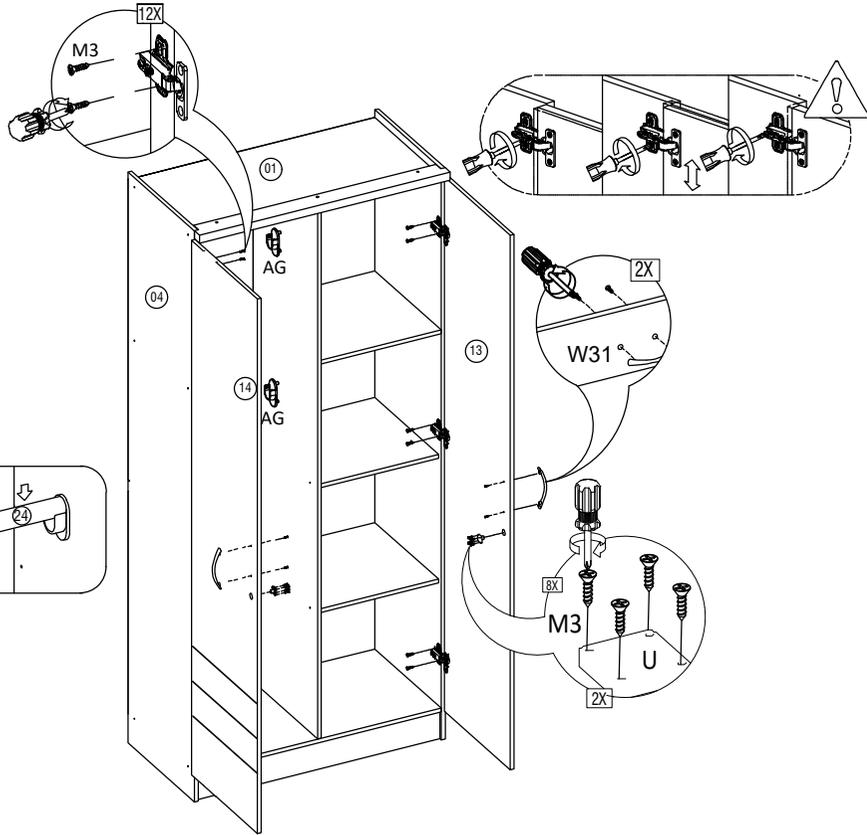

9

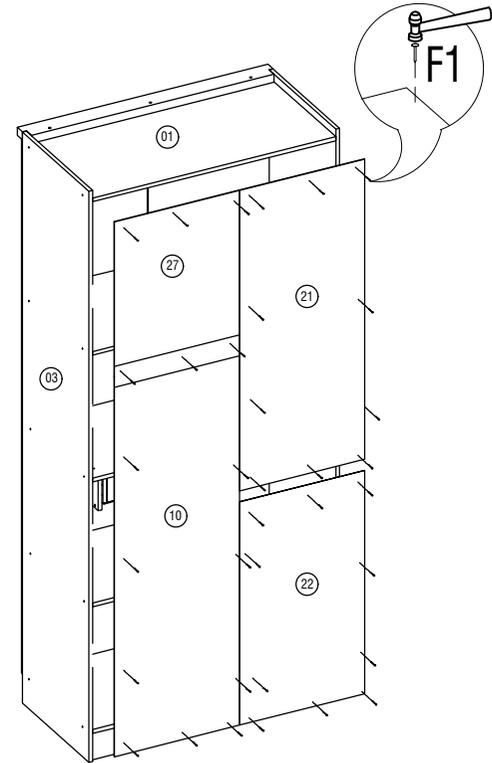

07

08