

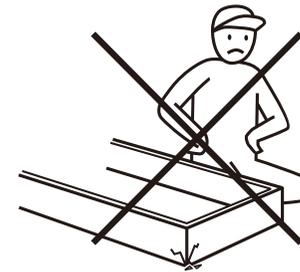
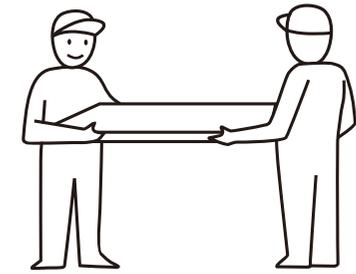
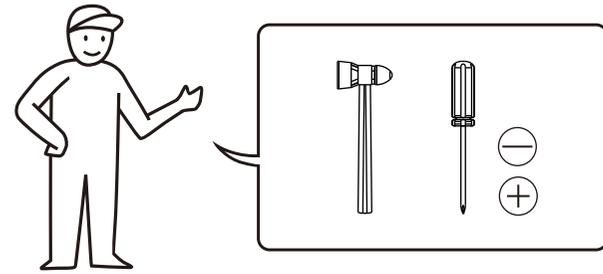




ASSEMBLING INSTRUCTION



REA KITCHEN CABINET 80

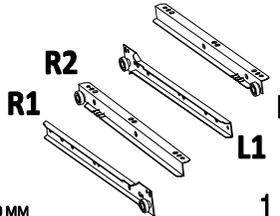


 Ø12 MM X 10 MM 9 X	 9 X	 Ø 6 MM X 38 MM 10 X	 Ø 6 MM X 16 MM 15 X	 Ø6 MM X 30 MM 46 X	 Ø 10 MM X 44 MM 18 X
 Ø 6 MM X 13 MM 40 X	 12 MM 2 SET	 12 MM 2 X	 5 X	 INSET 8 X	 8 X
 19 MM 12 g	 2 X	 Ø 4 MM X 13 MM 10 X	 10 X	 300 MM 1 SET	 1 SET

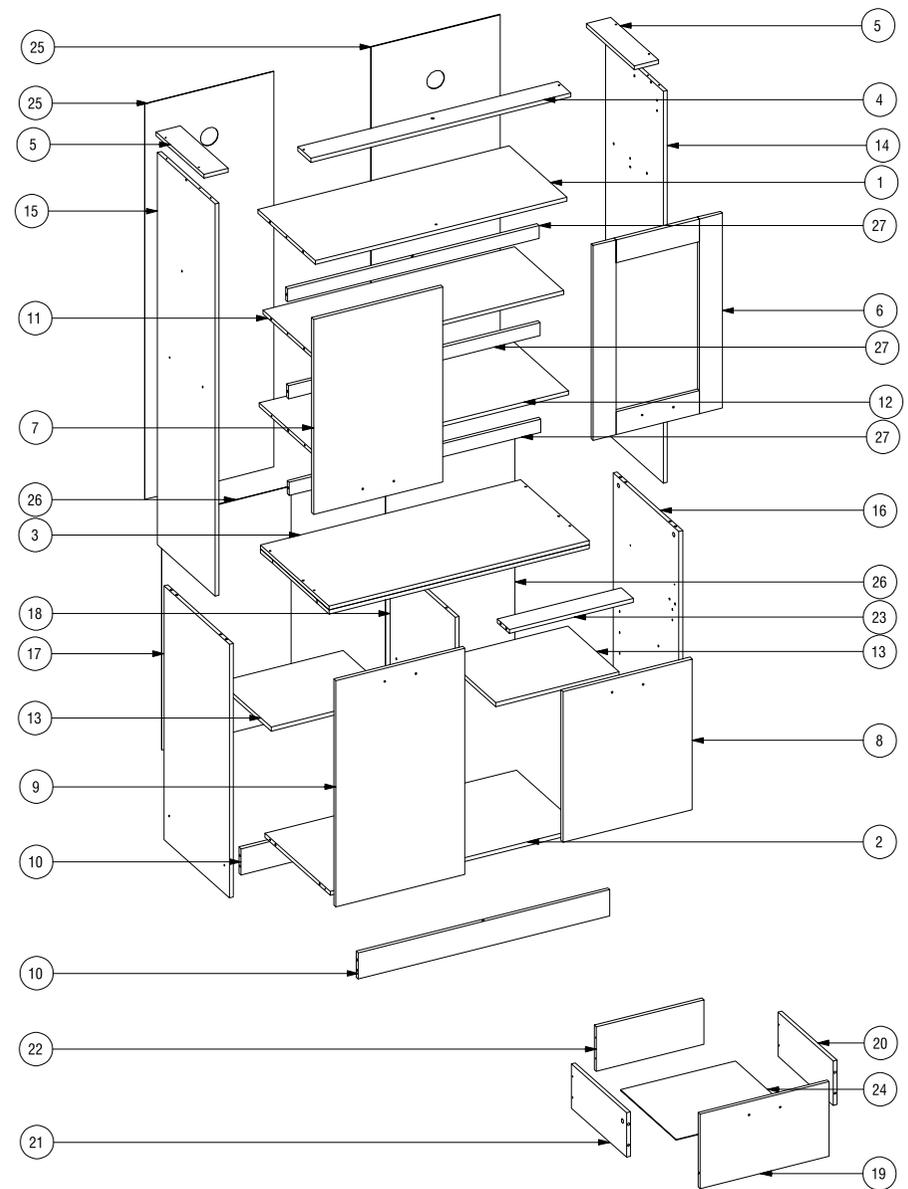


 x2 ±45 M 

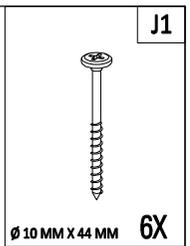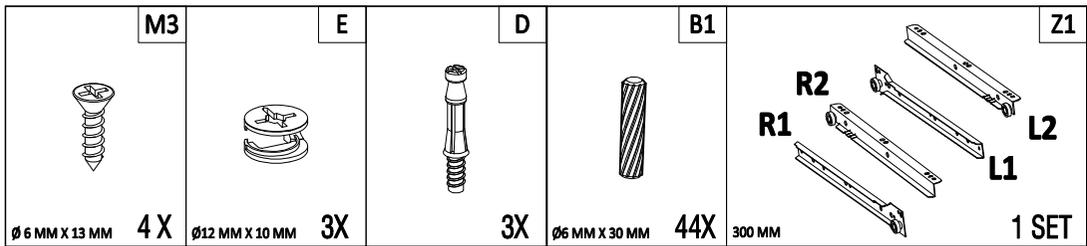


1

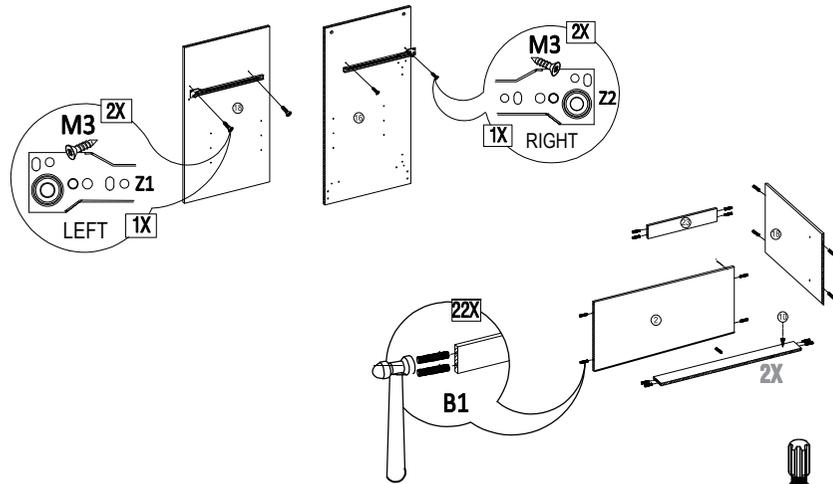


2


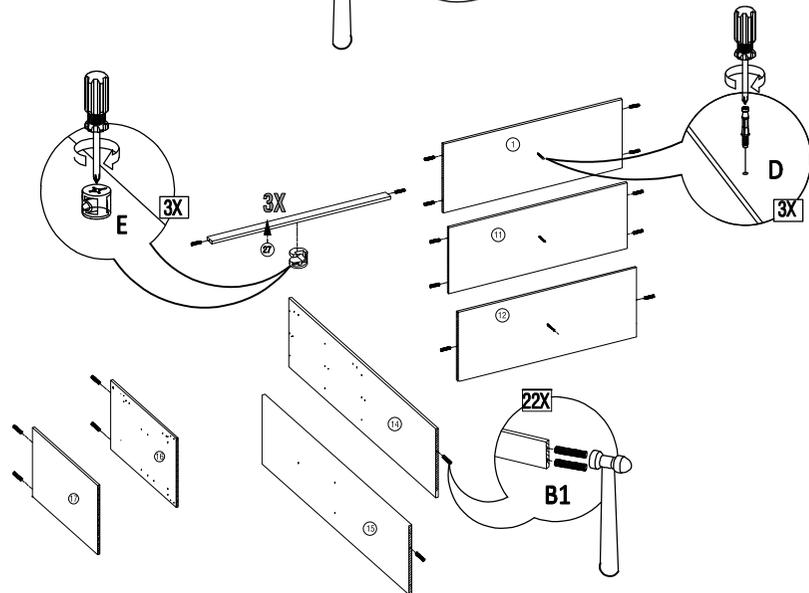


3

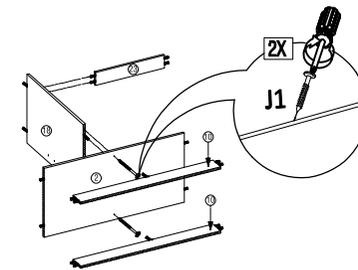


4

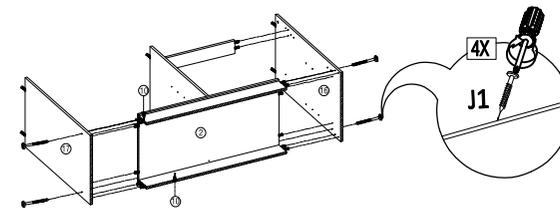


 Ø 6 MM X 16 MM	 Ø 6 MM X 38 MM	 Ø 10 MM X 44 MM	 12 MM	 Ø 6 MM X 16 MM	 12 MM		 Ø 12 MM X 10 MM	
1X	6X	12X	2X	14X	2 SET	8X	4X	4X


5

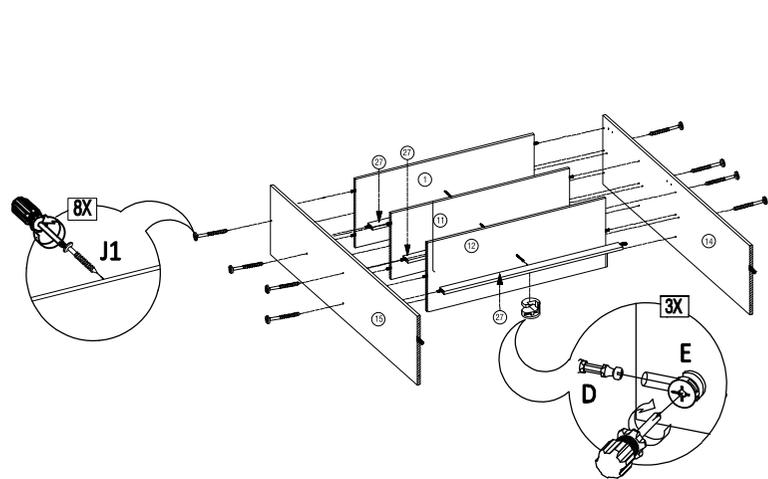


7

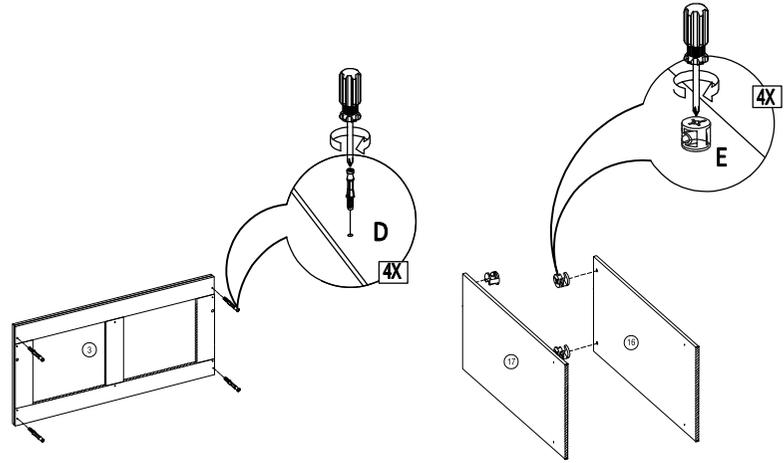


6

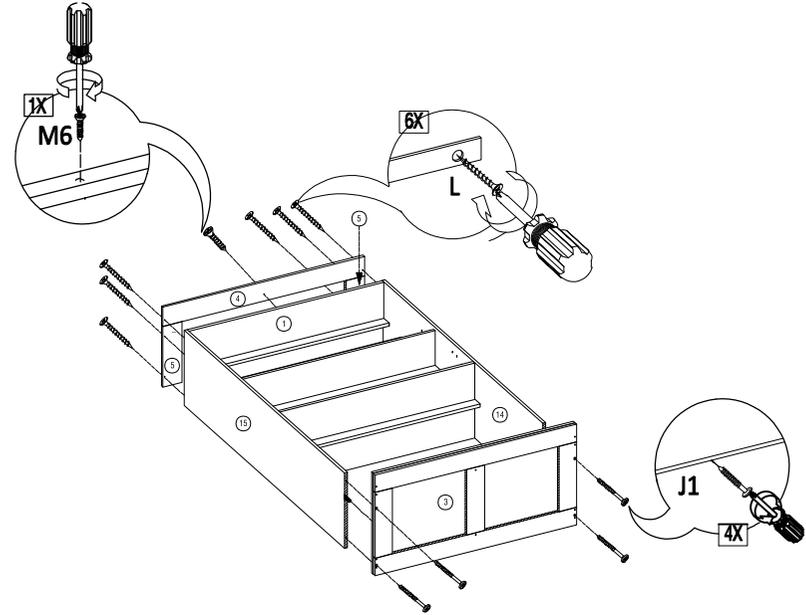


8

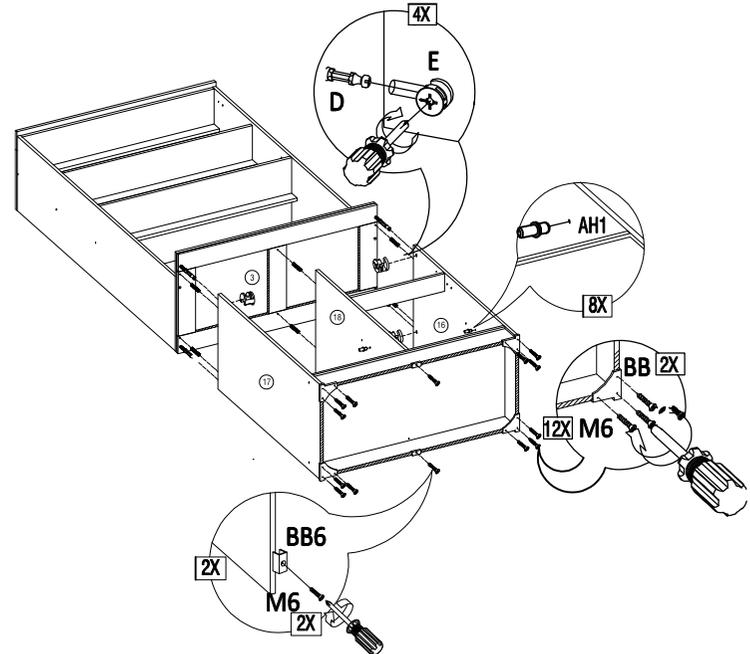

9

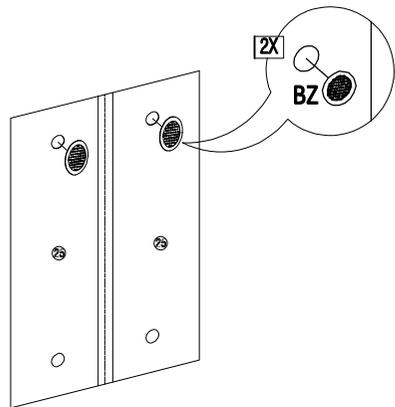


10

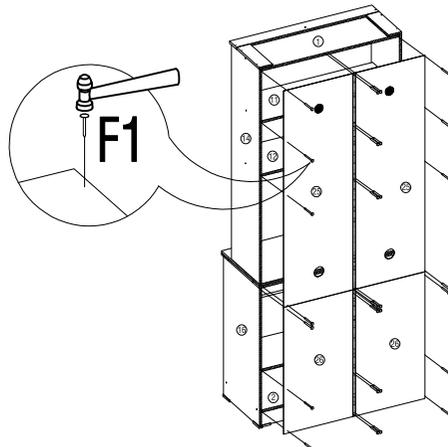


F1 19 MM 10 g	BZ 2 X	B1 Ø6 MM X 30 MM 2 X	L Ø 6 MM X 38 MM 4 X	F1 19 MM 2 g	E Ø12 MM X 10 MM 2 X	D 2 X	W17 1 X
--------------------------------	----------------------	---------------------------------------	---------------------------------------	-------------------------------	---------------------------------------	---------------------	-----------------------

11

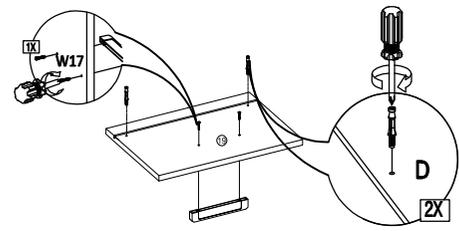


R1 300 MM	R2 	L1 	L2 	Z1 1 SET	M3 Ø 6 MM X 13 MM 4 X
-------------------------	---------------	---------------	---------------	------------------------	--

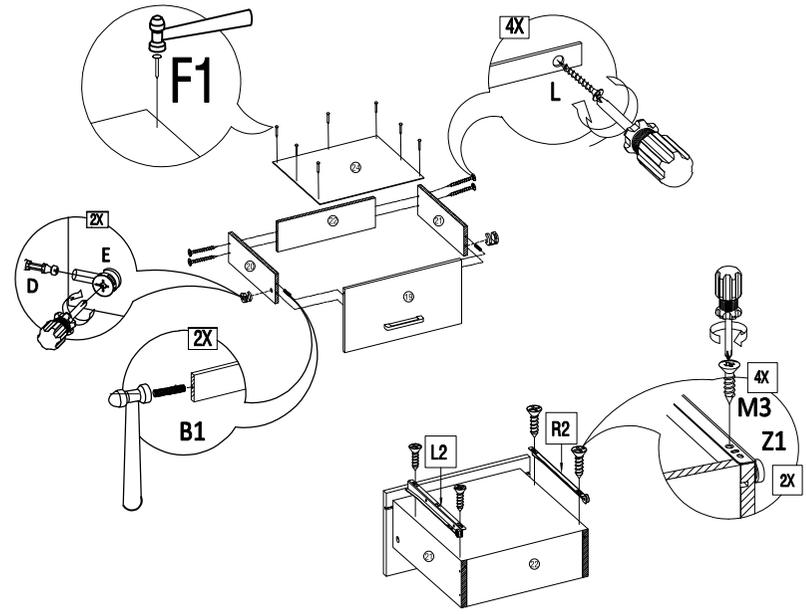



07

08



12

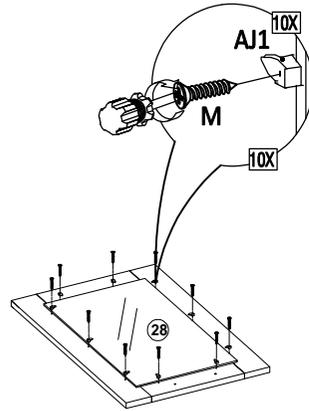


13

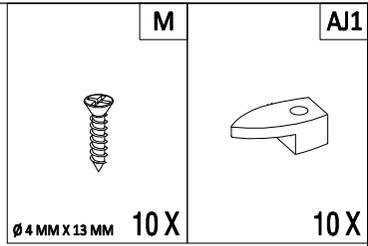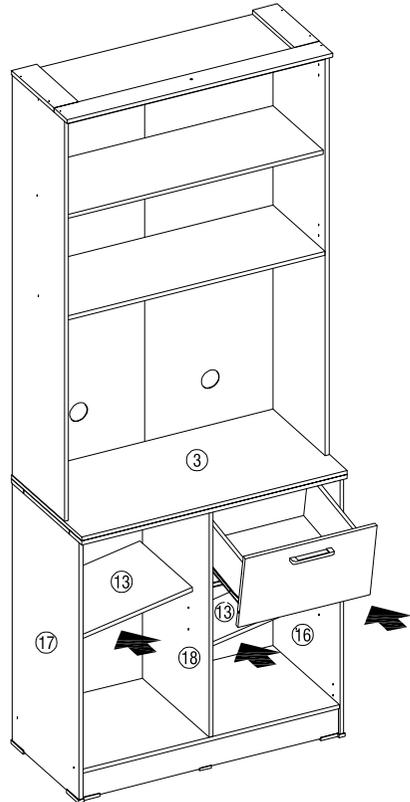

14

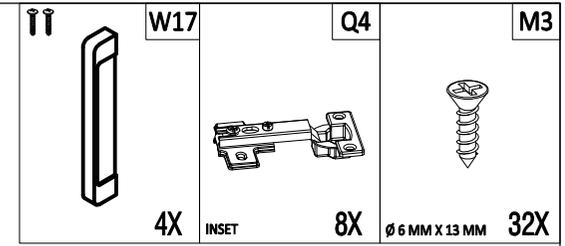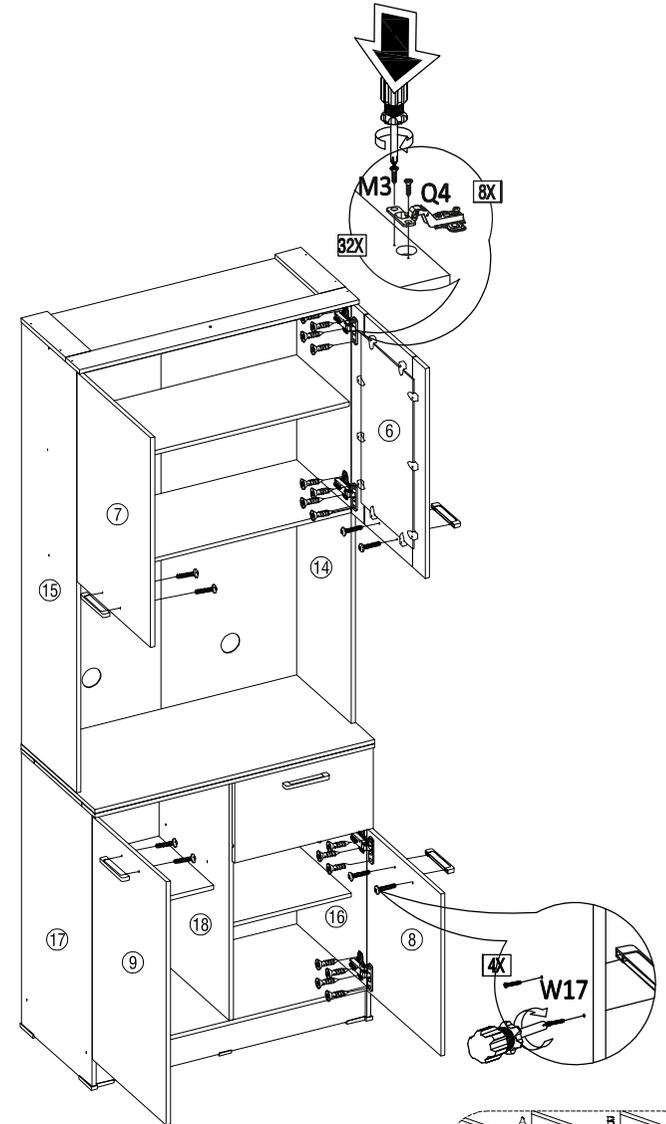

09



10

15

