
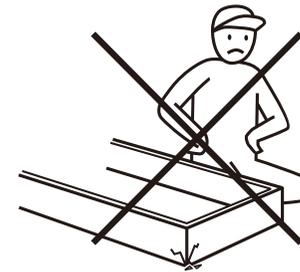
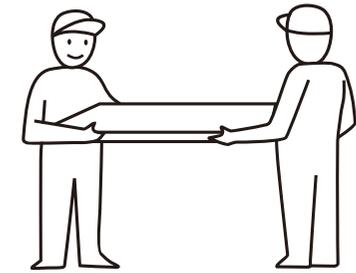
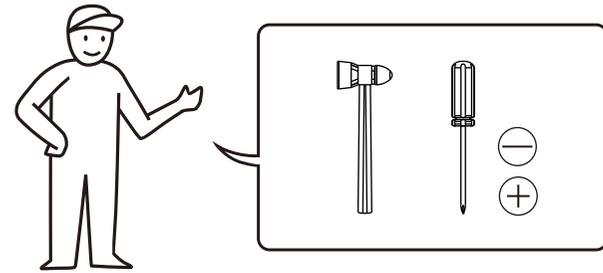







ASSEMBLING INSTRUCTION

BIANCA SHOERACK 80




 J Ø 10 X 44 MM 12X	 E Ø12 MM X 10 MM 1X	 D 1X	 B1 Ø6 MM X 30 MM 29X	 BZ 2X	 AQ1 1X
 AM 2 SET	 M3 Ø 6 MM X 13 MM 8X	 Q1 INSET 2 X	 AK 16X	 BB 12 MM 2 SET	 M6 Ø 6 MM X 16 MM 12X

 F 13 MM 8 g	 CB1 12 MM 1 SET
---	--

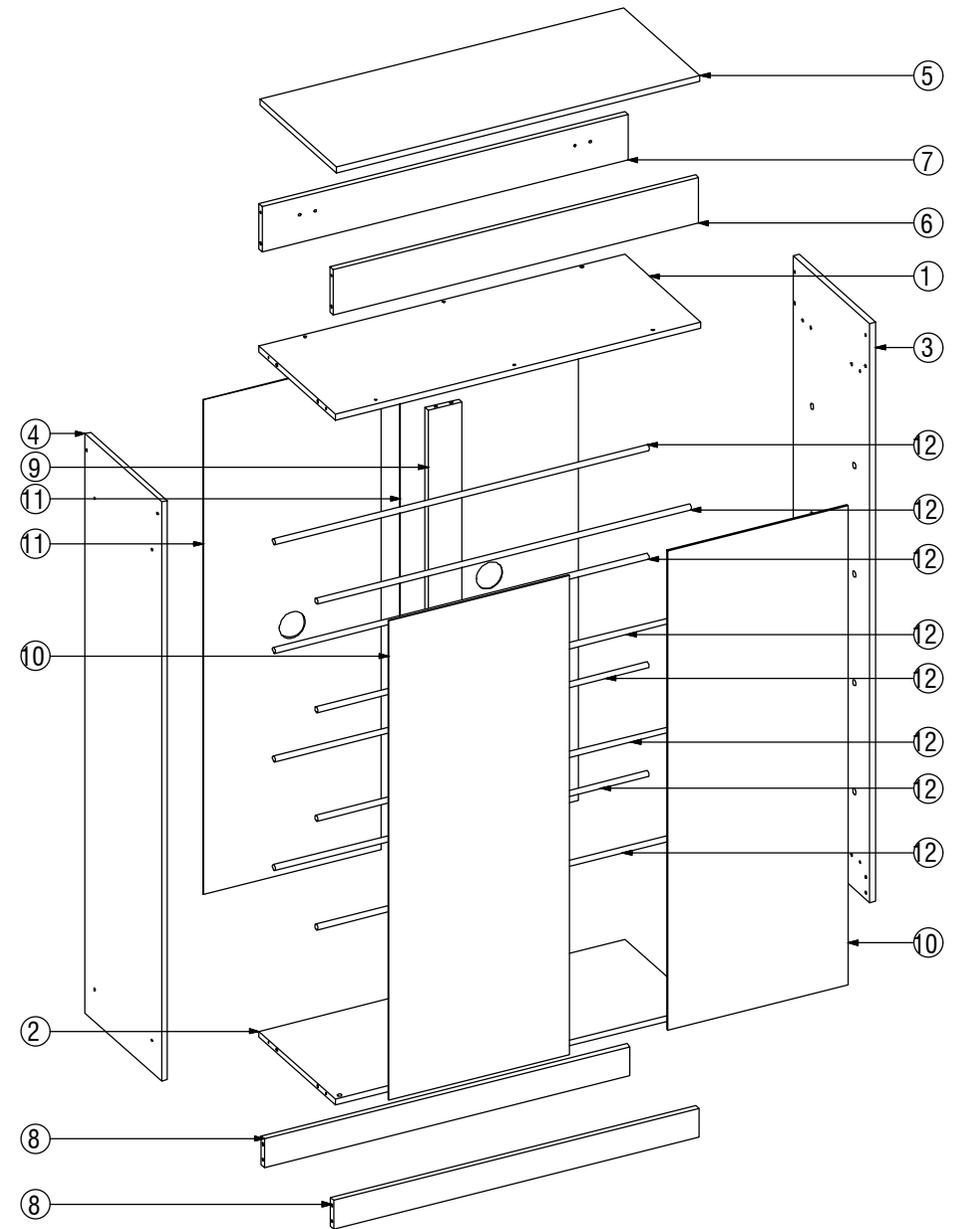


 x2 ±45 M 


<p>E</p>  <p>Ø12 MM X 10 MM 1X</p>	<p>D</p>  <p>1X</p>	<p>B1</p>  <p>Ø6 MM X 30 MM 26X</p>	<p>BZ</p>  <p>2X</p>	<p>AQ1</p>  <p>1X</p>
---	---	--	--	---

<p>J</p>  <p>Ø 10 X 44 MM 6X</p>
--


1

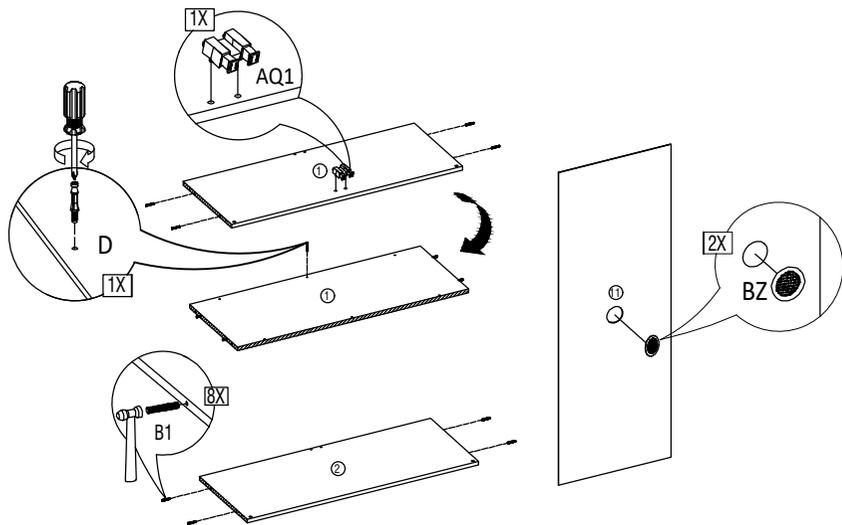


2

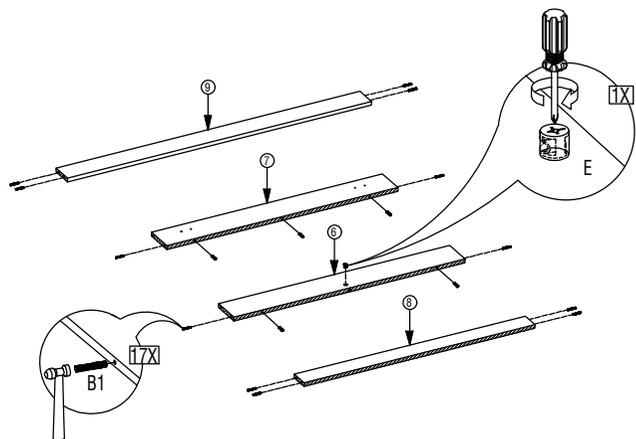

3


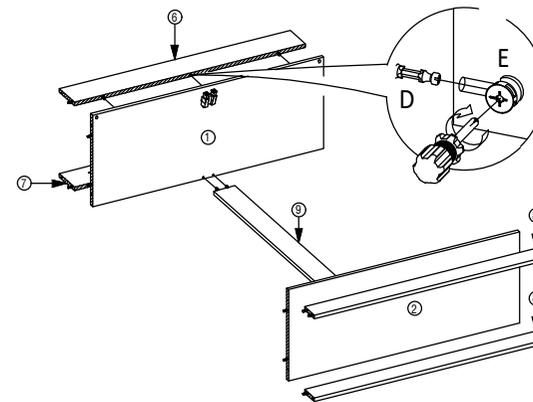




4

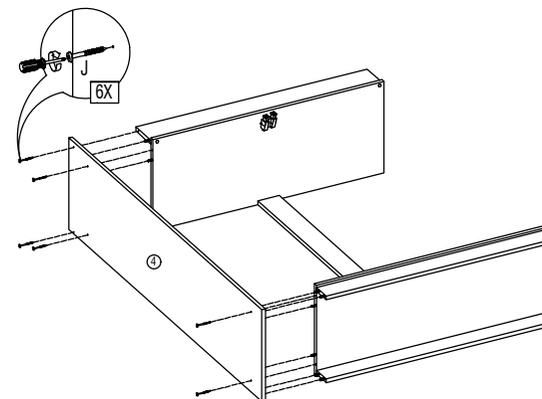

5

6




 <p>BB</p> <p>12 MM</p> <p>2 SET</p>	 <p>M6</p> <p>Ø 6 MM X 16 MM</p> <p>12X</p>	 <p>J</p> <p>Ø 10 X 44 MM</p> <p>6X</p>
--	--	---

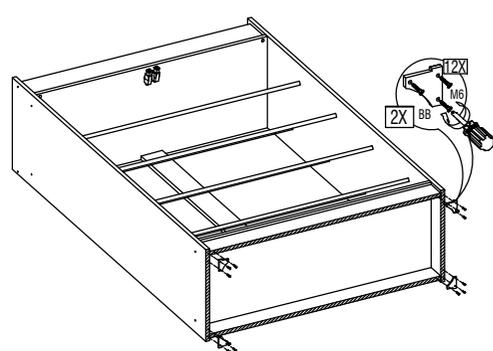
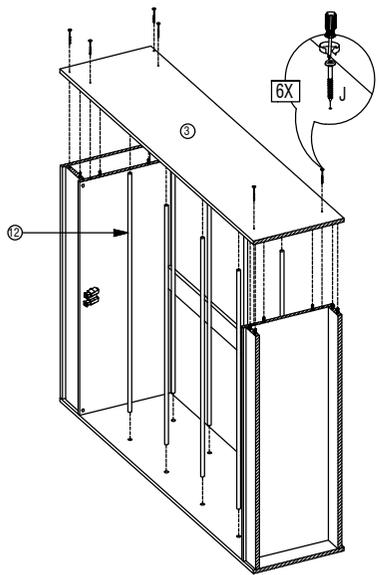


05

7

8

 <p>CB1</p> <p>12 MM</p> <p>1 SET</p>	 <p>AM</p> <p>2 SET</p>	 <p>M3</p> <p>Ø 6 MM X 13 MM</p> <p>8X</p>	 <p>Q1</p> <p>INSET</p> <p>2 X</p>	 <p>AK</p> <p>16X</p>
---	--	---	---	--

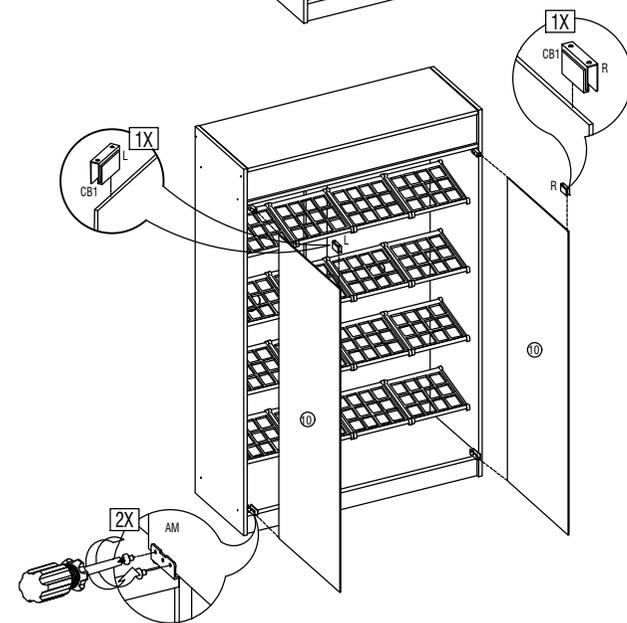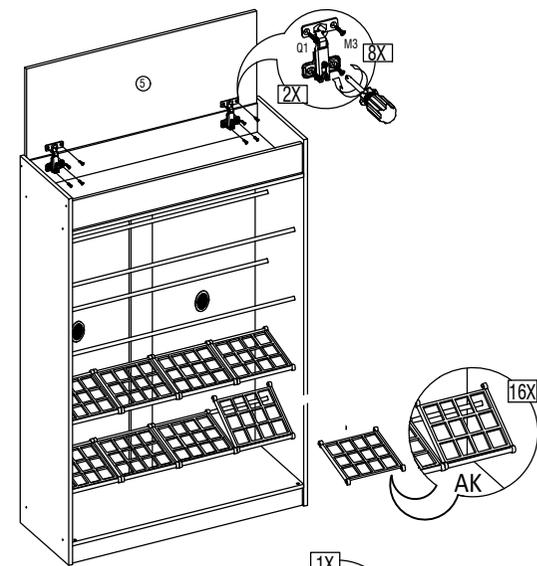

06


F



13 MM


8 g

9

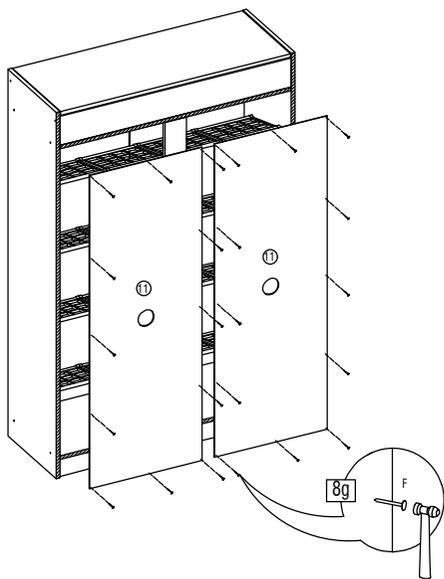

11

10

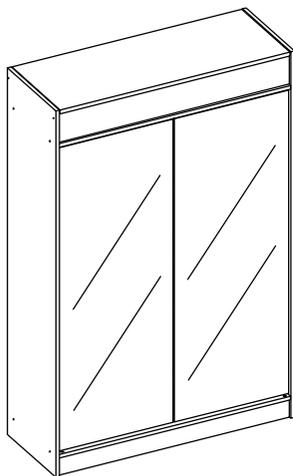

07

08