














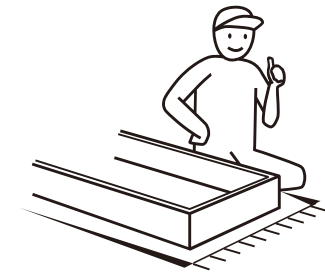
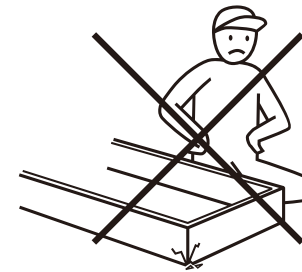
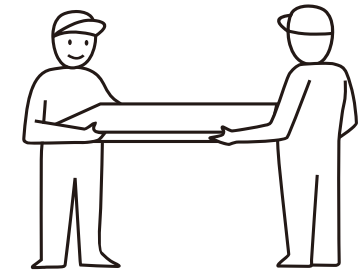


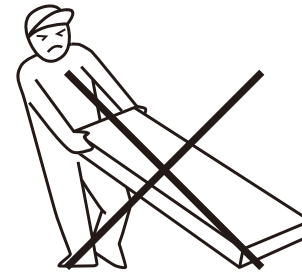



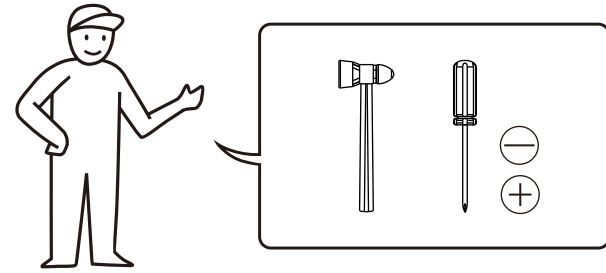



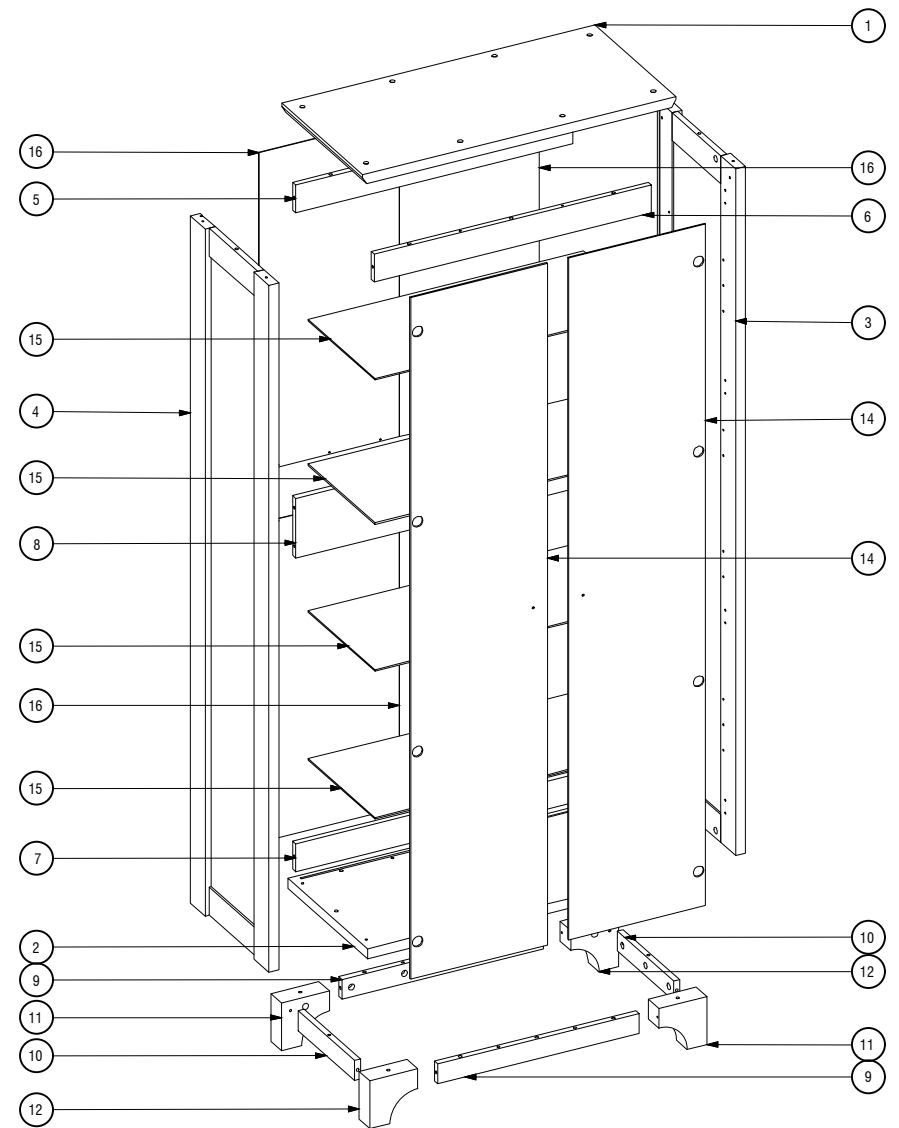
ASSEMBLING INSTRUCTION



KARINA SHOWCASE 2DF



WHITE - SONOMA OAK

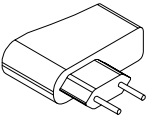


 M3 Ø 6 MM X 13 MM 14 X	 J2 Ø 12 X 44 MM 14 X	 S 8 X	 D 28 X	 B Ø 8 X 30 MM 19 X	 E1 Ø 15 MM X 12 MM 28 X
 AE1 16 X	 A5 Ø 4 MM X 10 MM 2 X	 BG 2 X	 U3 1 X	 RZ 1 X	
 G 16 X	 M1 Ø 4 MM X 16 MM 16 X	 BU 1 X	 AN1 2 X	 BT15 WHITE 4 X	 AA 1.75 M'
 BS 2 X	 BR2 1 X	 BR3 1 X	 M4 Ø 9 MM X 13 MM 16 X		




 x2 ±45 M 

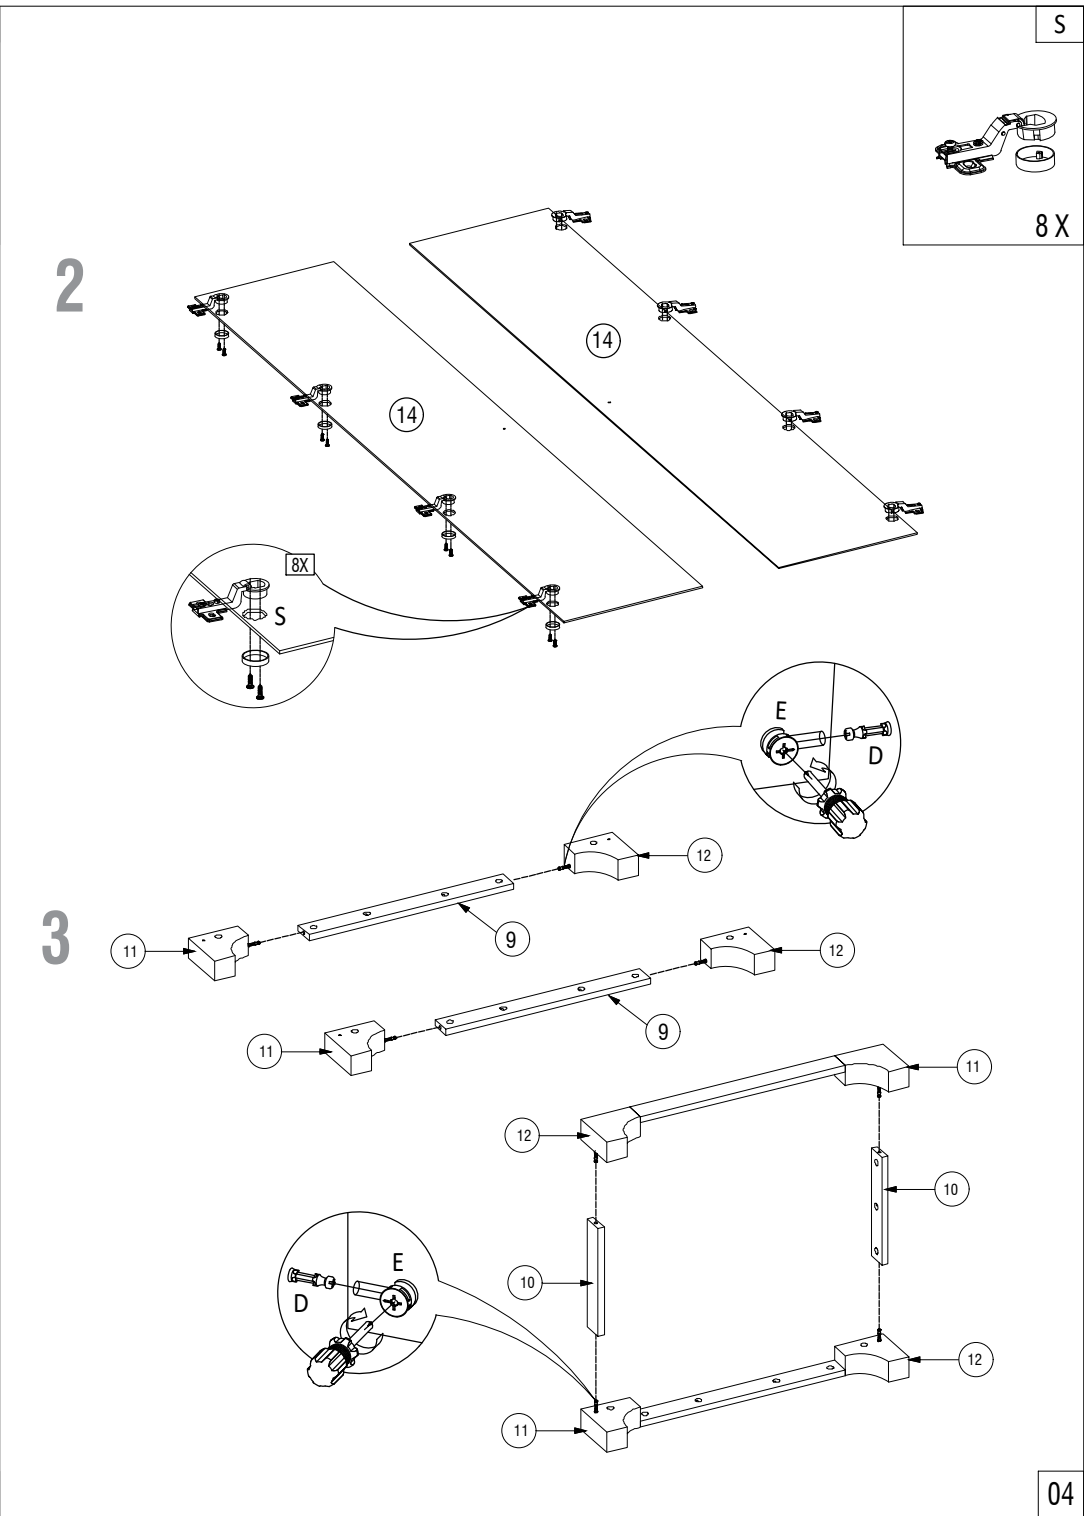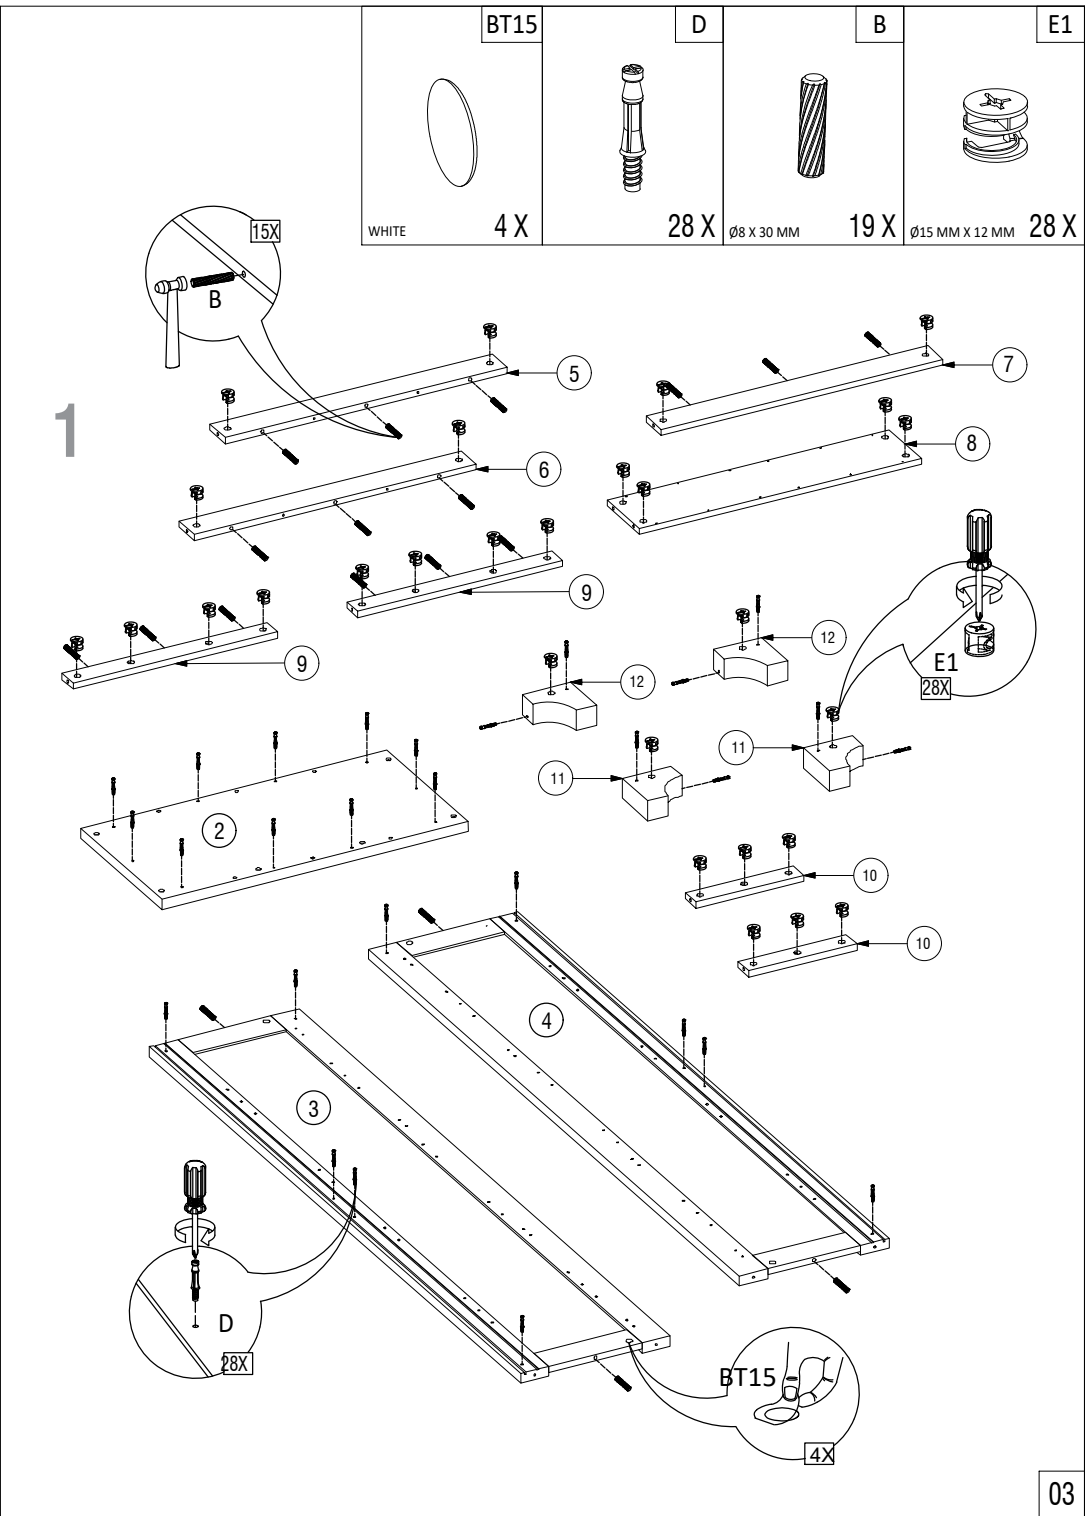

4

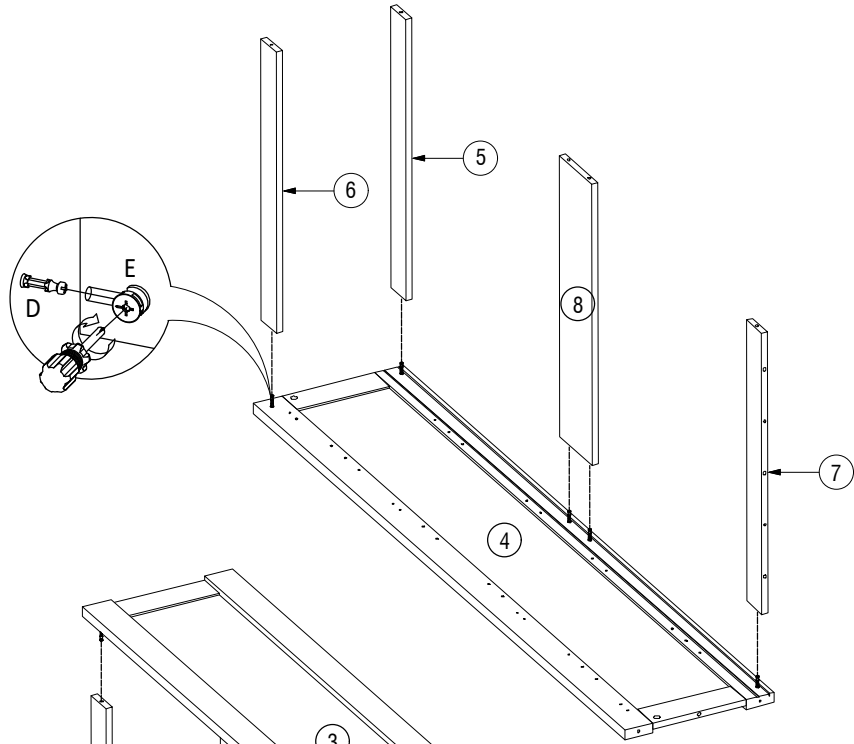


5

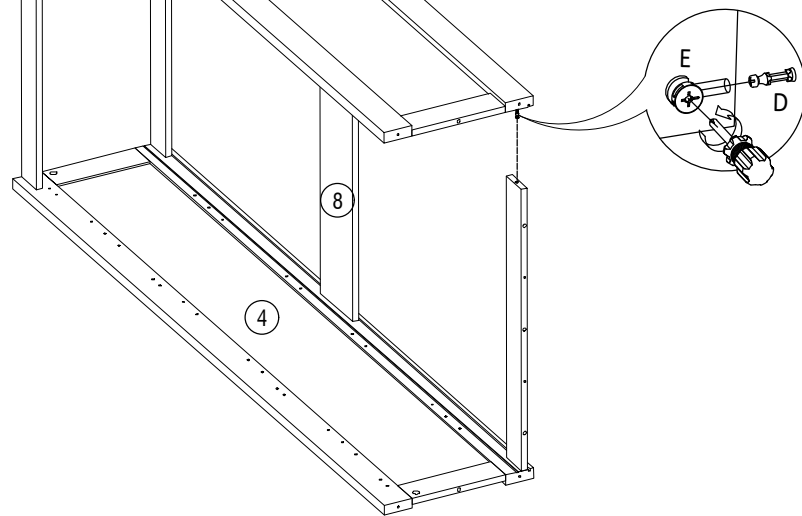


05

J2




Ø 12 X 44 MM 8 X

6

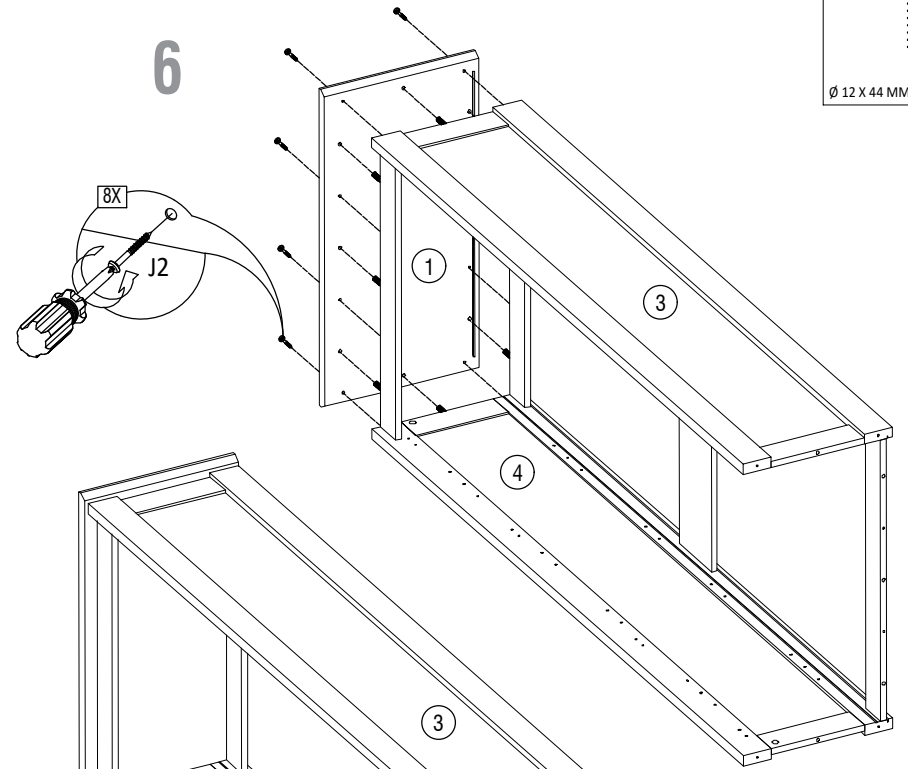


7

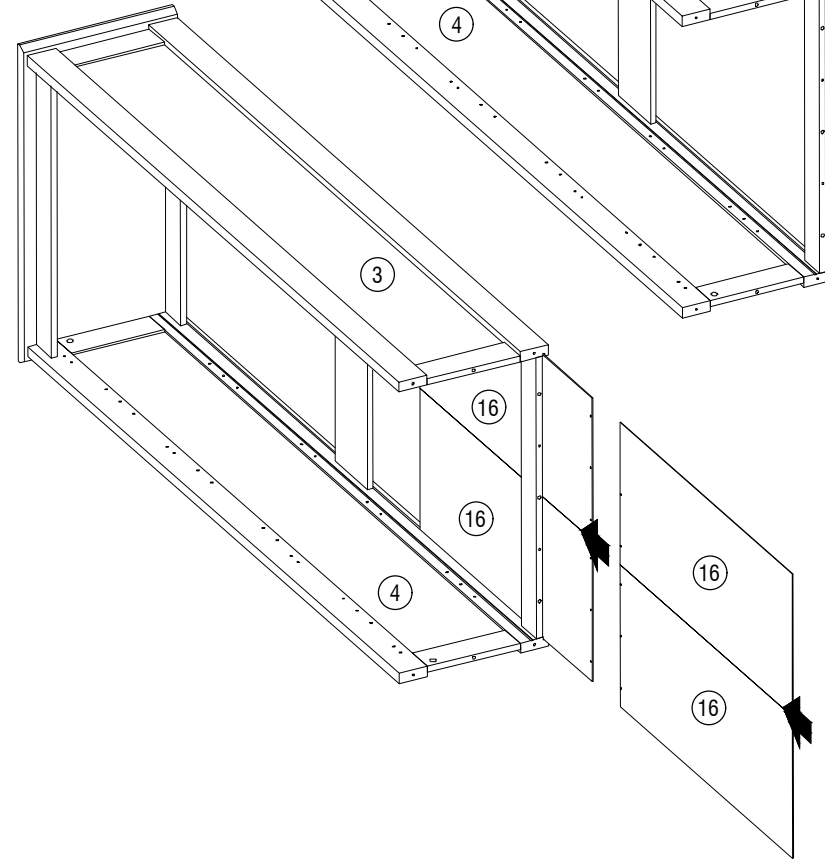


06

8

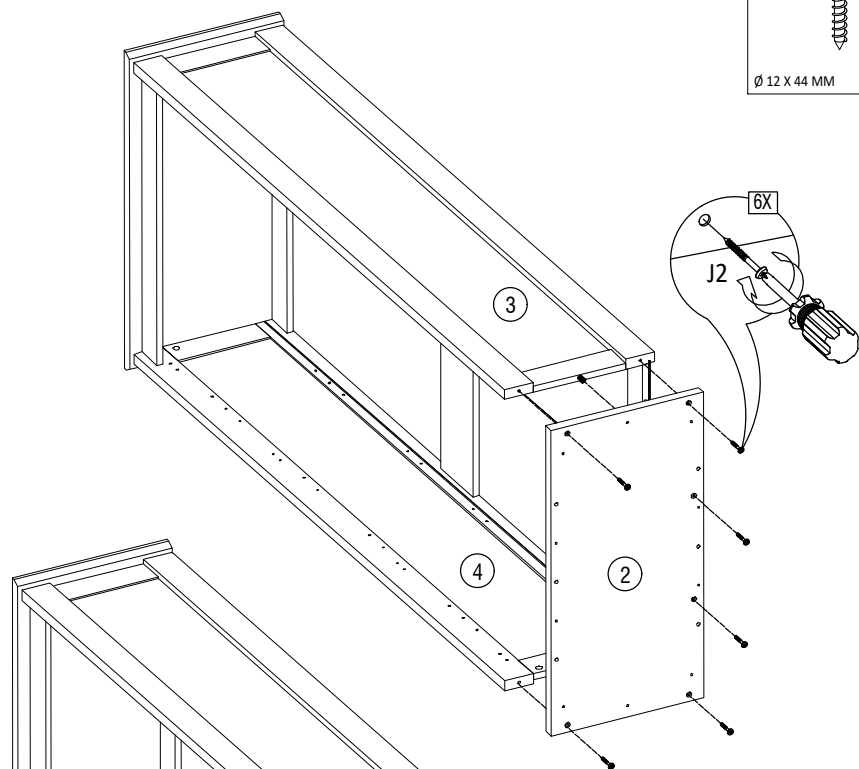

J2
Ø 12 X 44 MM
6 X


9

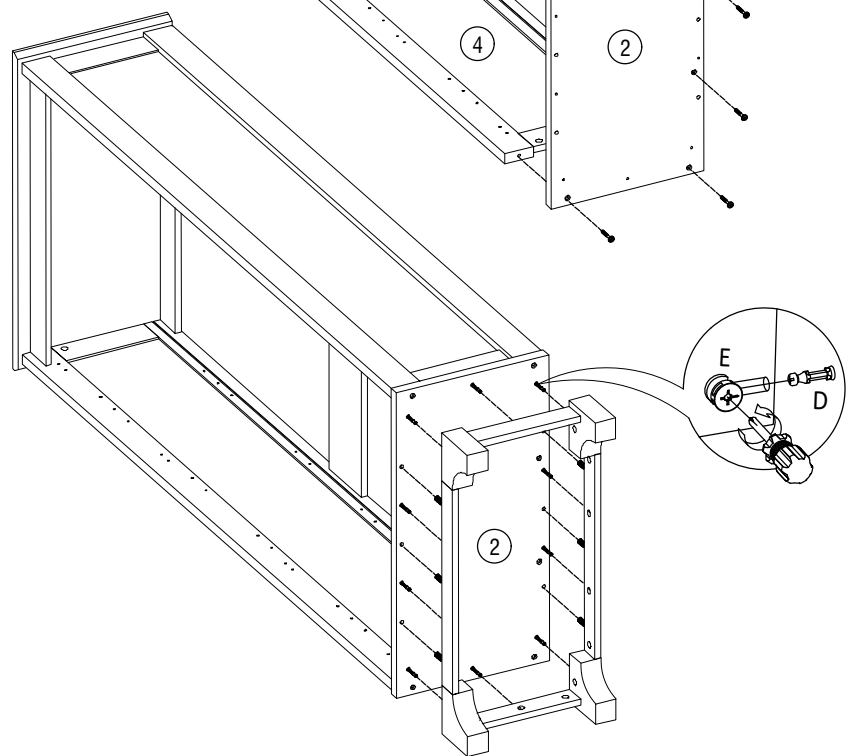

E
D
16 X







07

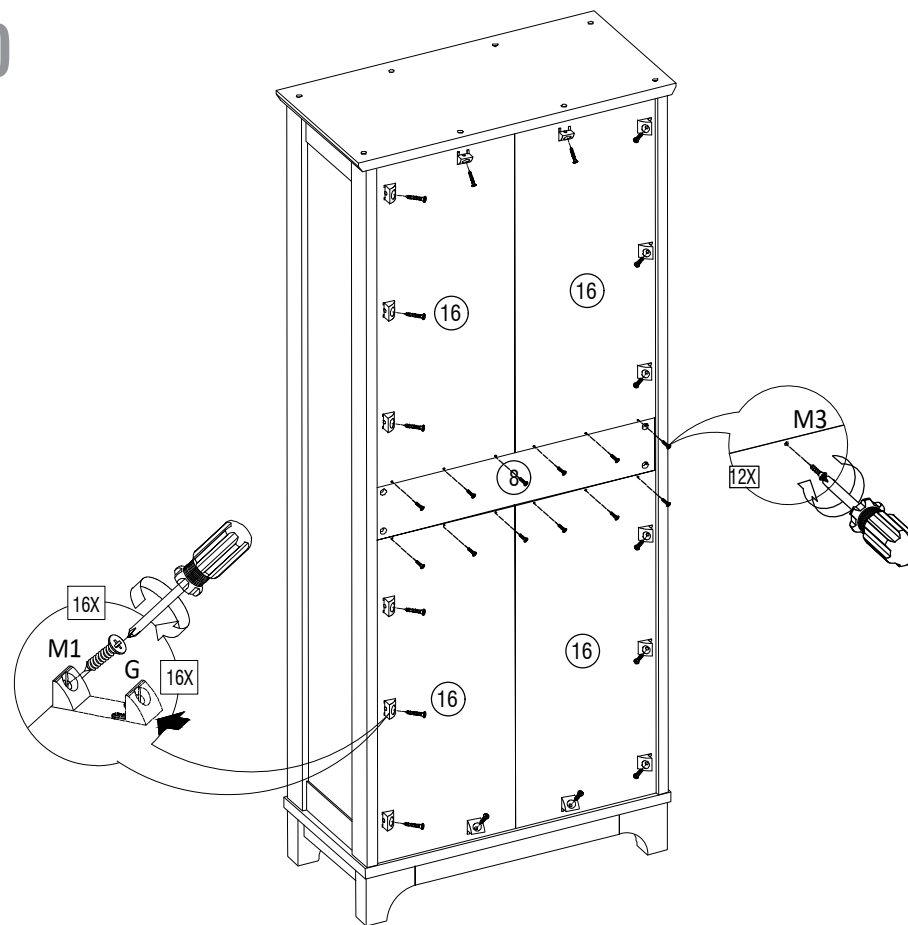10




G	M1	M3
16 X	Ø 4 MM X 16 MM 16 X	Ø 6 MM X 13 MM 12 X

08


RZ	M4	A5	BG	AE1	M3
					
1 X	∅ 9 MM X 13 MM 16 X	∅ 4 MM X 10 MM 2 X	2 X	16 X	∅ 6 MM X 13 MM 2 X





11

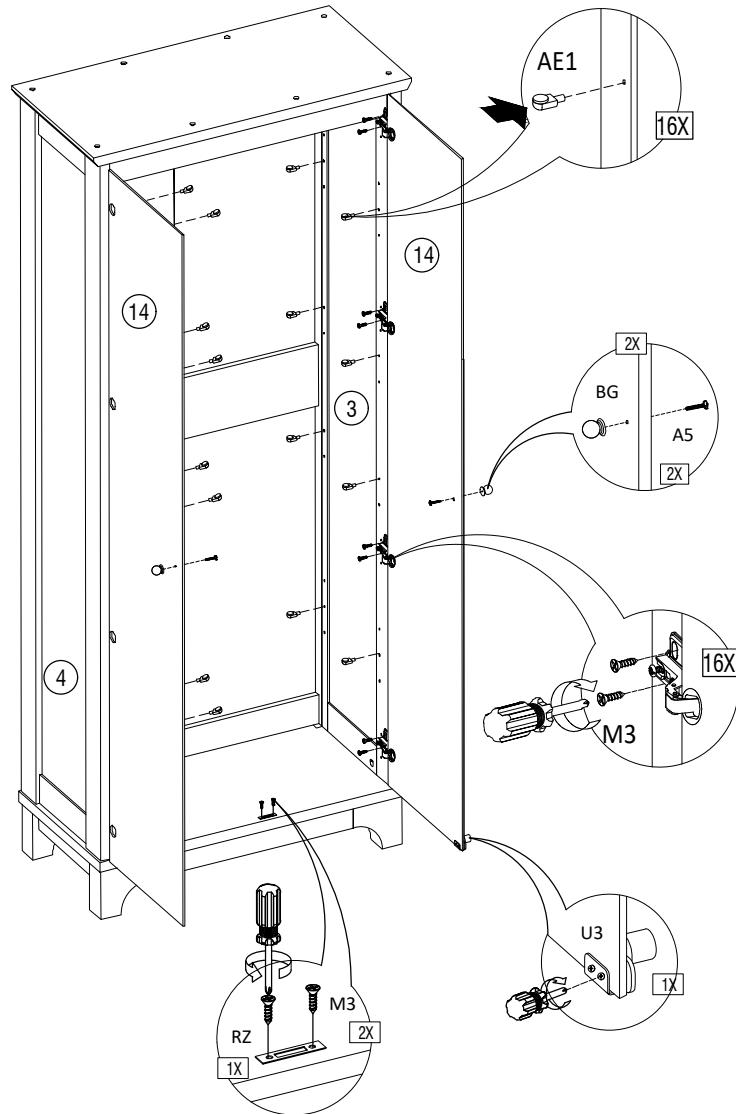


09

12

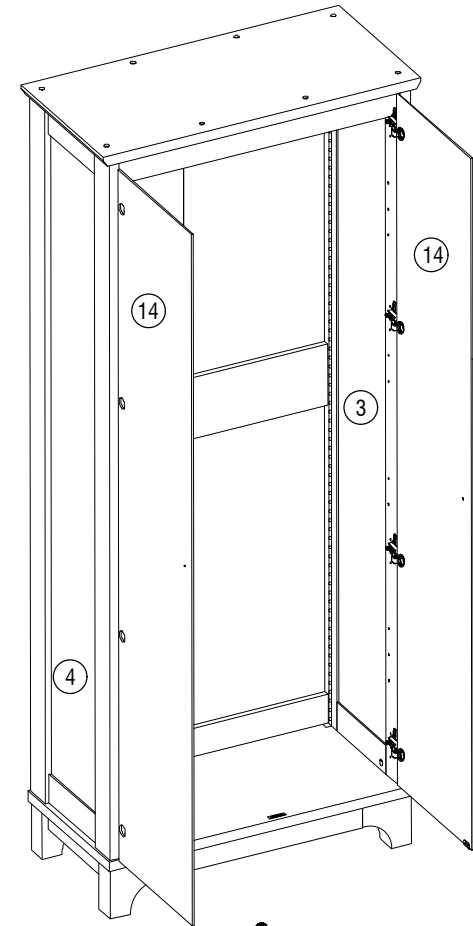

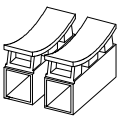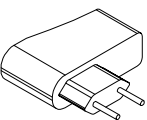BS	BR2
	
2 X	1 X
BR3	AA
	
1 X	1.75 M'

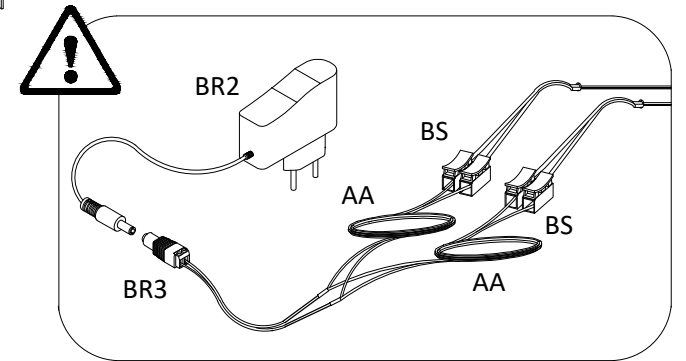

SAMBUNGAN KABEL PADA WARNA YANG SAMA

10

13

2X AN1

AN1



BU




2X



1X

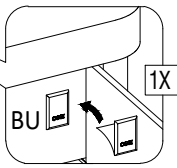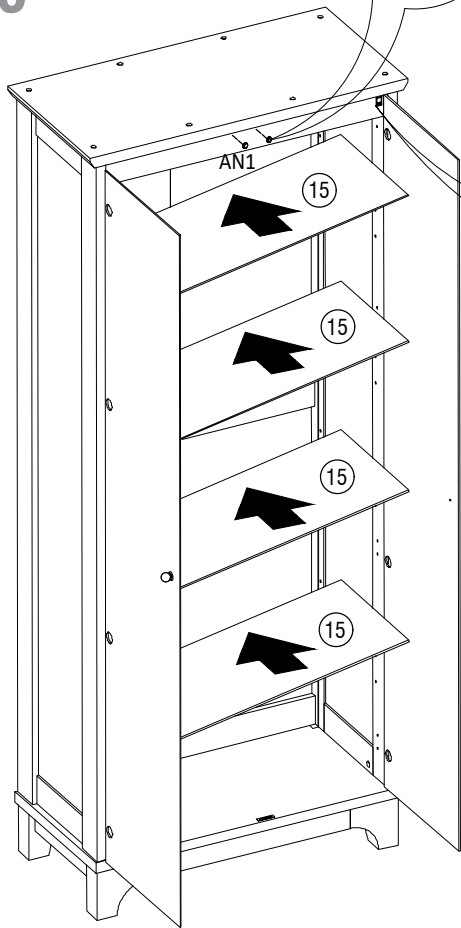

14

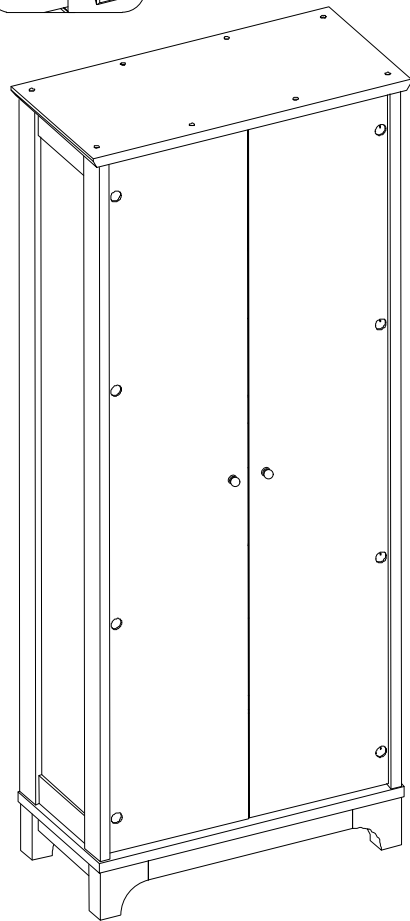

11

12