

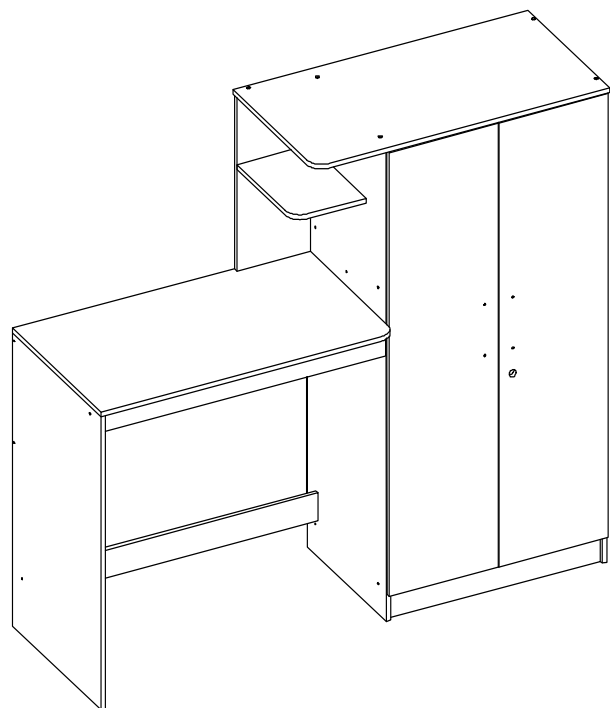
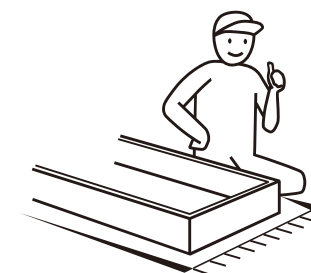
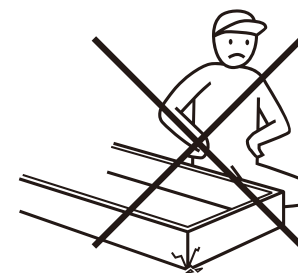







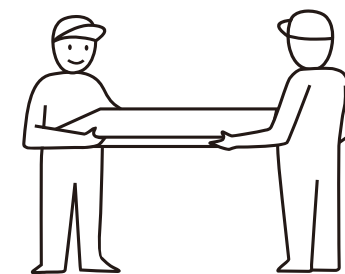



ASSEMBLING INSTRUCTION

AMARI STUDY DESK 140

TUSCANY OAK - WHITE

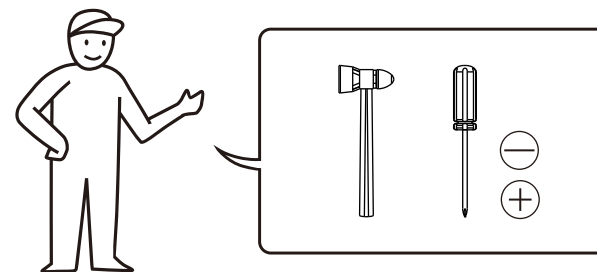


 Ø 10 MM X 44 MM	 8 X	 INSET 4 X	 Ø 6 MM X 13 MM	 Ø 6 X 30 MM	 Ø 12 MM X 10 MM 8 X
 1 X	 2 X	 Ø 16 MM 1 X	 Ø 9 MM X 12 MM 8 X	 19 MM 12 g	 4 X
 Ø 6 MM X 25 MM	 1 X	 12 MM 2 SET	 Ø 6 MM X 16 MM	 12 MM 2 X	 TUSCANY OAK 5 X


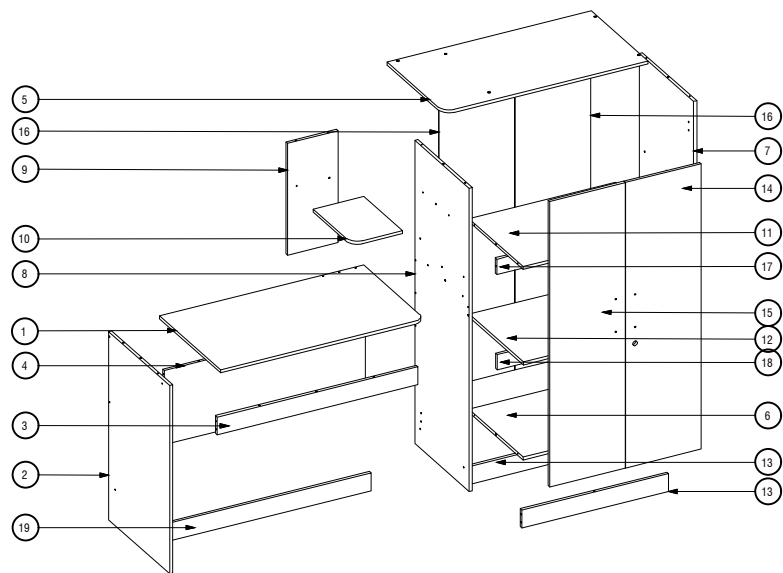




 x2 ±45 M 


01

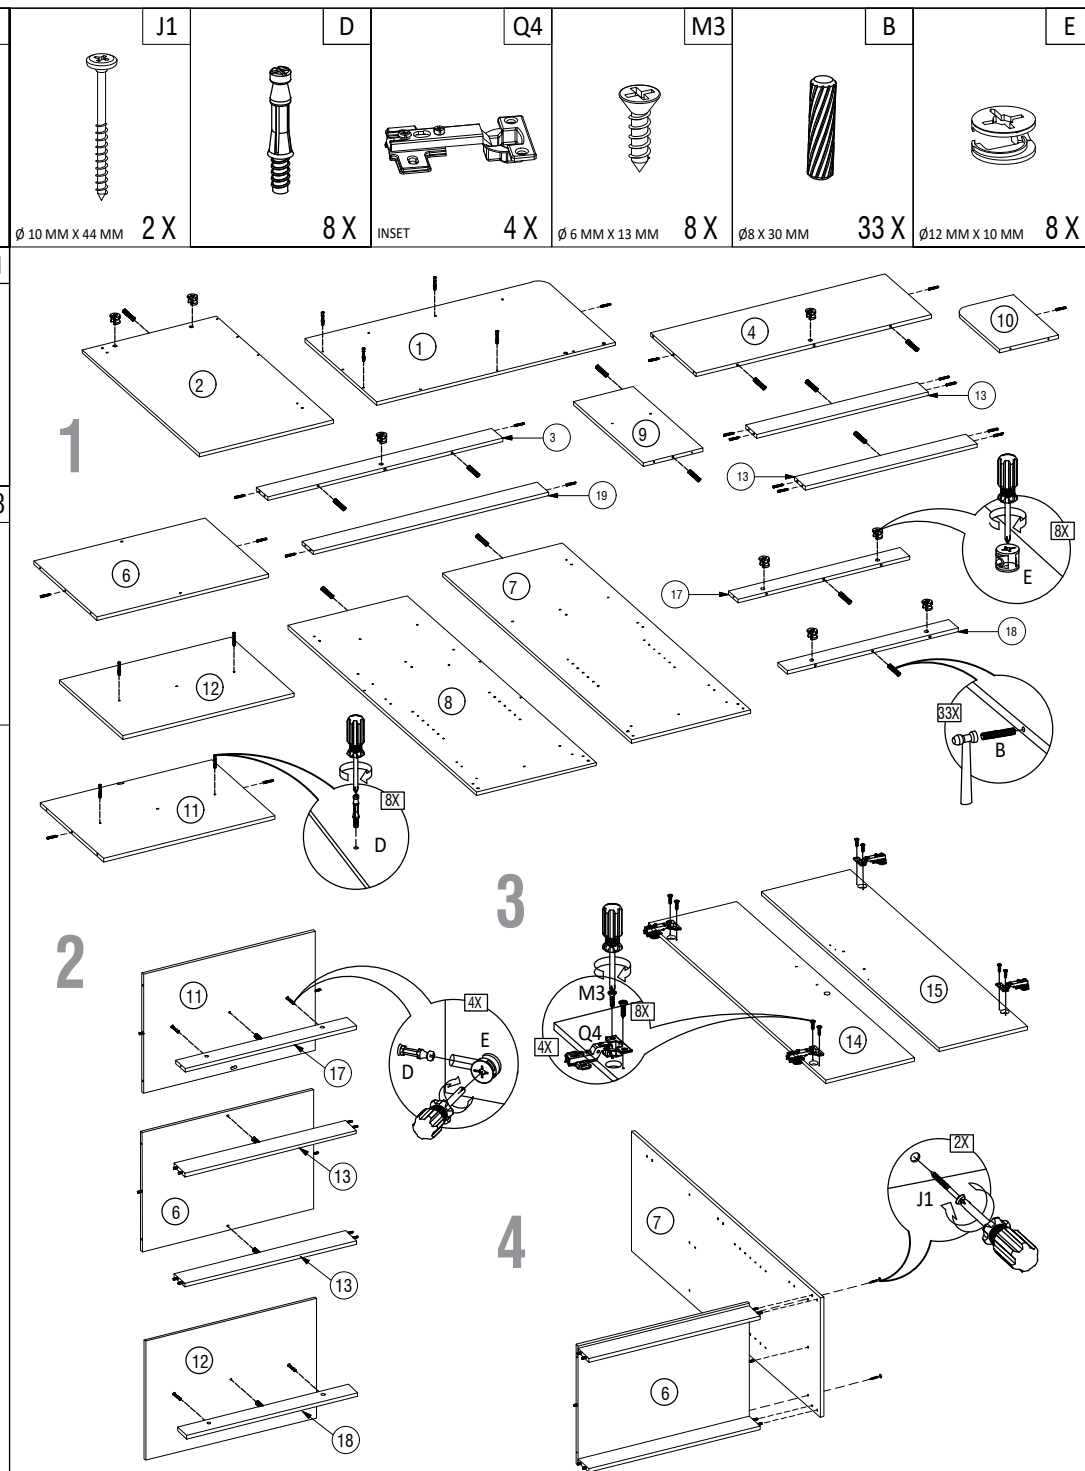

02

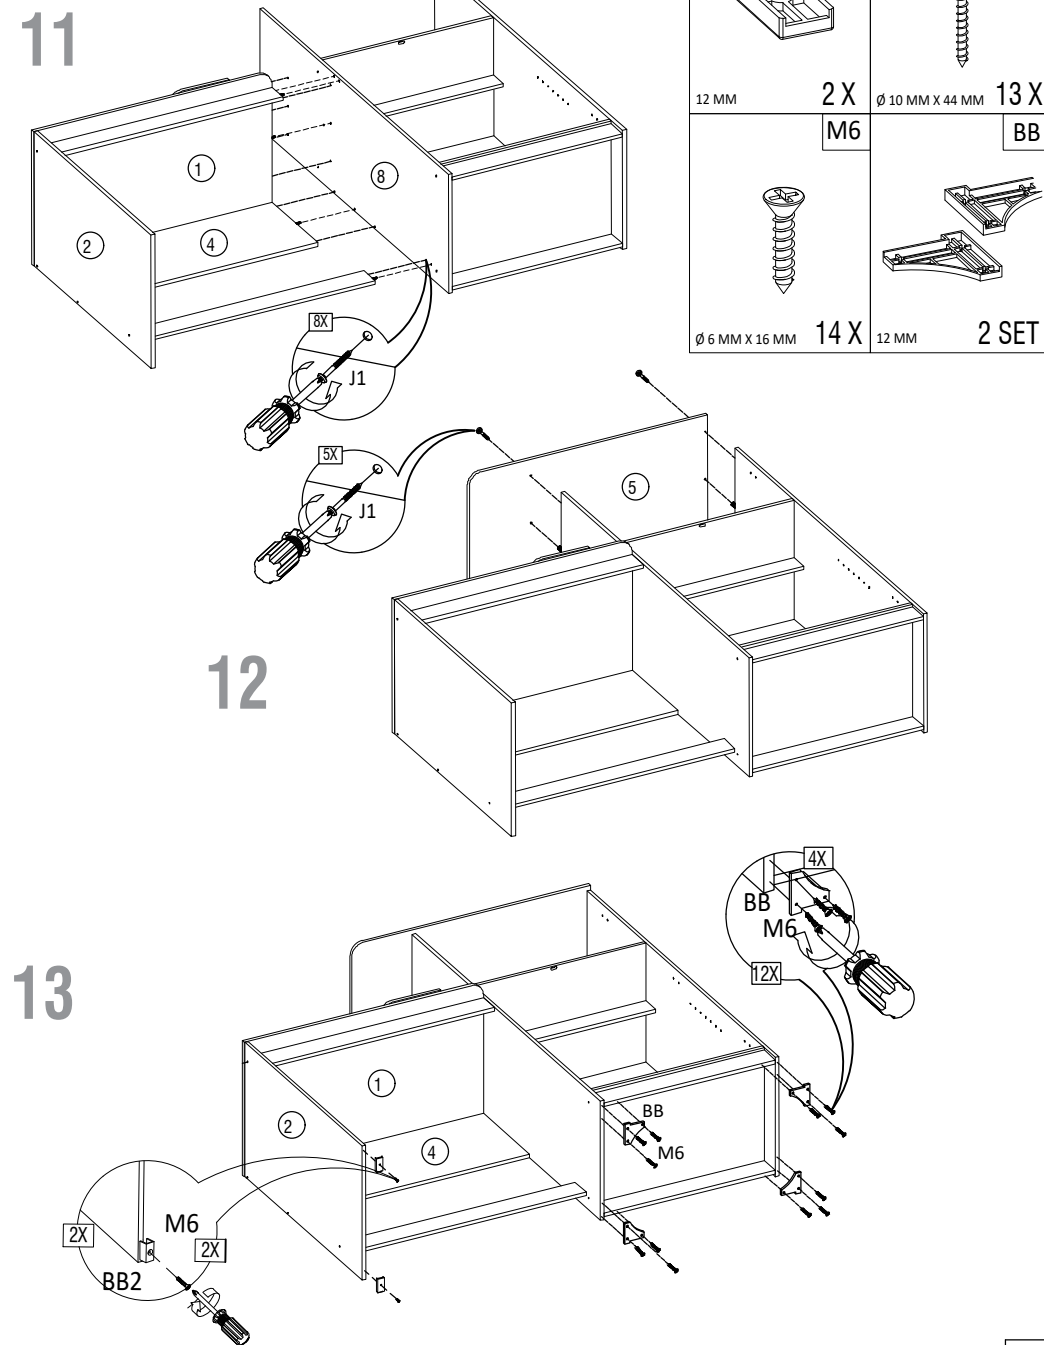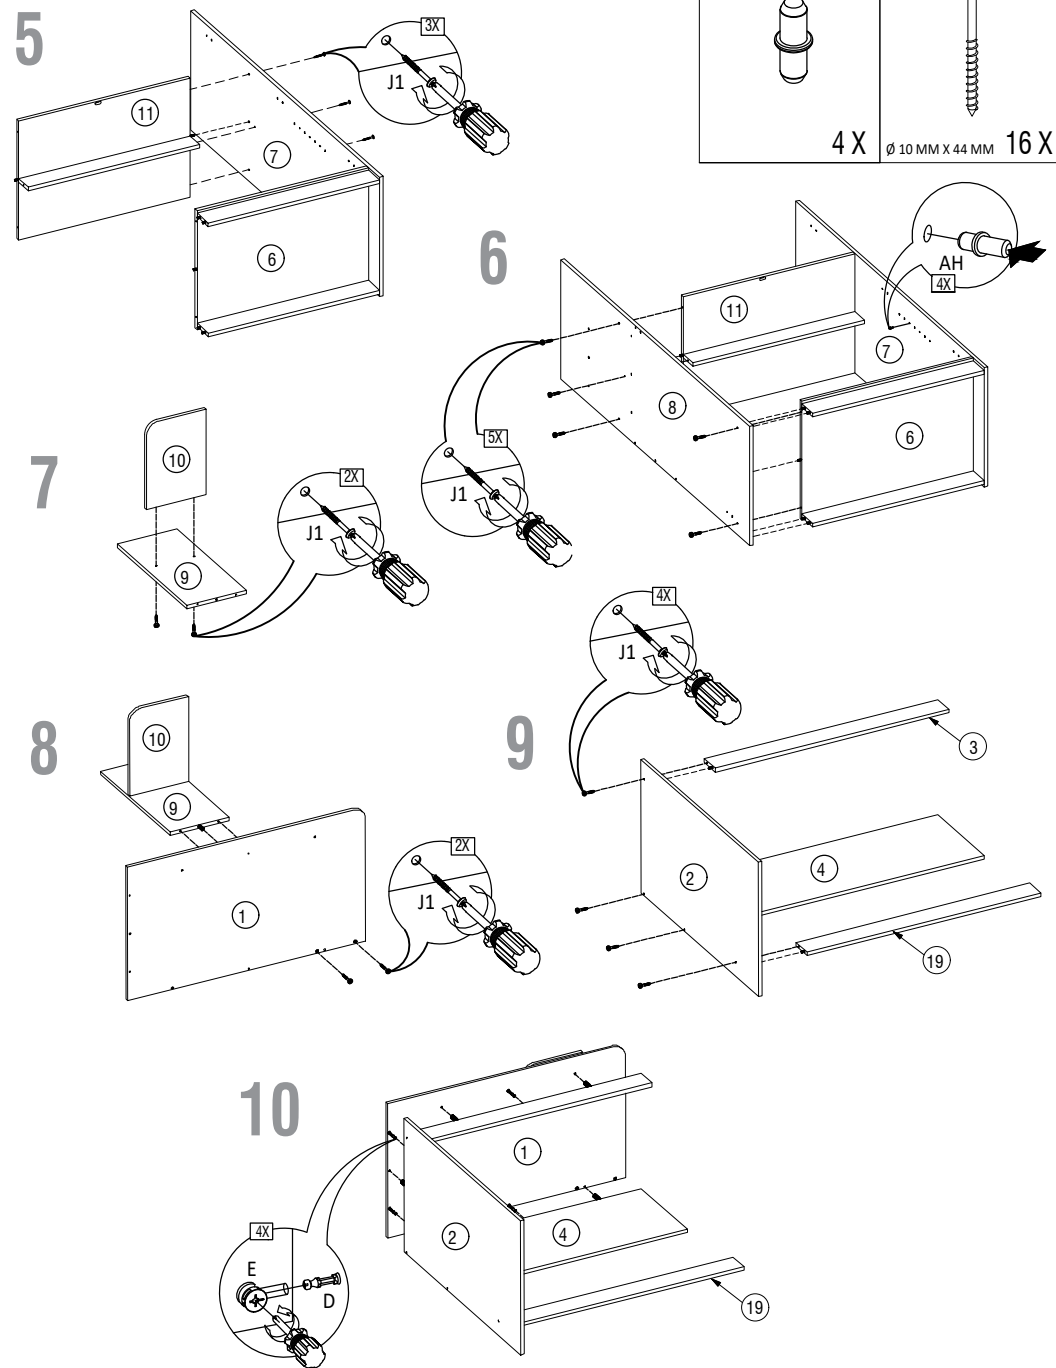

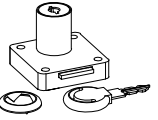					
Ø 6 MM X 25 MM		Ø 6 MM X 13 MM		Ø 16 MM	Ø 9 MM X 12 MM
2 X	1 X	5 X	2 X	1 X	8 X

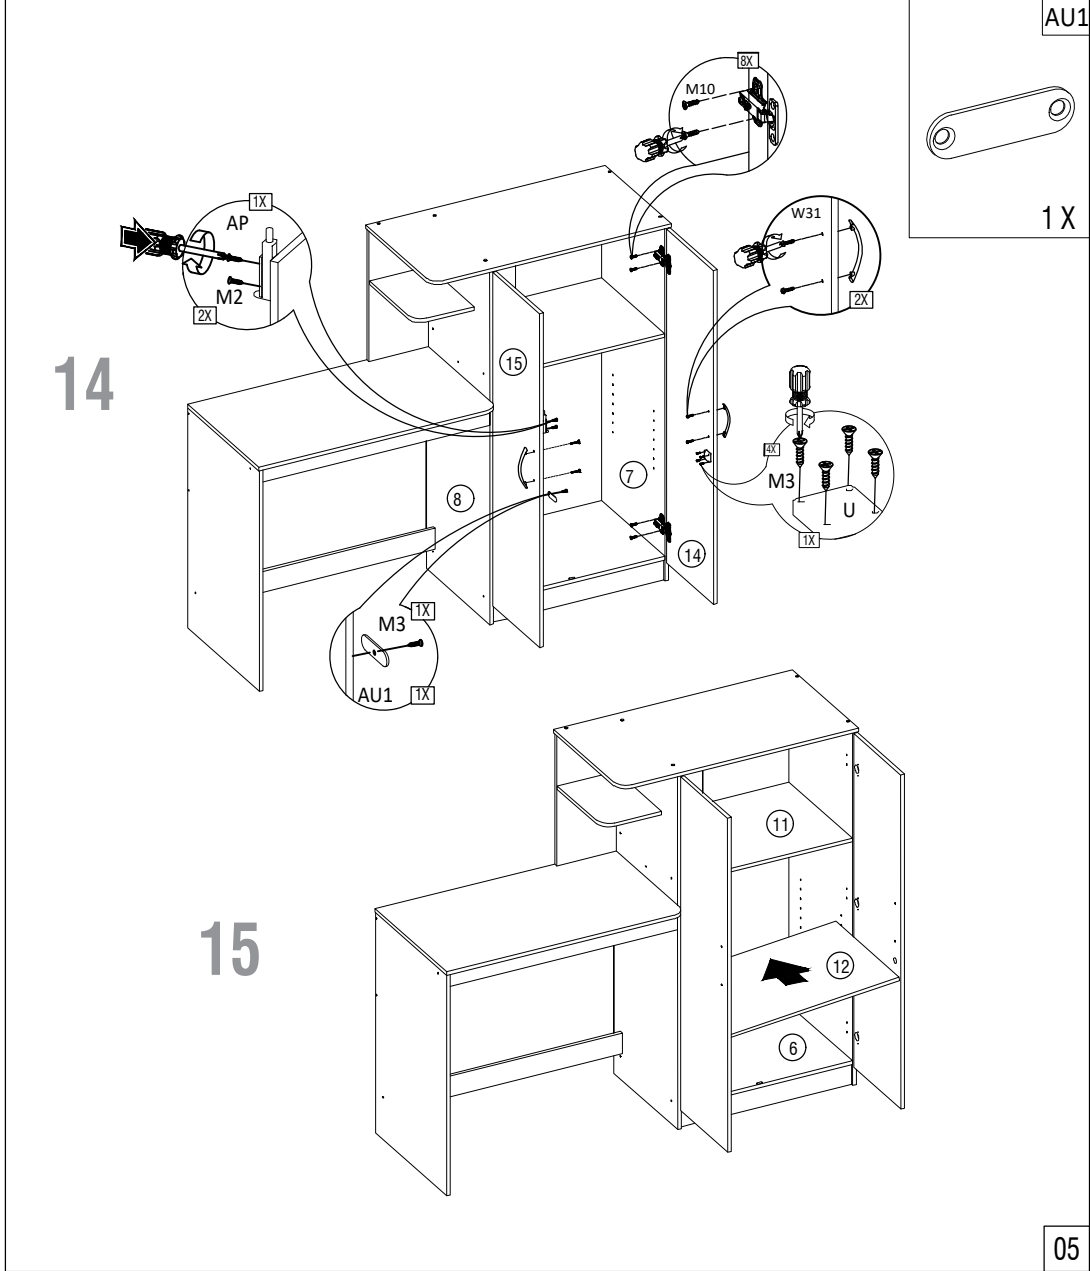

	
TUSCANY OAK	19 MM
5 X	12 g

