

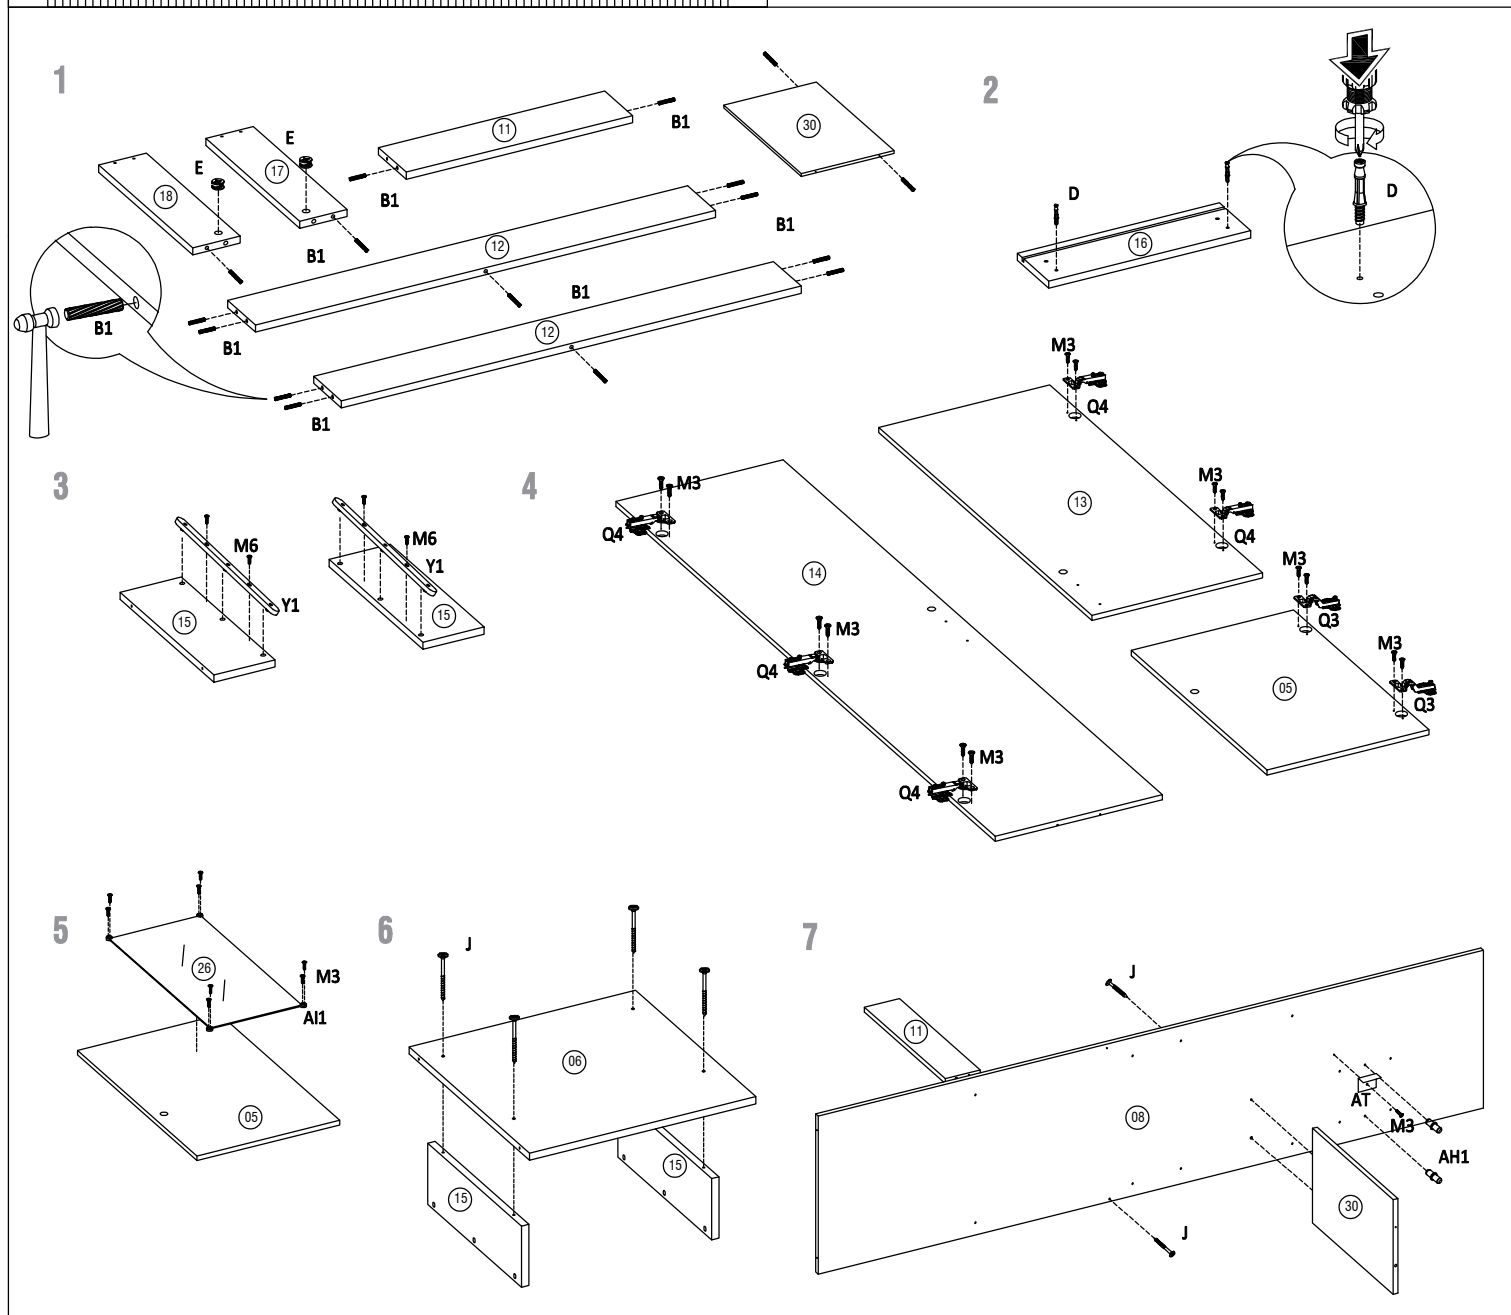



E Ø12 MM X 10 MM 2 X	D Ø6 MM X 30 MM 2 X	B1 Ø10 MM X 44 MM 16 X	J Ø6 MM X 38 MM 32 X	L Ø6 MM X 25 MM 4 X	M2 3 X
F 13 MM 3 g	F1 19 MM 11 g	Q4 INSET 5 X	U Ø16 MM 3 X	Y1 300 MM 1 SET	W31 2 X
BB 12 MM 2 SET	BB6 12 MM 2 X	CA3 SAYAP BLACK 12 MM 1 X	M3 Ø6 MM X 13 MM 37 X	M6 Ø6 MM X 16 MM 18 X	AI1 BLACK 4 X
AG 2 X	Q3 FULL OVERLAY 2 X	AH1 4 X	AT Ø9 MM X 13 MM 1 X	M4 14 X	

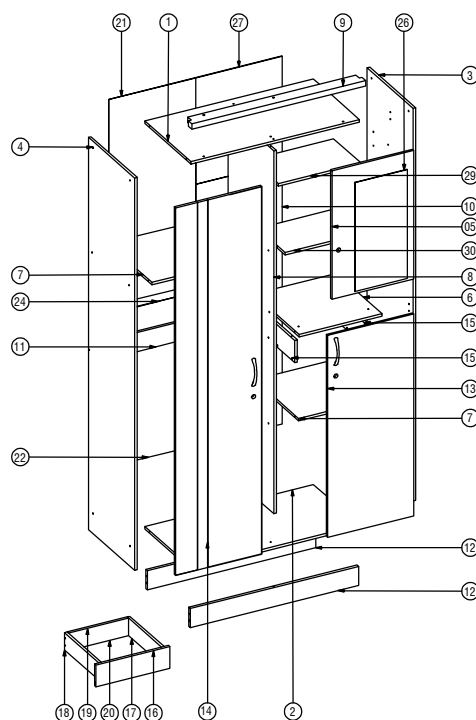


8

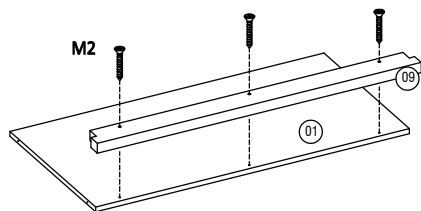


9

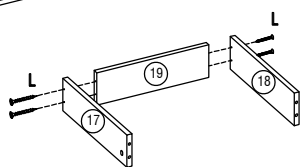


10

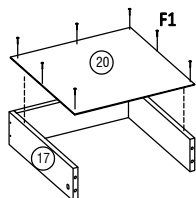


11

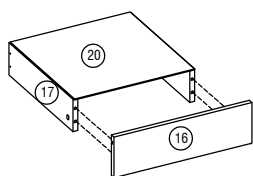


12

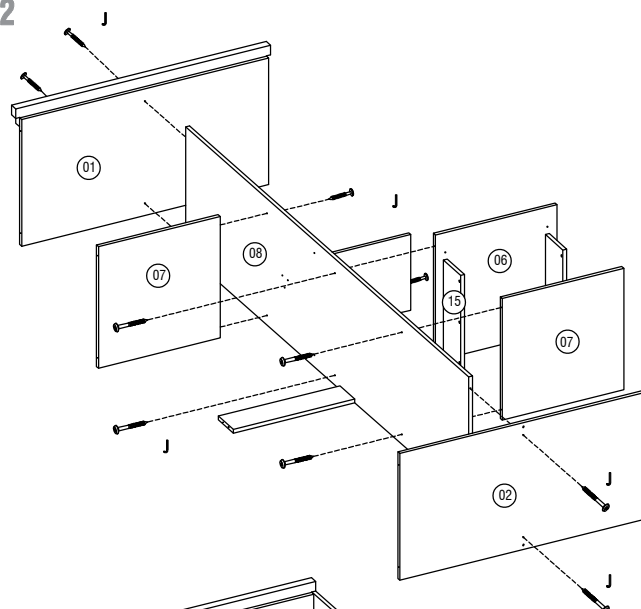




13

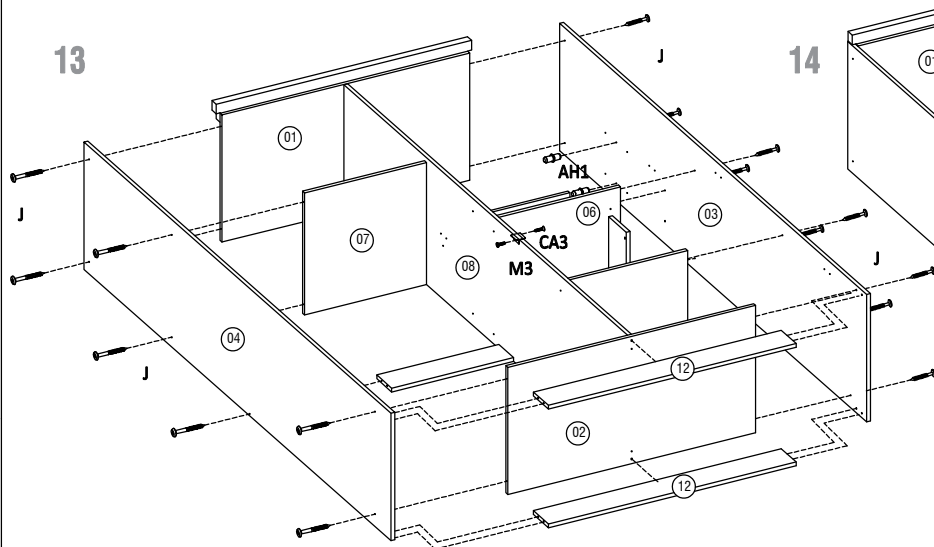

14

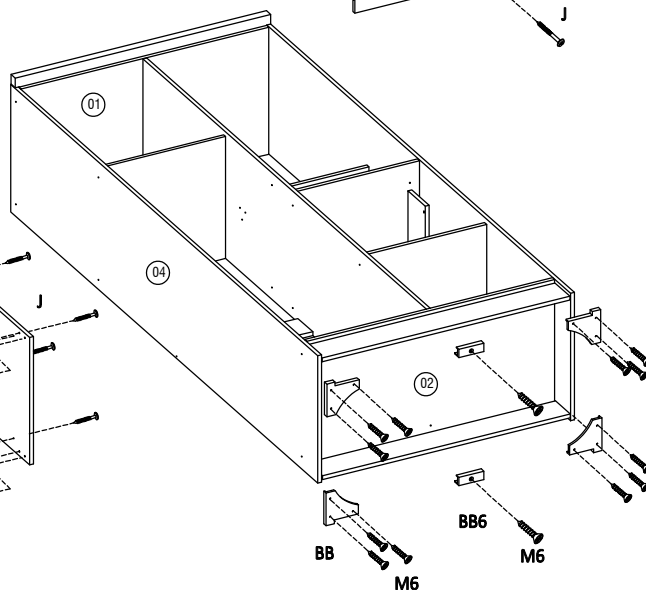

15

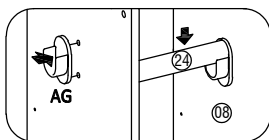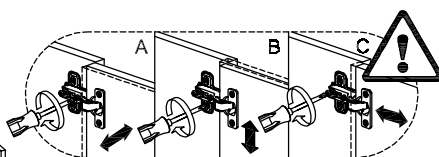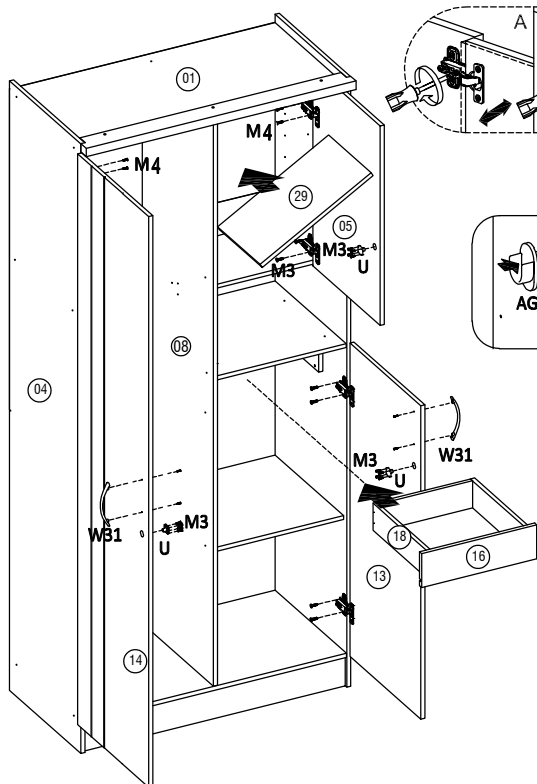

TUTORIAL SETTING ENGSEL

16

