

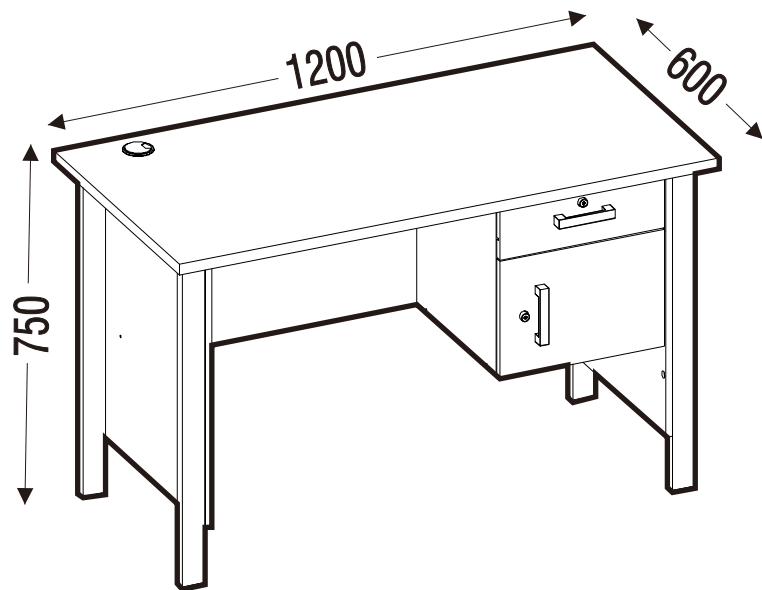
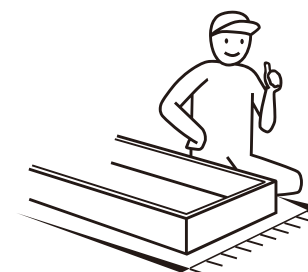
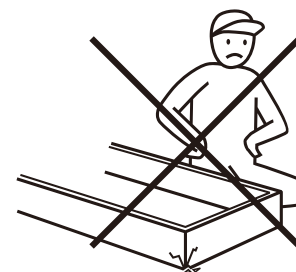



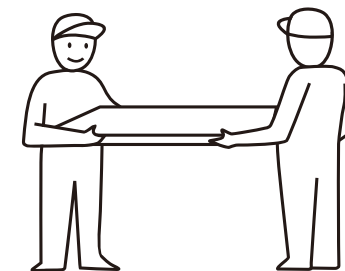


ASSEMBLING INSTRUCTION

ACERO WORKING DESK 120


RUSTIC WALNUT - BLACK


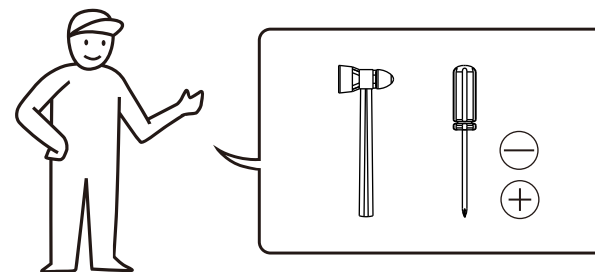


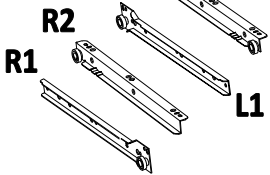011401  10 X Ø6 MM X 1 1/2"	011601  4 X	010502  6 X	010803  10 X	010701  10 X	160501  10 X
160502  8 X	060121  2 X	020301  2 X	090701  2 X	030202  2 X	160702  1 X
011704  30 X Ø6 X 1/2"	011707  8 X Ø6 X 5/8"	040303  R1 R2 L1 L2 1 X		160601  1 X Ø9 MM X 13 MM	RY  4 X



KODE 160502 & 160501 DAPAT BERUPA STIKER DENGAN WARNA MENYESUAIKAN FOIL

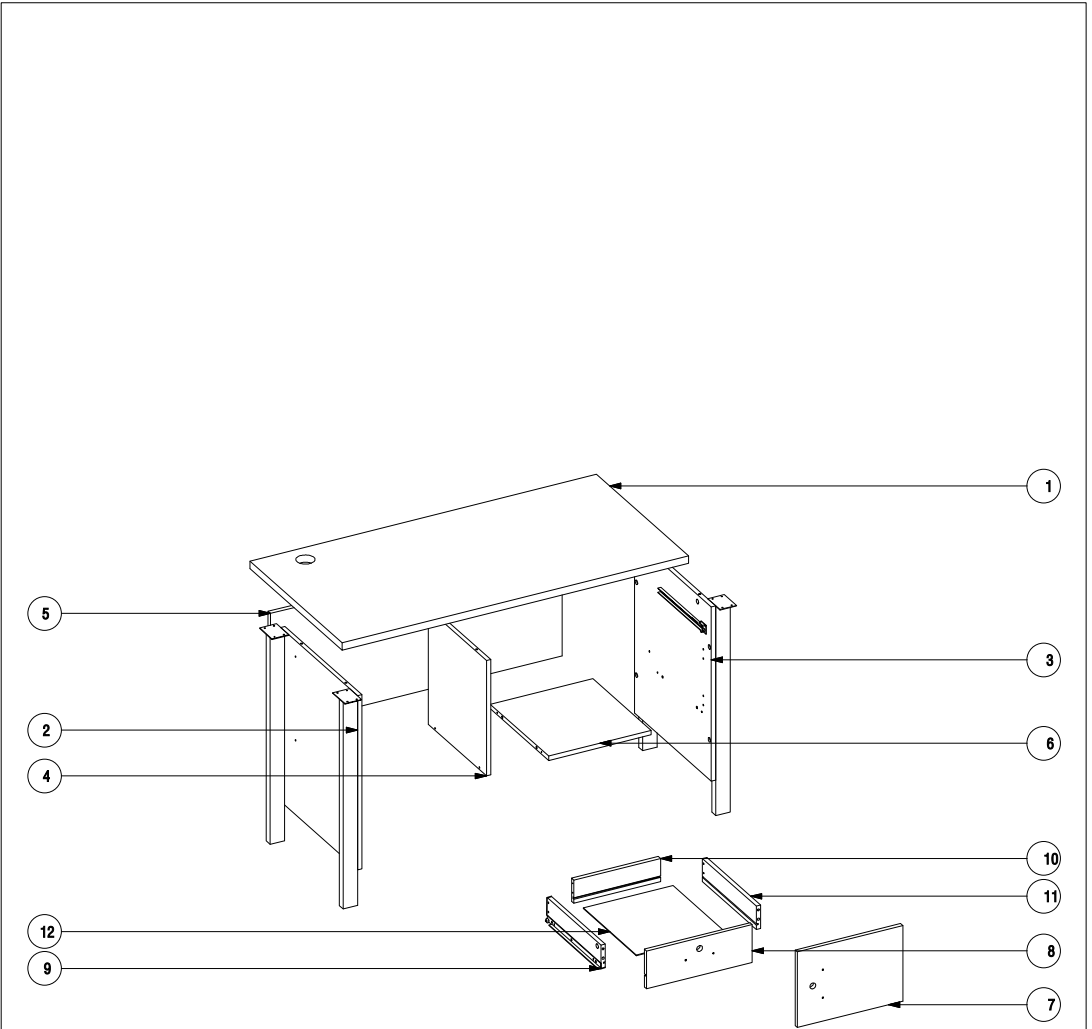


010701  8 X	011704  6 X	090701 	040303 R1  1 X	040303 L1  1 X
--	--	---	---	--

Ø6 X 1/2"

2 RIGHT 1 LEFT


1

2



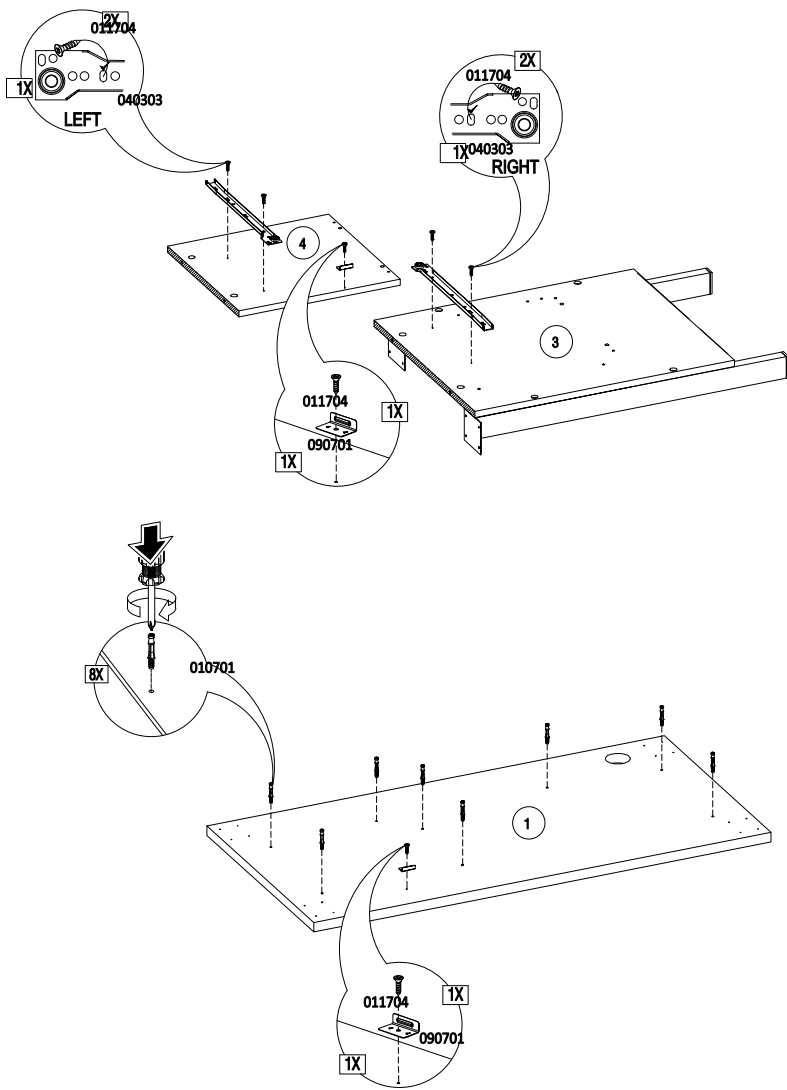


00-2021/09/16

05

160501  2 X	010502  2 X	011704  4 X	030202  1 X	060121  1 X	010701  2 X
--	--	--	--	--	--

Ø6 X 1/2"

011707  4 X	040303 R2  1 X	040303 L2  1 X	011601  4 X	010803  2 X
--	---	---	--	--


Ø6 X 5/8"

Ø6 MM X 1 1/2"

3

4


5

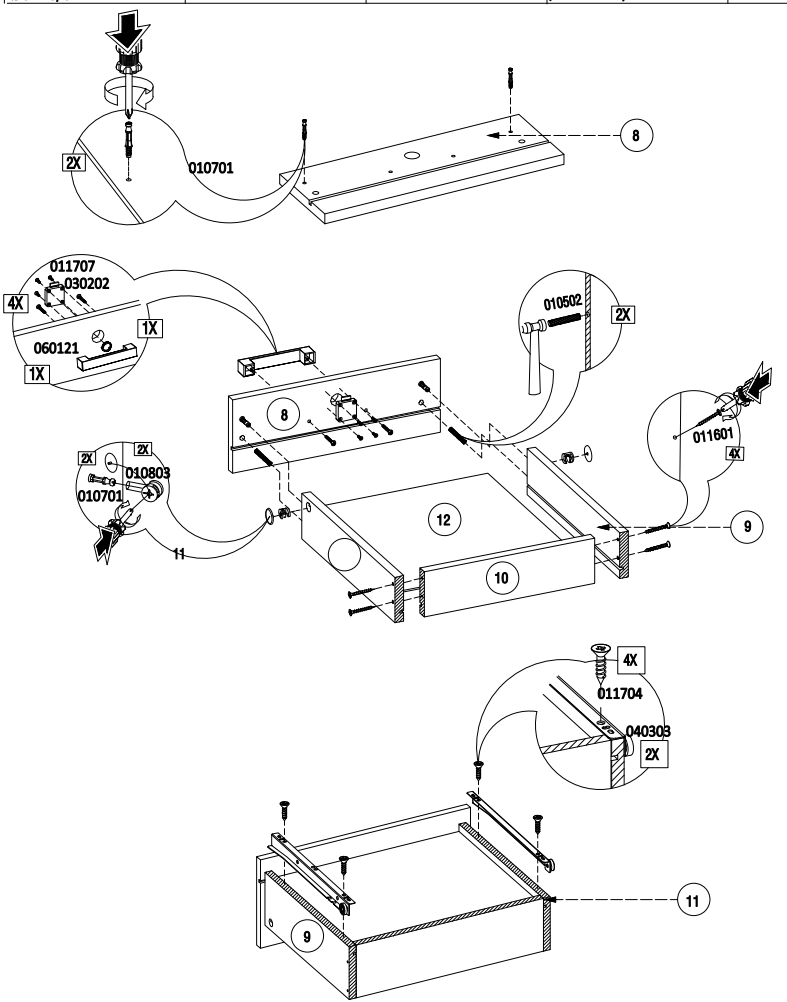


00-2021/09/16

06

6

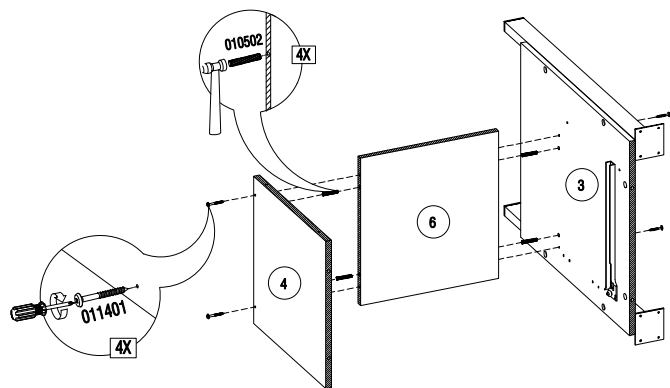

7

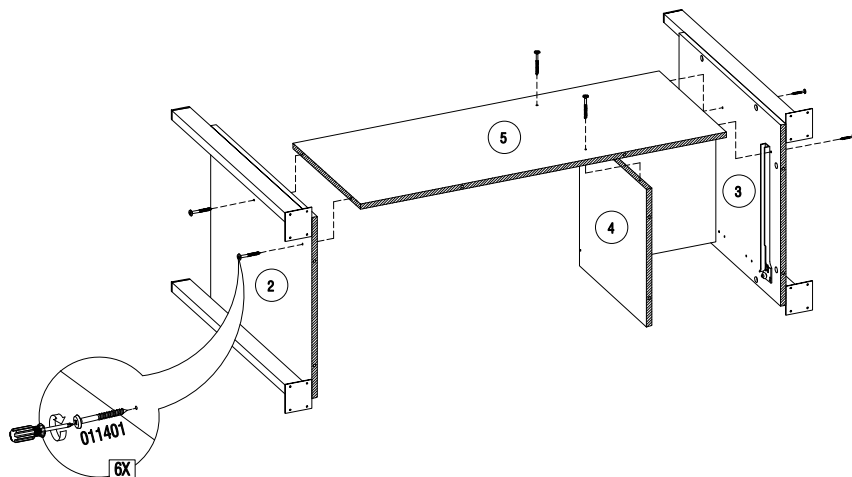

011401



10 X

010502




4 X

00-2021/09/16

07

8

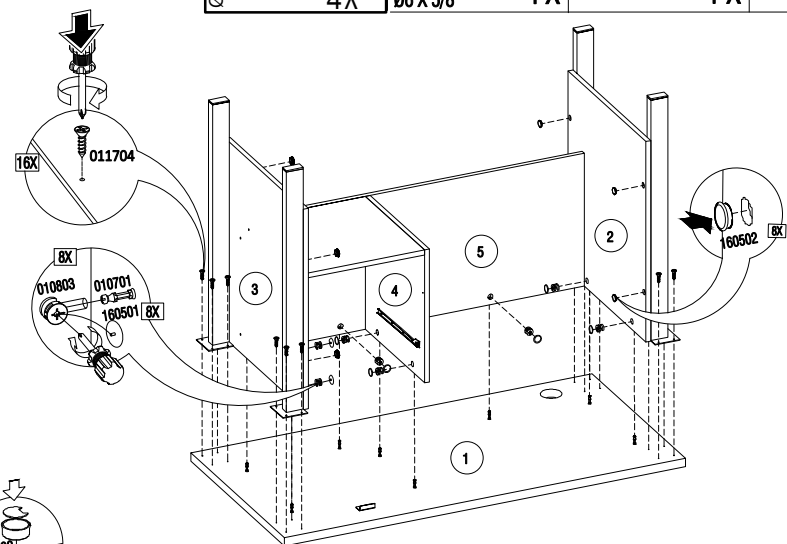

160501



8 X

010803




8 X

011704




20 X

030202



1 X

060121




1 X

160502



8 X

011707




4 X

160702



1 X

020301




2 X

9




TUTORIAL SETTING ENGSEL

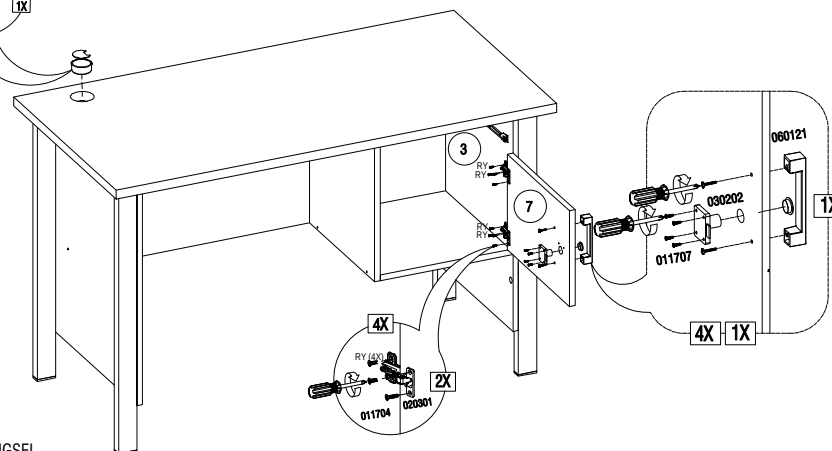

00-2021/09/16

08

10

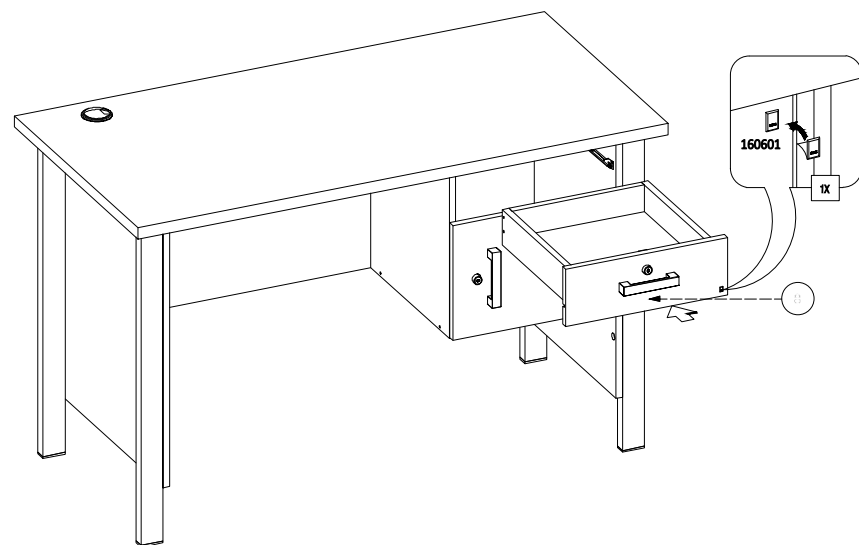

160601



1X

11

