

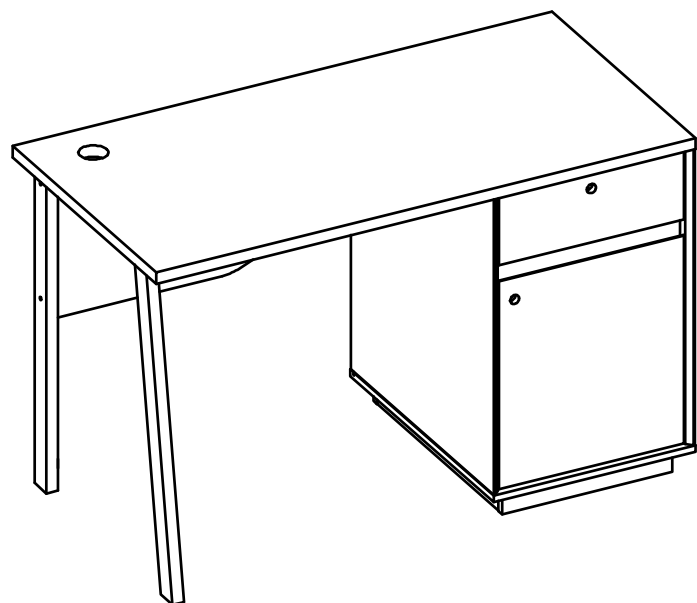
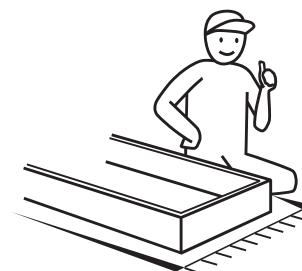
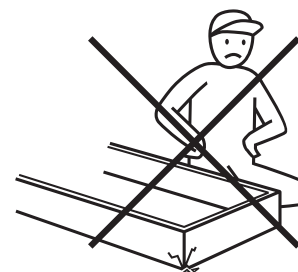








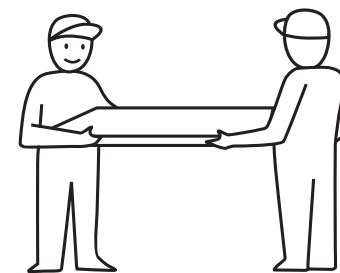




ASSEMBLING INSTRUCTION

NARA WORKING DESK 120F


AMERICAN WALNUT-GRAPHITE

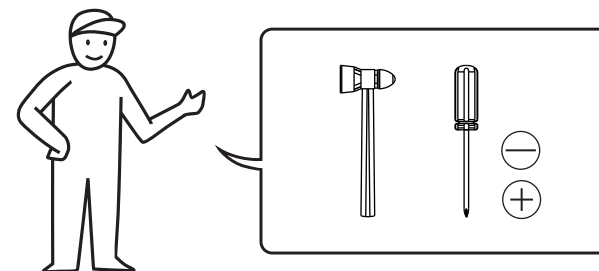

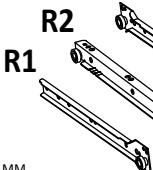
					
17 X	17 X	7 X	10 X	4 X	2 X
Ø15 MM X 12 MM	Ø8 X 30 MM	Ø12 X 44 MM	Ø6 MM X 32 MM	FULL OVERLAY	
					
2 X	14 X	2 X	1 X	2 X	2 X
Ø19 MM	Ø6 MM X 13 MM	Ø6 MM X 60 MM		Ø10 X 44 MM	
					
350 MM	1 SET	7 X	2 X	4 X	8 X
		GRAPHITE	AMERICAN WALNUT		
					
8 X	16 X	8 X	1 X		
15 MM	Ø6 MM X 16 MM	Ø4 MM X 16 MM			

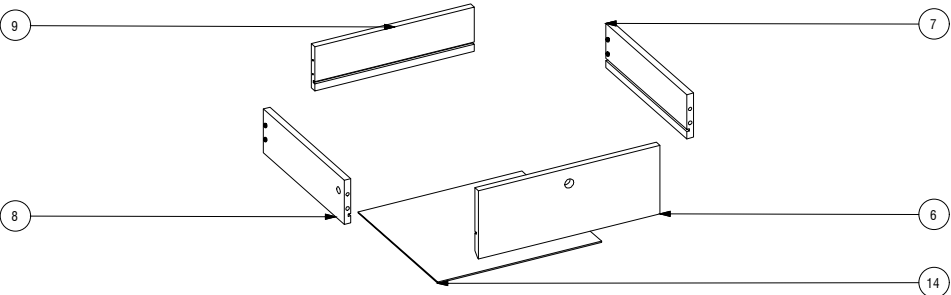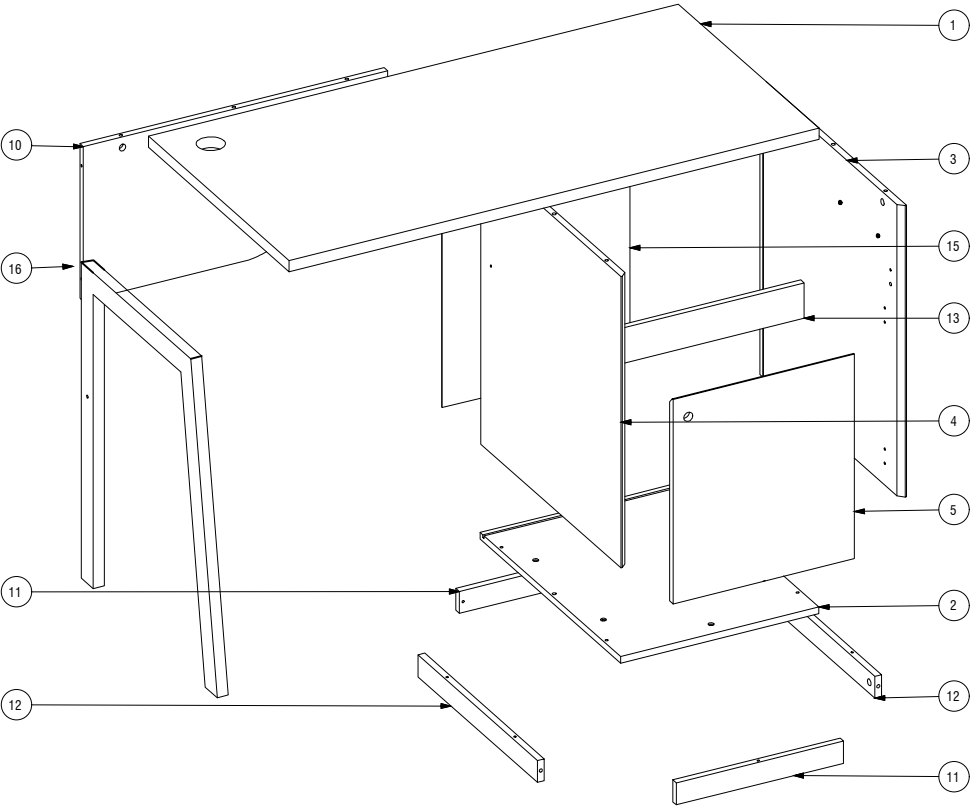



1

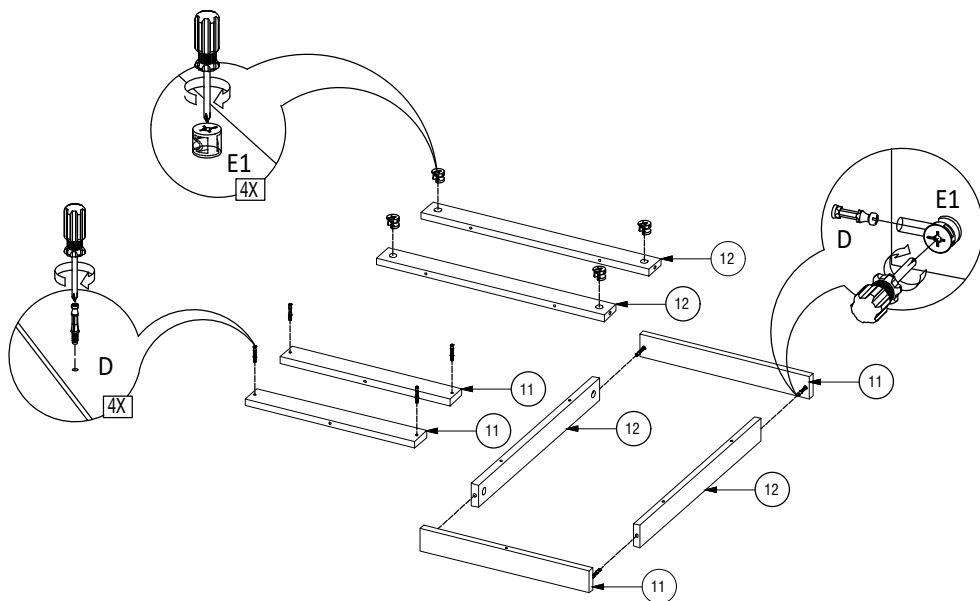


2

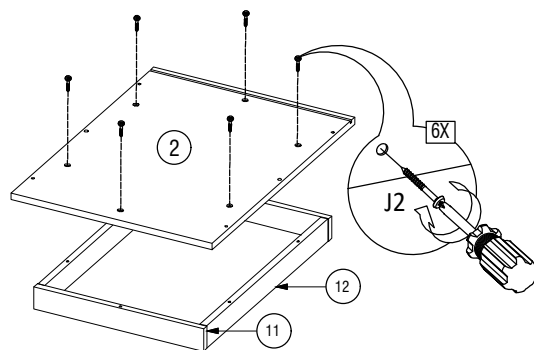

03

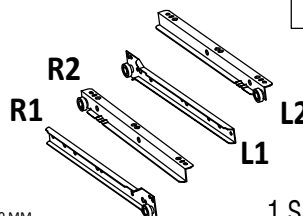D  4 X	E1  4 X Ø15 MM X 12 MM	J2  6 X Ø 12 X 44 MM	Z1  1 SET 350 MM	M3  5 X Ø 6 MM X 13 MM	B  5 X Ø8 X 30 MM	D  4 X	E1  6 X Ø15 MM X 12 MM
--	--	--	---	--	---	--	--

3

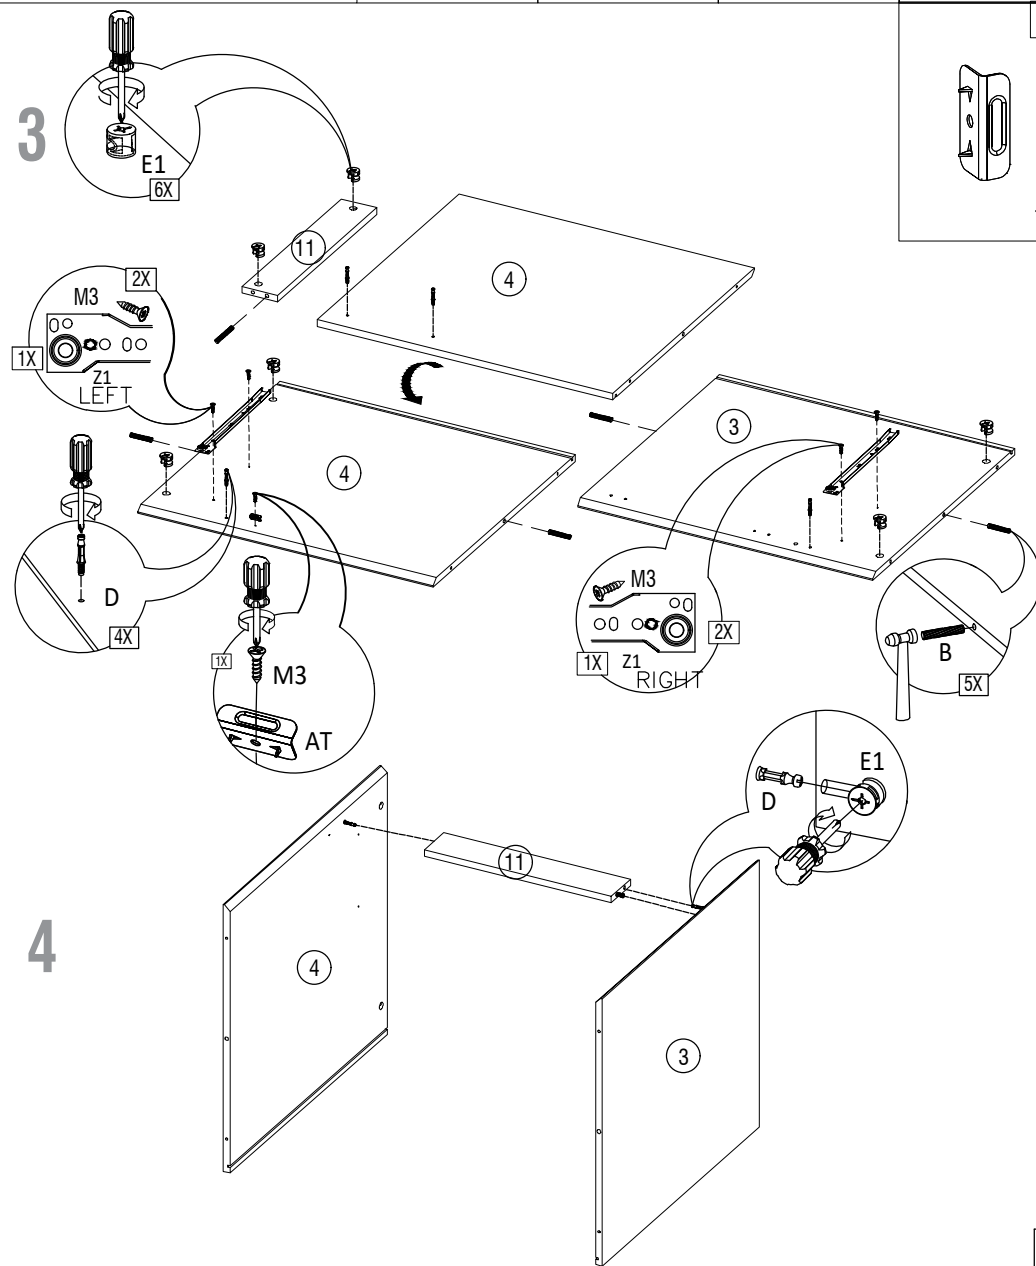

4

04


1 X

AT



5


6

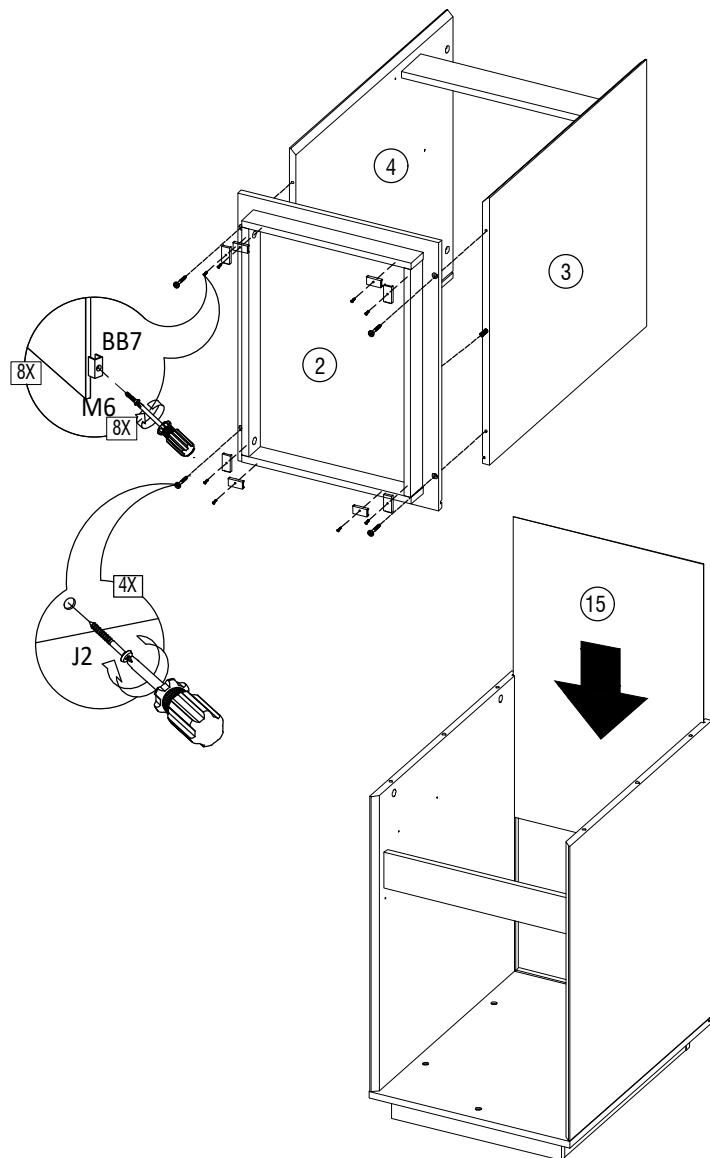

BB7 15 MM 8 X	M6 Ø 6 MM X 16 MM 8 X	J2 Ø 12 X 44 MM 4 X	B Ø 8 X 30 MM 2 X	U1 Ø 19 MM 1 X	M3 Ø 6 MM X 13 MM 4 X	L1 Ø 6 MM X 32 MM 4 X	D 2 X	E1 Ø 15 MM X 12 MM 2 X
---------------------------------------	---	---	---	--	---	---	----------------------------	--


7

8



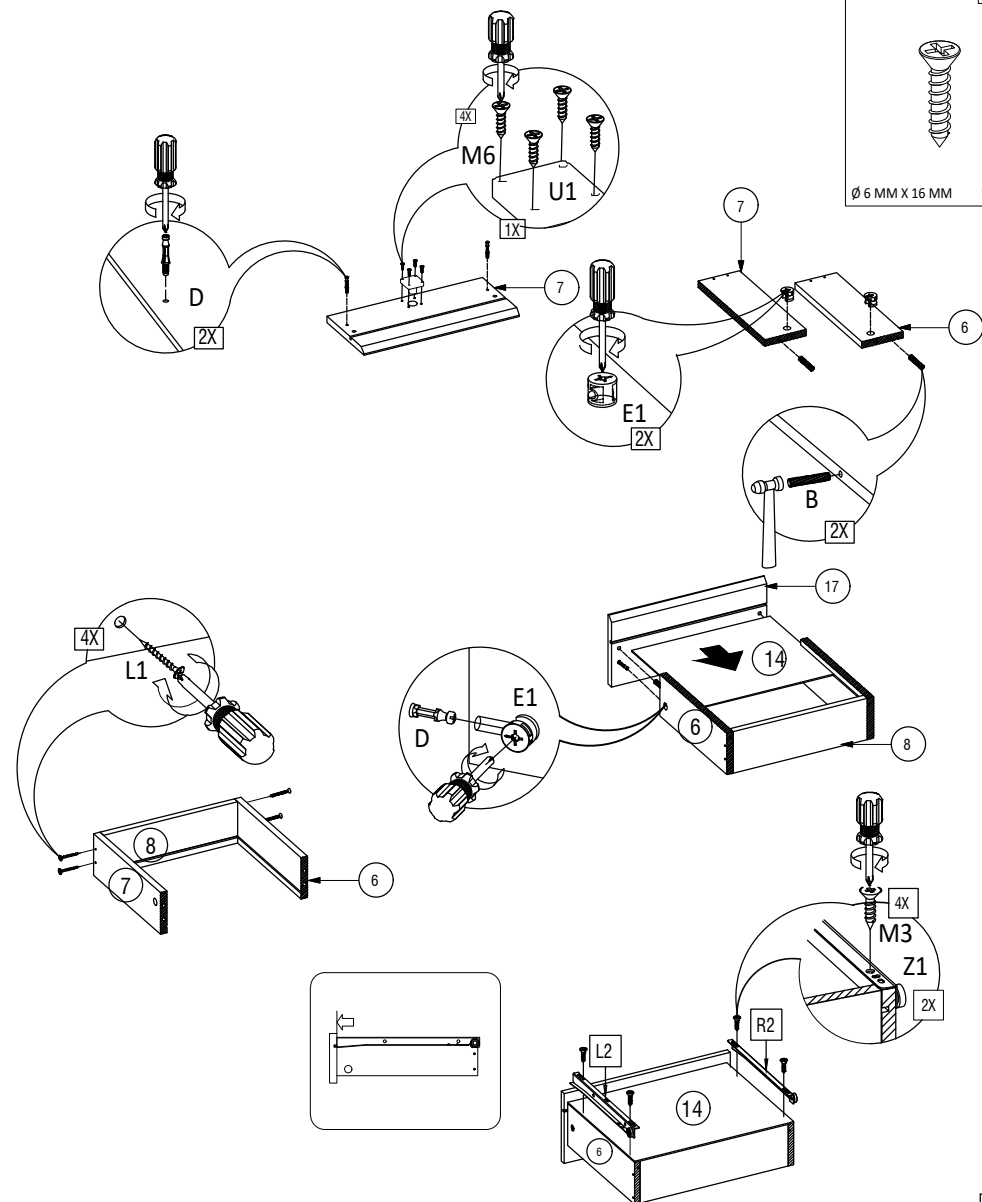


M6


4 X




Ø 6 MM X 16 MM

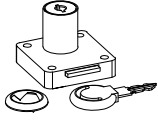M6  Ø 6 MM X 16 MM 4 X	Q3  FULL OVERLAY 2 X	E1  Ø15 MM X 12 MM 5 X	U1  Ø19 MM 1 X	M3  Ø 6 MM X 13 MM 4 X
---	---	---	---	--

9

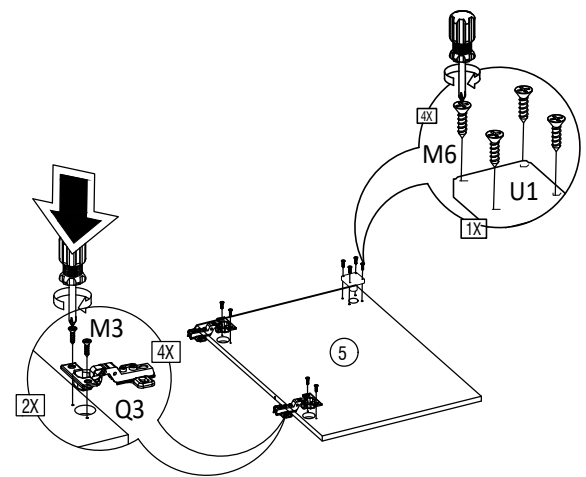


10

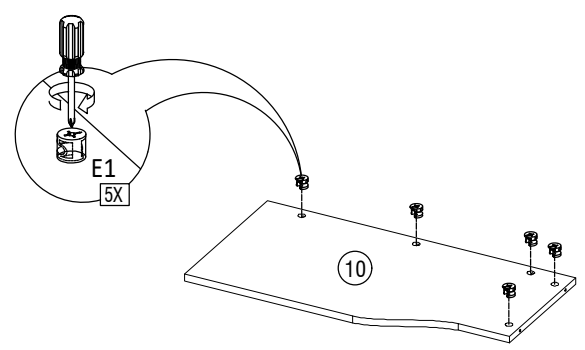


07


11

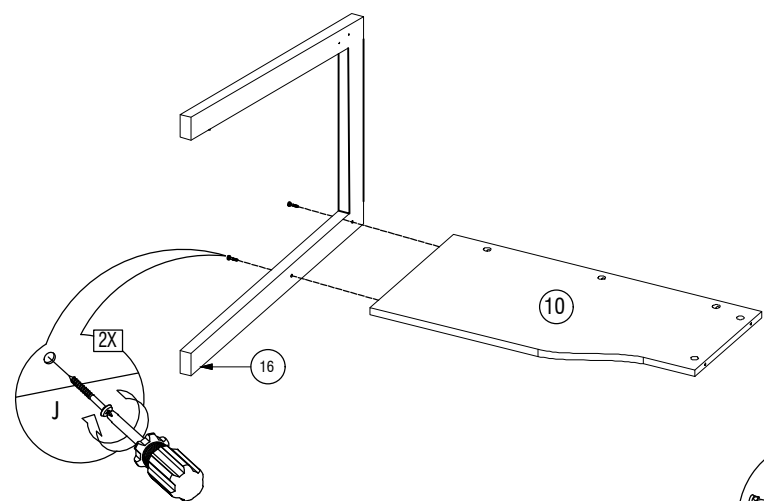


12

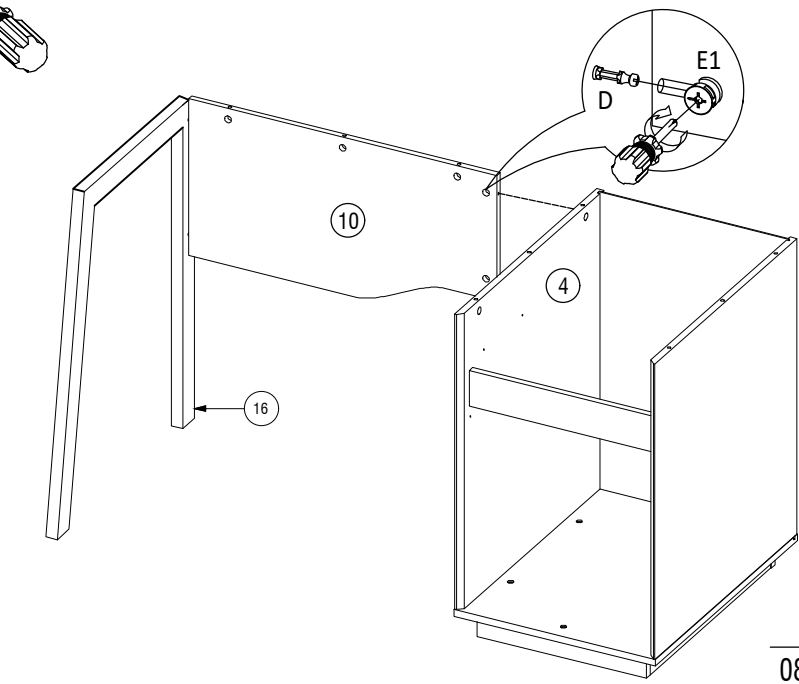

08


J  Ø 10 X 44 MM 2 X

13

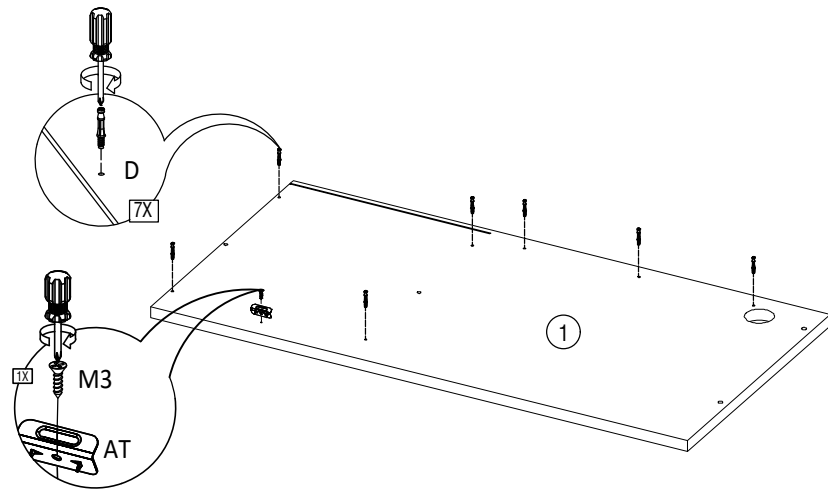


M3	WHY	D	AT
			
Ø 6 MM X 13 MM 1X	Ø 6 MM X 60 MM 2X	7X	1X

14

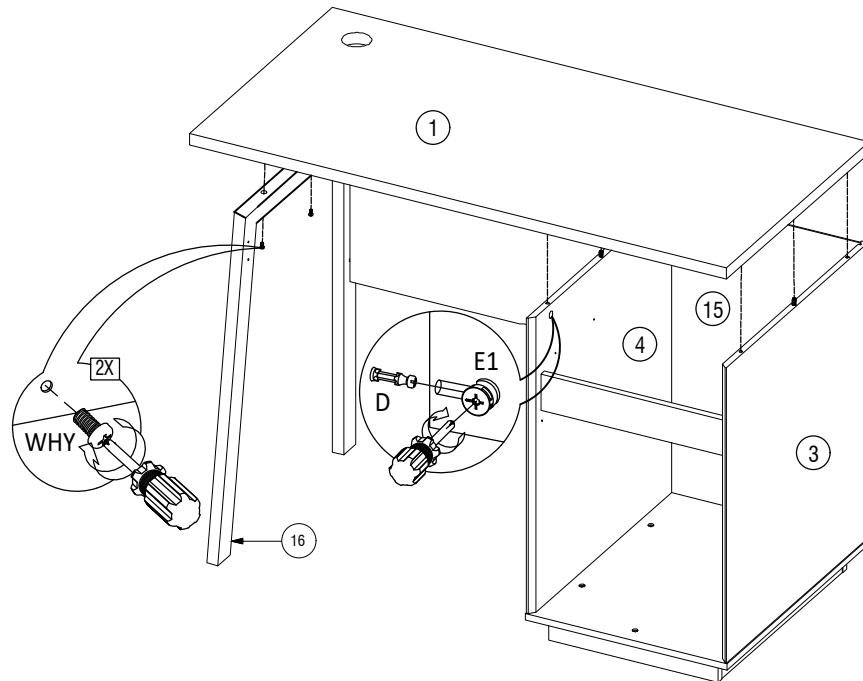


09

15

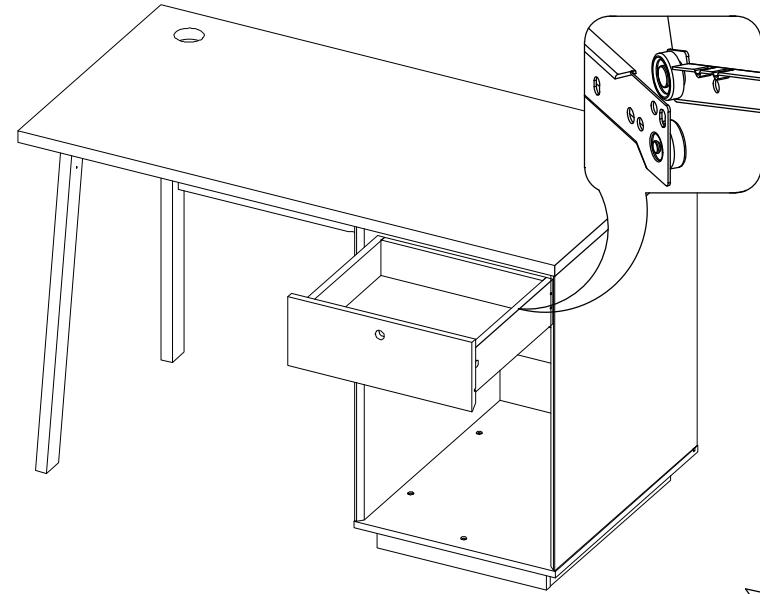

TUTORIAL SETTING ENGSEL

16

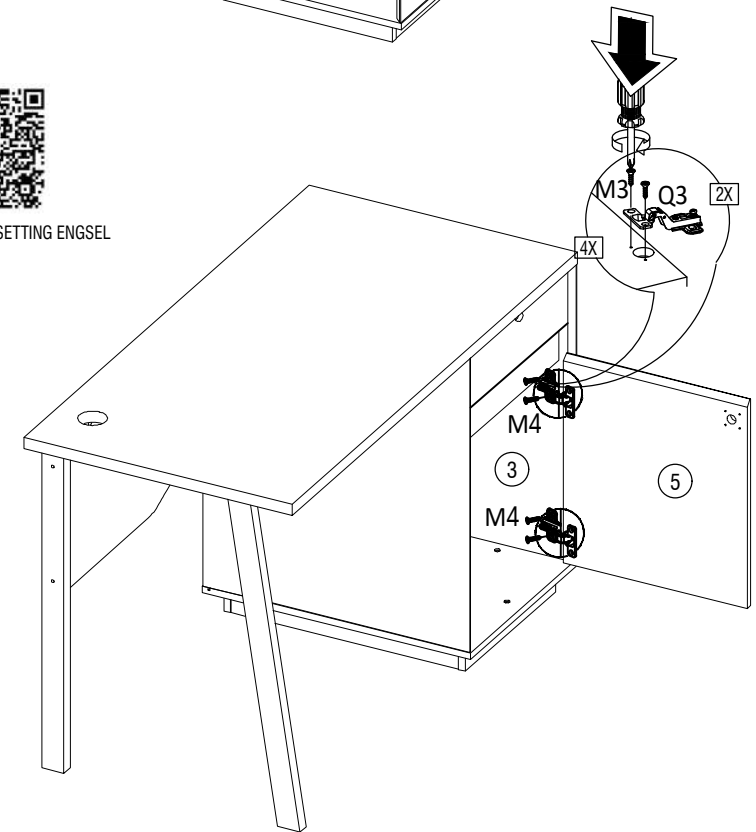


10

M4

Ø 9 MM X 13 MM 4X

17

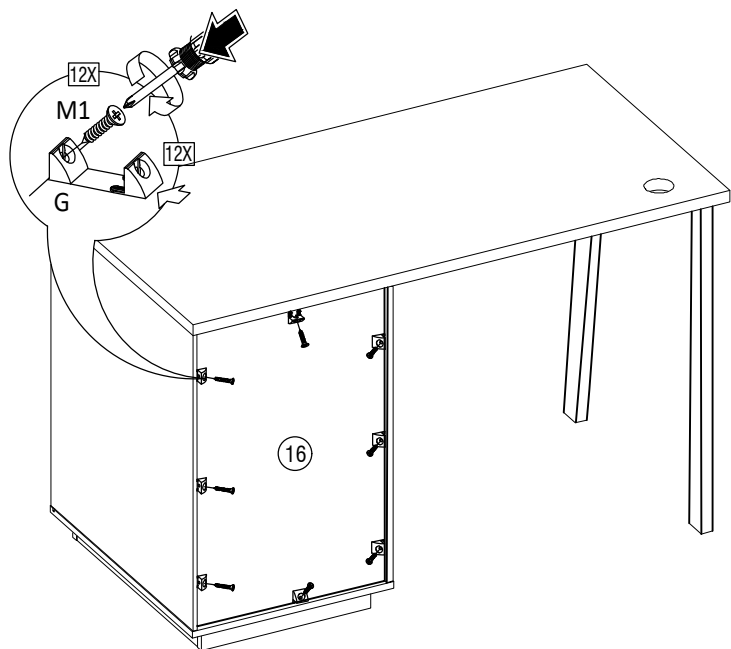

M1	G
	
Ø 4 MM X 16 MM 8 X	8 X