

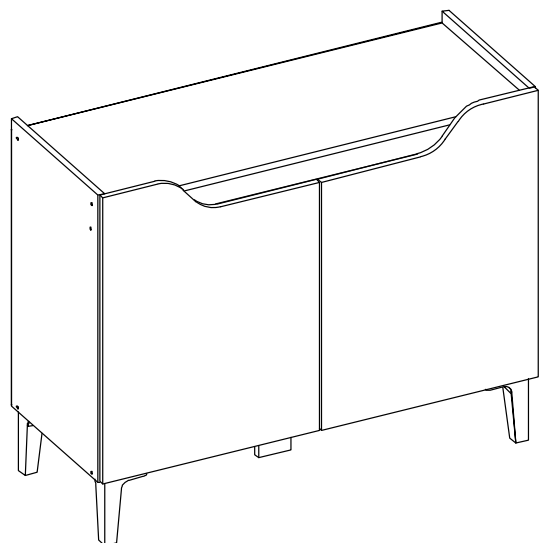
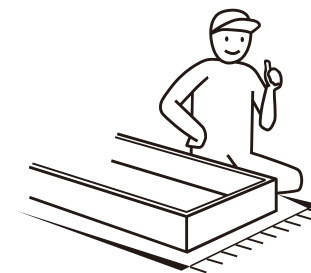
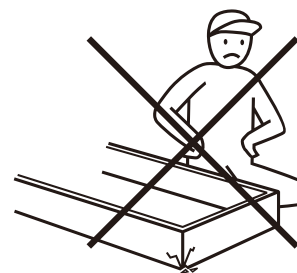



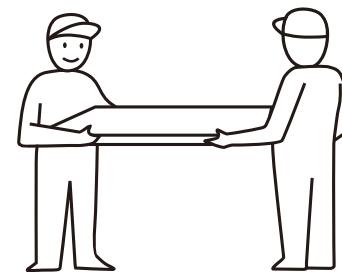



BY OGGI FURNITURE

ASSEMBLING INSTRUCTION


EMILY SIDEBORD 80

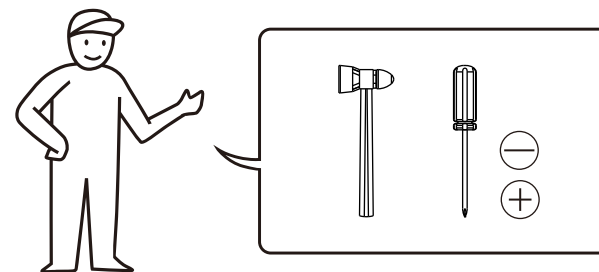


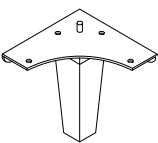
										
19 MM	6 g	INSET	4 X	Ø 6 MM X 13 MM	8 X	Ø 6 X 30 MM	9 X	4 X	Ø 12 MM X 10 MM	4 X
										
4X	8 X	Ø 9 MM X 12 MM	8 X	Ø 6 MM X 16 MM	16 X	Ø 10 MM X 44 MM	14 X			

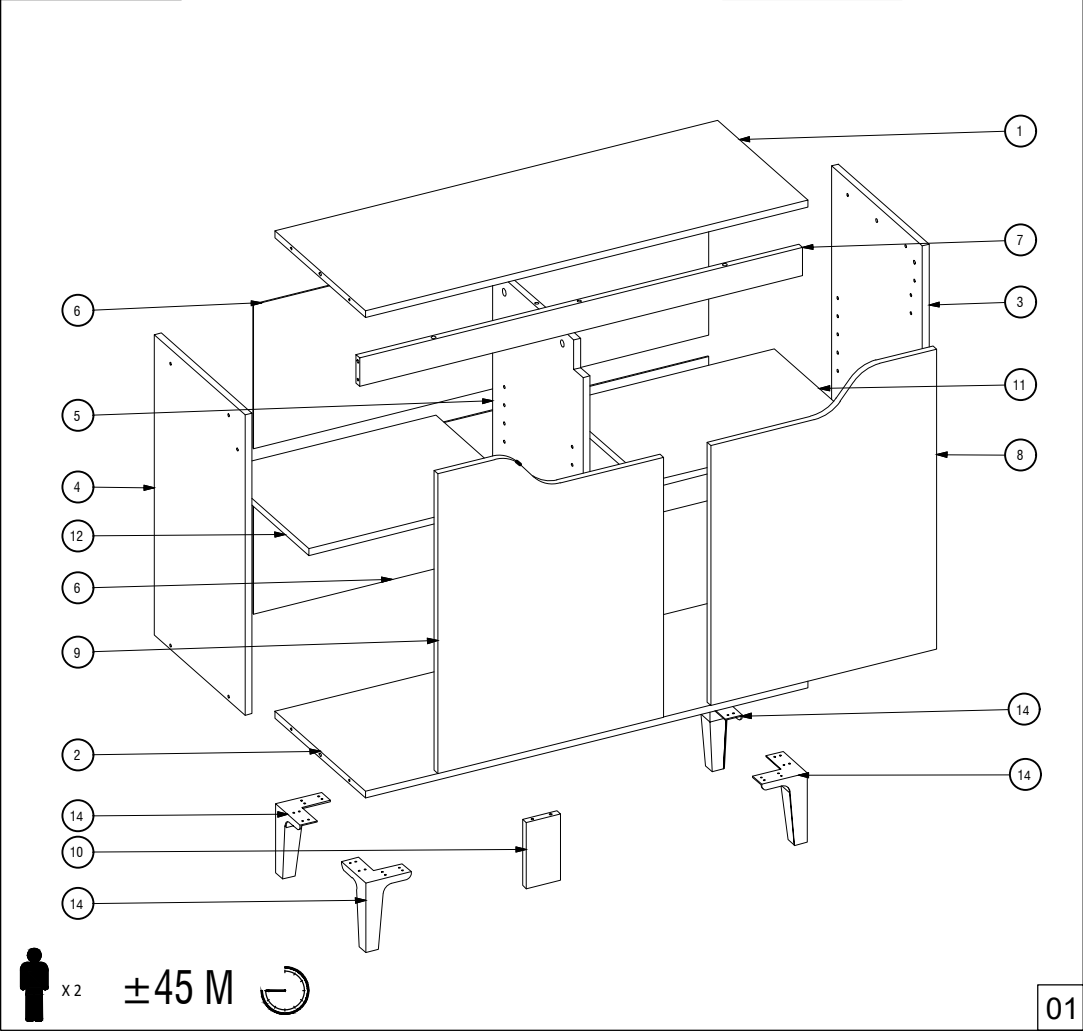


	Q4  INSET 4 X	M3  Ø 6 MM X 13 MM 8 X	B1  Ø6 X 30 MM 9 X	D  4 X	E  Ø12 MM X 10 MM 4 X
--	--	---	---	---	--

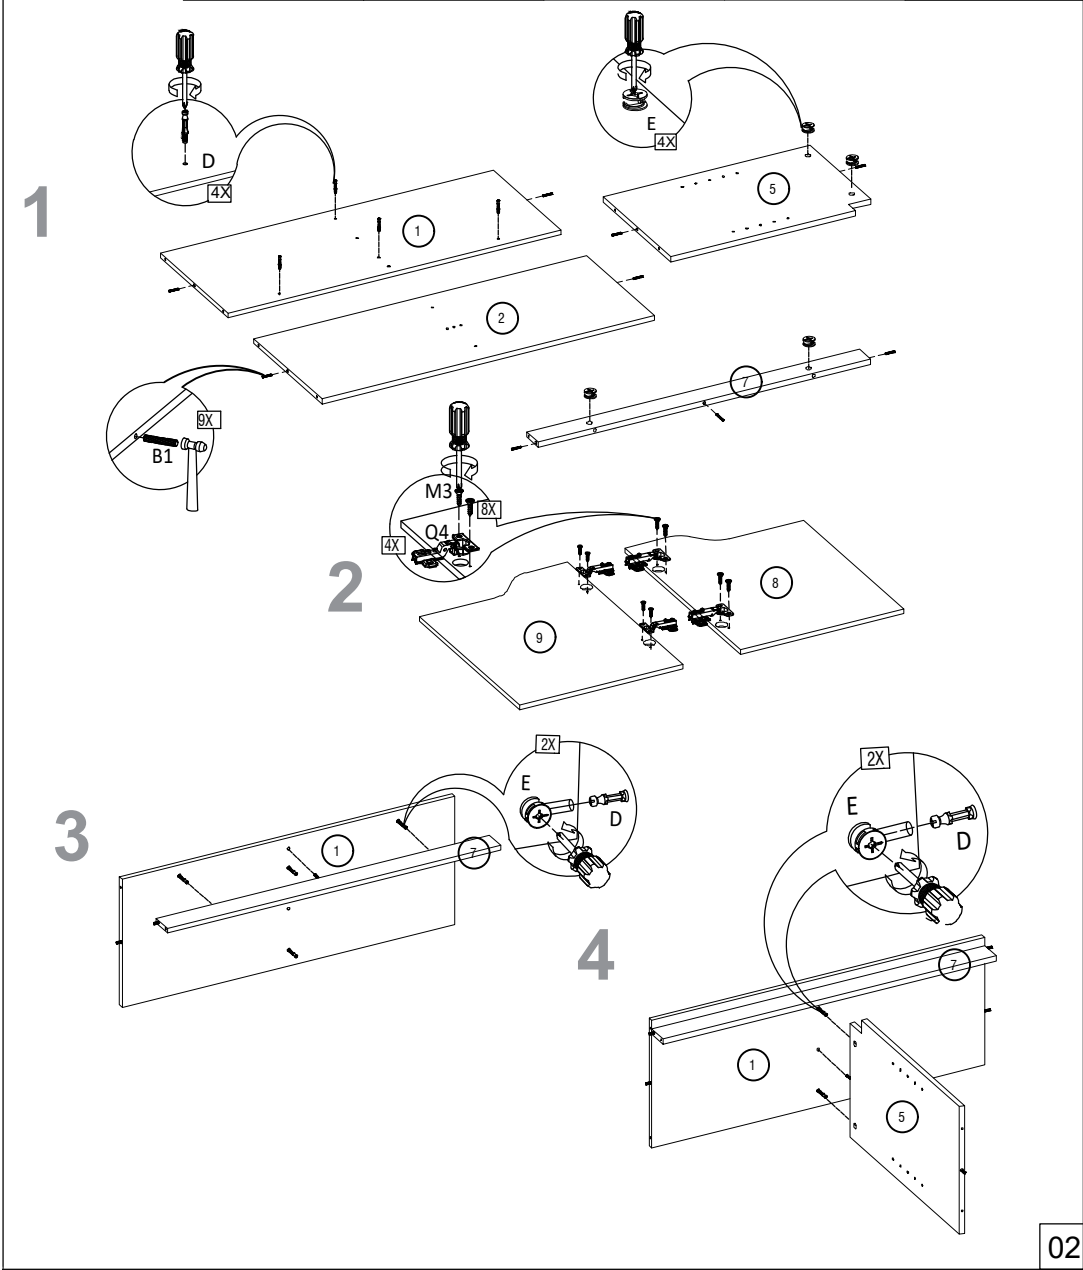


5

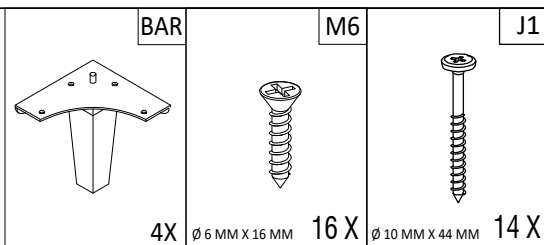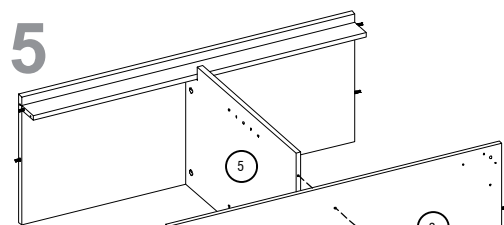


6

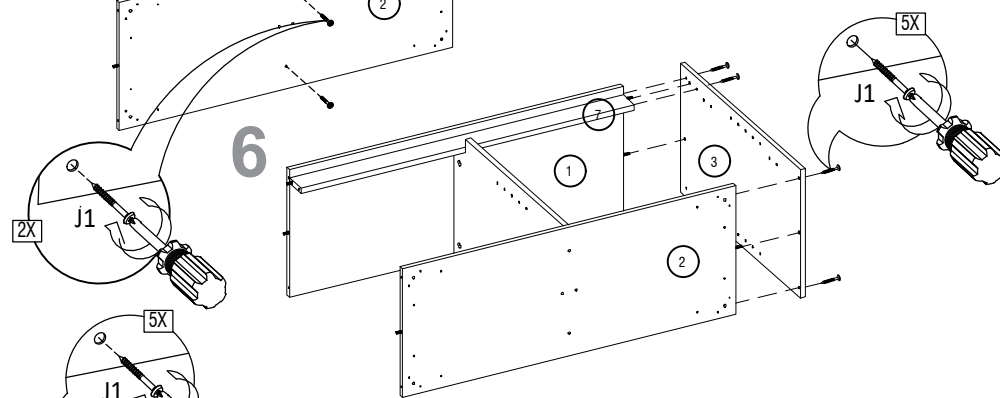


7

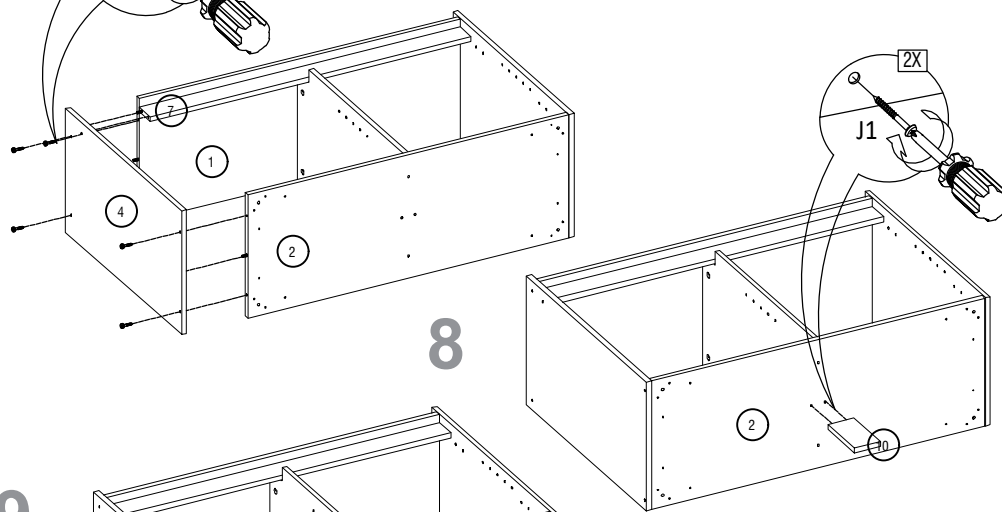

8


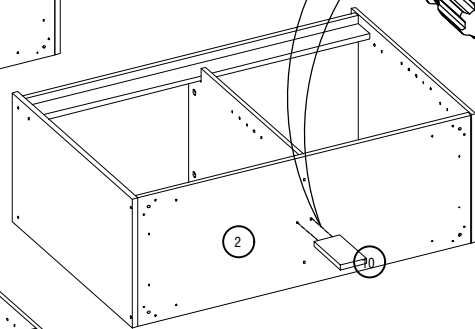


9

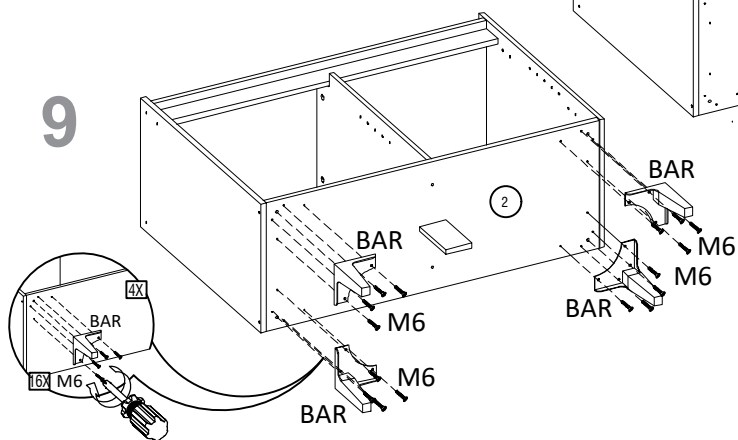


03


10

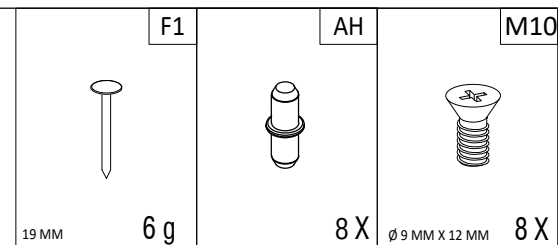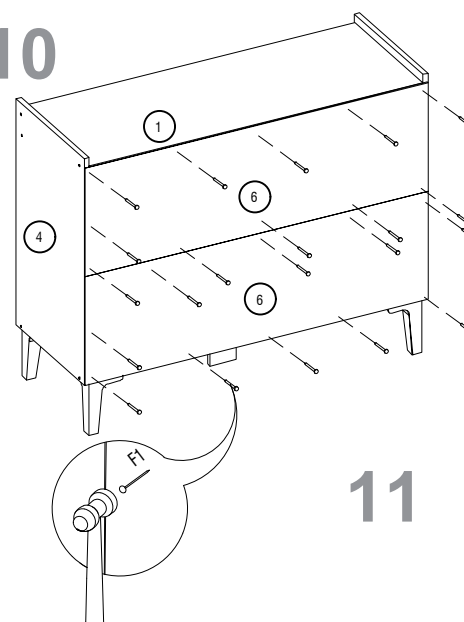


11

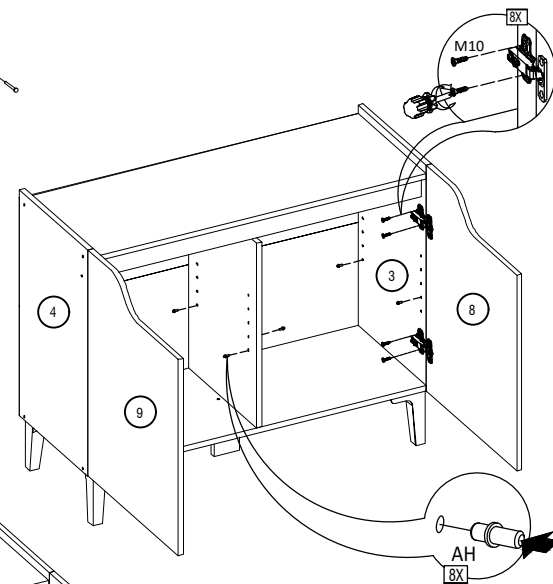

12

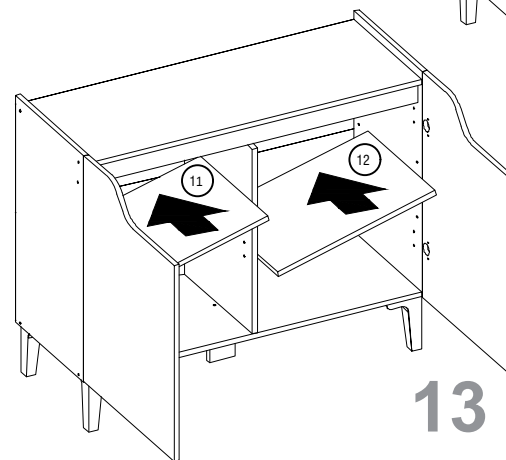

13

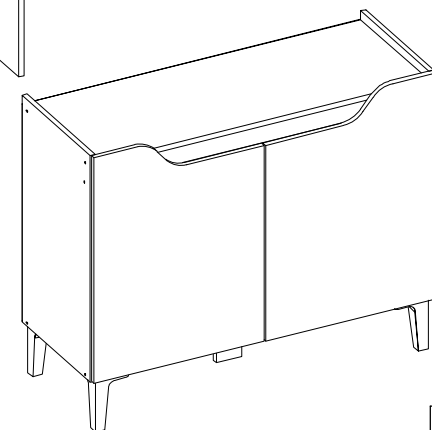

TUTORIAL SETTING ENGSEL

04