



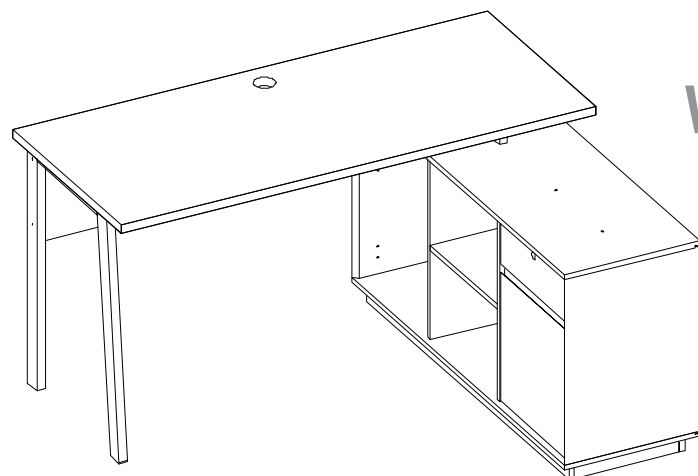

VERSI 1

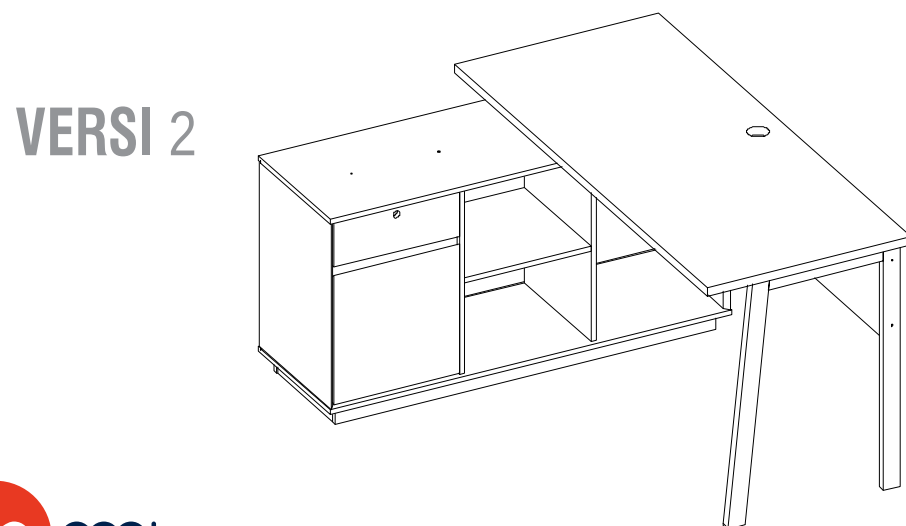





VERSI 2













ASSEMBLING INSTRUCTION



NAOMI WORKING DESK 140

NATURAL OAK - WHITE

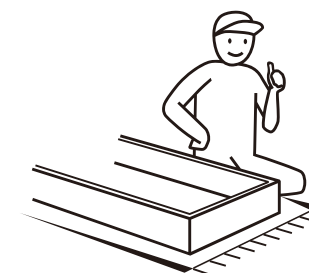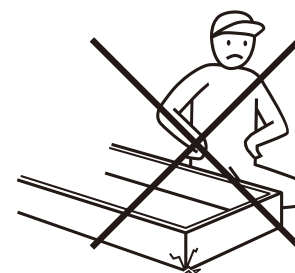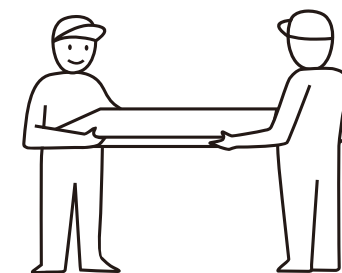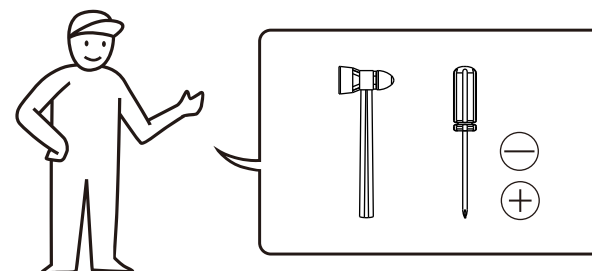


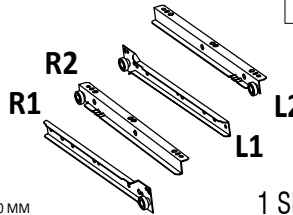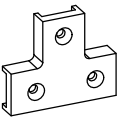Q3  FULL OVERLAY 2 X	U1  Ø19 MM 1 X	M3  Ø 6 MM X 13 MM 12 X	B  Ø8 X 30 MM 20 X	D  31 X	E1  Ø15 MM X 12 MM 31 X
M  Ø 4 MM X 13 MM 2 X	M10  Ø 9 MM X 12 MM 4 X	J2  Ø 12 X 44 MM 11 X	Z1  R1 R2 L1 L2 300 MM 1 SET	L  Ø 6 MM X 32 MM 4 X	
BU  1 X	BV3  1 X	A6  Ø6 MM X 60 MM 2 X	G  12 X	Q  2 X	M1  Ø 4 MM X 16 MM 12 X
BB5  15 MM 2 X	BB7  15 MM 8 X	M6  Ø 6 MM X 16 MM 18 X	BT15  WHITE 2 X	BT16  NATURAL OAK 20 X	J  Ø 10 X 44 MM 2 X

VERSI 1

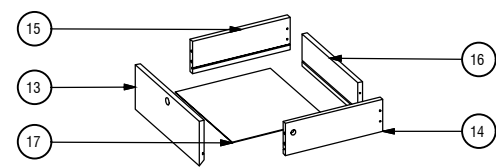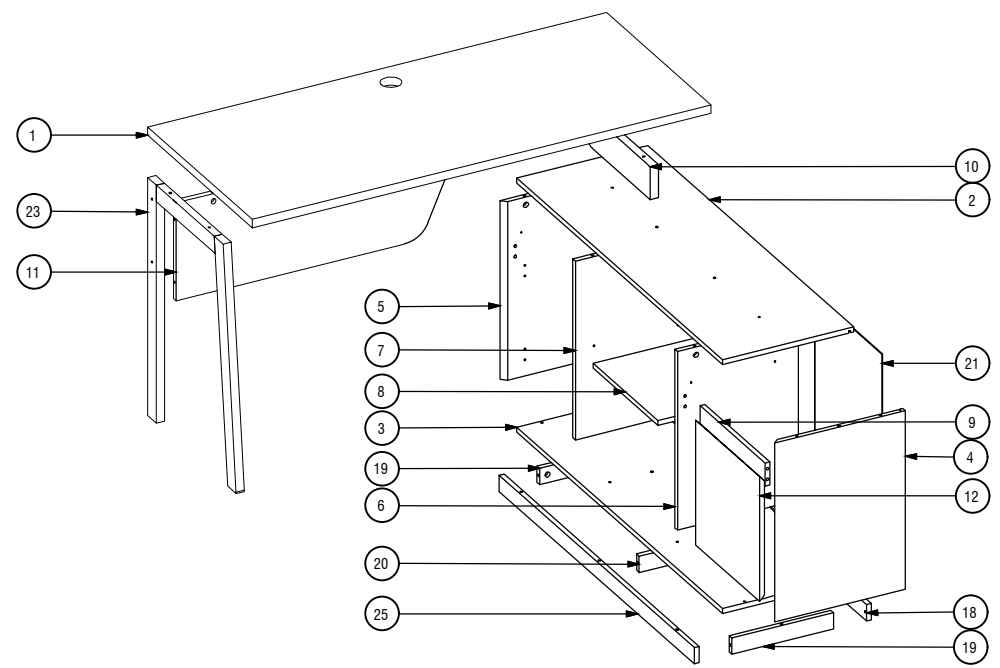


11

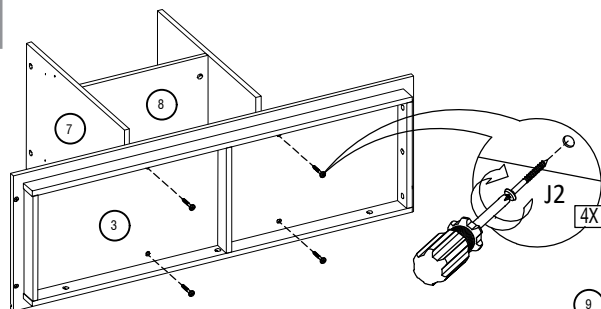

BB5

J2

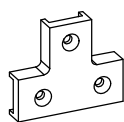


15 MM

2 X

Ø 12 X 44 MM

10 X

BB7



15 MM

8 X


M6




Ø 6 MM X 16 MM

14 X


12

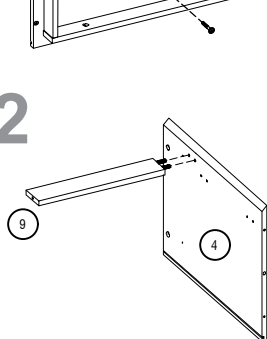


13

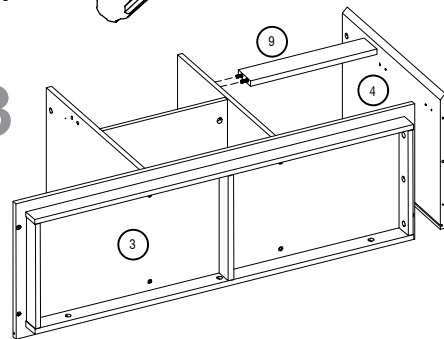


14

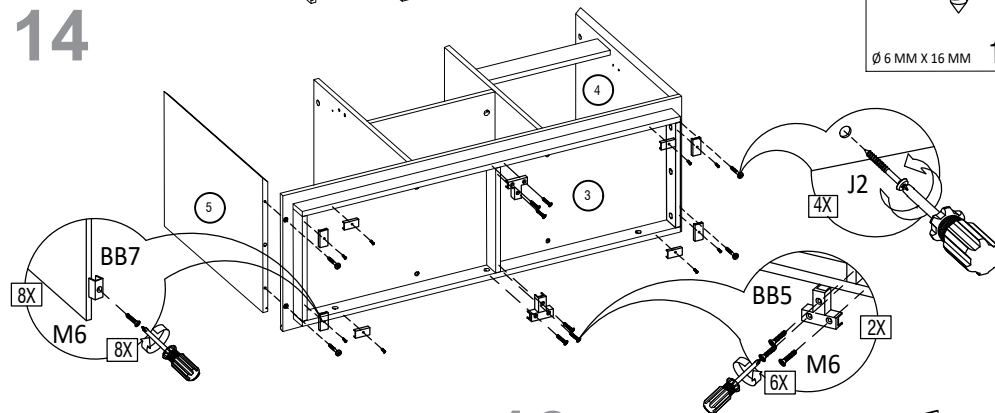

15

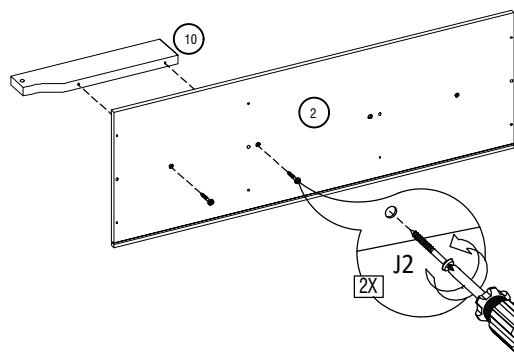


16

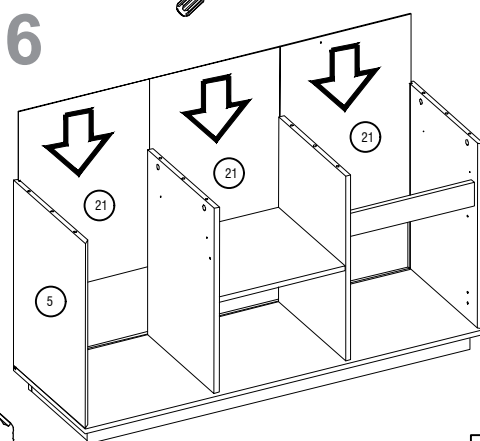


05


17

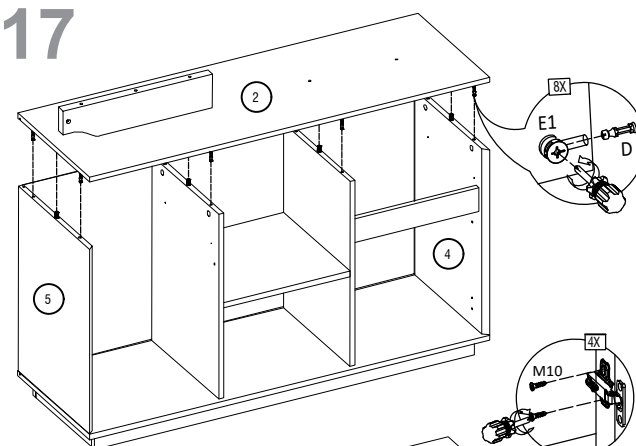


18

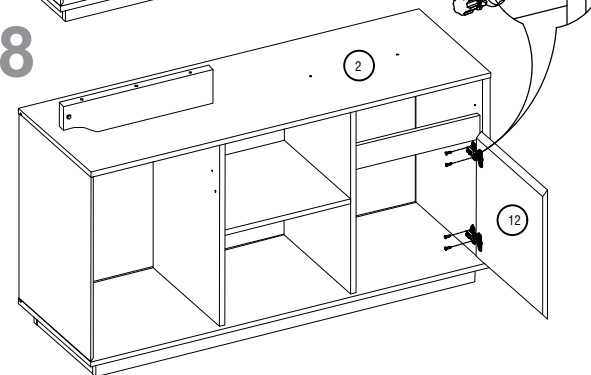

19

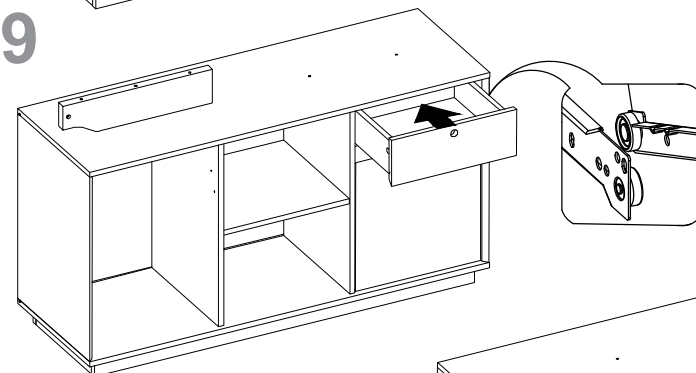

20

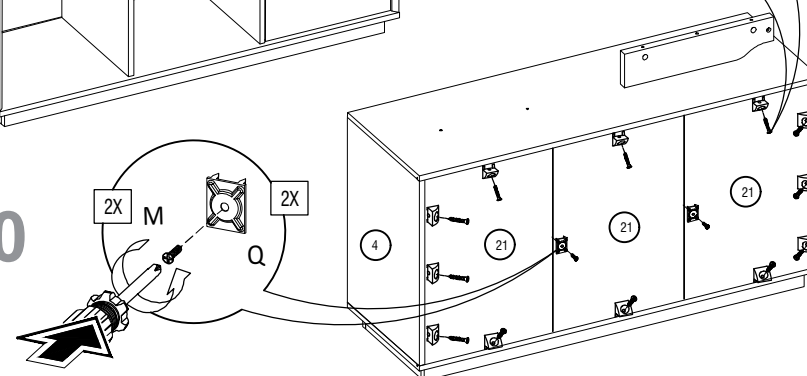

M

M10



Ø 4 MM X 13 MM

2 X



Ø 9 MM X 12 MM

4 X

Q




2 X

Ø 4 MM X 16 MM

12 X

G



12 X




TUTORIAL SETTING ENGSEL

06

21

BT16	BU	BV3	J	A6
				
NATURAL OAK 20 X	1 X	1 X	ø 10 X 44 MM 2 X	ø 6 MM X 60 MM 2 X

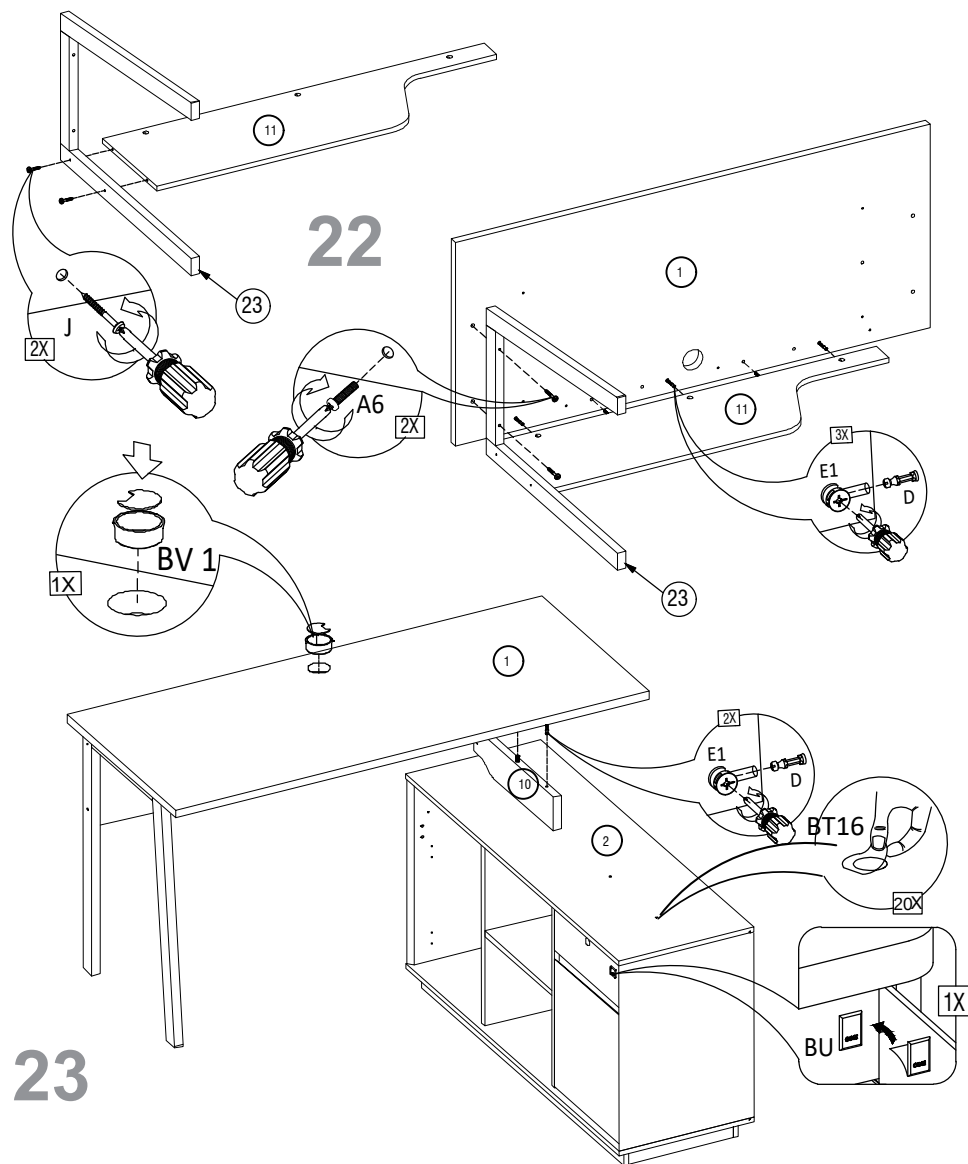


07


24

J2










ø 12 X 44 MM 1 X

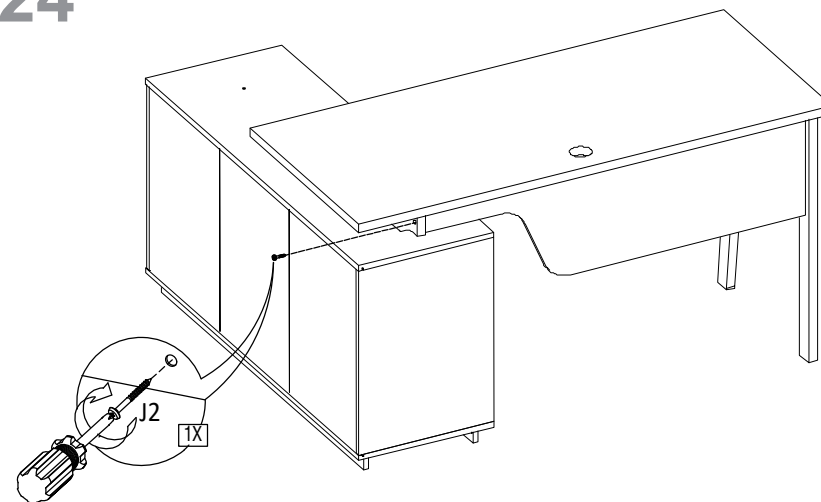



25


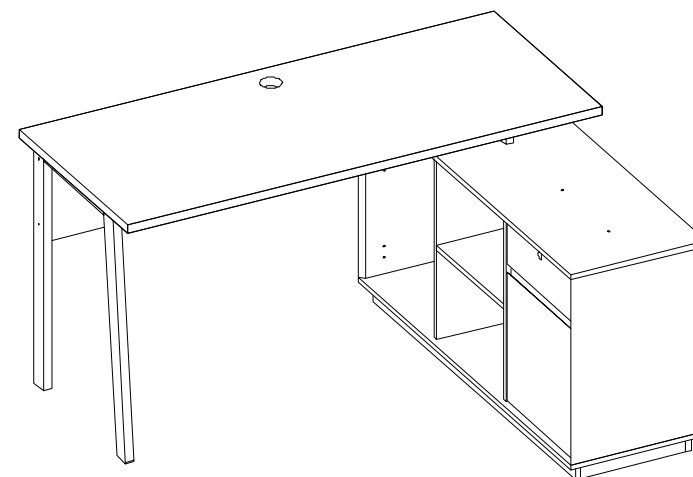


08

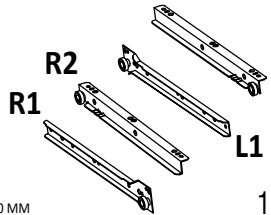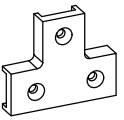
Q3  FULL OVERLAY 2 X	U1  Ø19 MM 1 X	M3  Ø 6 MM X 13 MM 12 X	B  Ø8 X 30 MM 20 X	D  31 X	E1  Ø15 MM X 12 MM 31 X
M  Ø 4 MM X 13 MM 2 X	M10  Ø 9 MM X 12 MM 4 X	J2  Ø 12 X 44 MM 11 X	Z1  R1 R2 L1 L2 300 MM 1 SET	L  Ø 6 MM X 32 MM 4 X	
BU  1 X	BV3  1 X	A6  Ø6 MM X 60 MM 2 X	G  12 X	Q  2 X	M1  Ø 4 MM X 16 MM 12 X
BB5  15 MM 2 X	BB7  15 MM 8 X	M6  Ø 6 MM X 16 MM 18 X	BT15  WHITE 2 X	BT16  NATURAL OAK 20 X	J  Ø 10 X 44 MM 2 X

VERSI 2

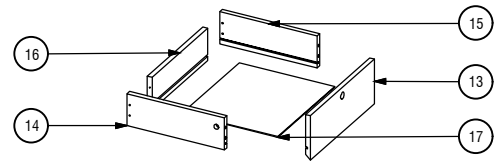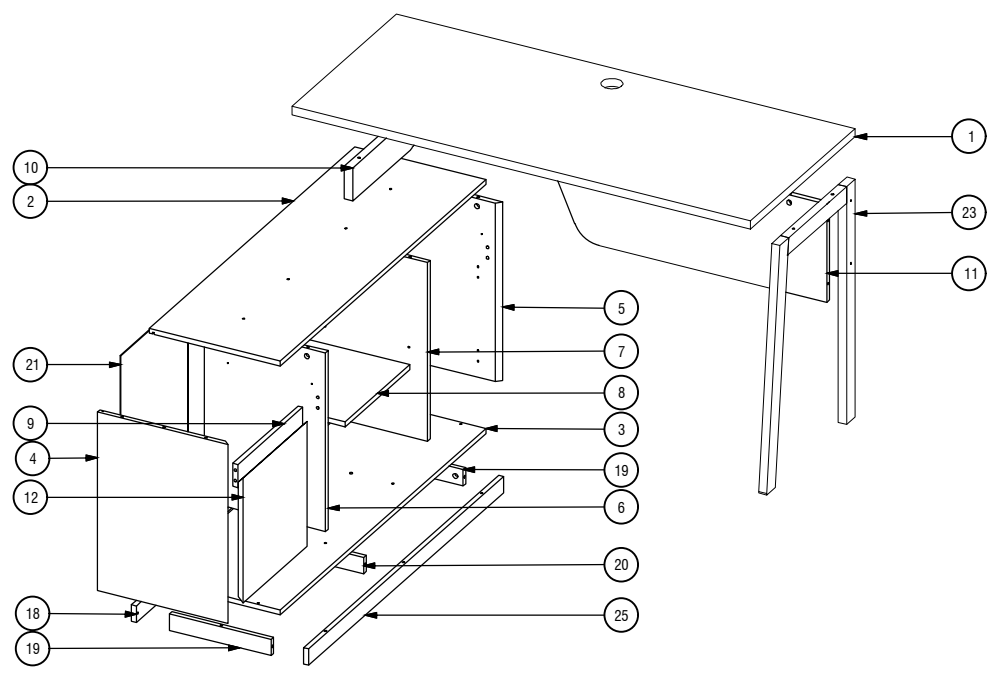

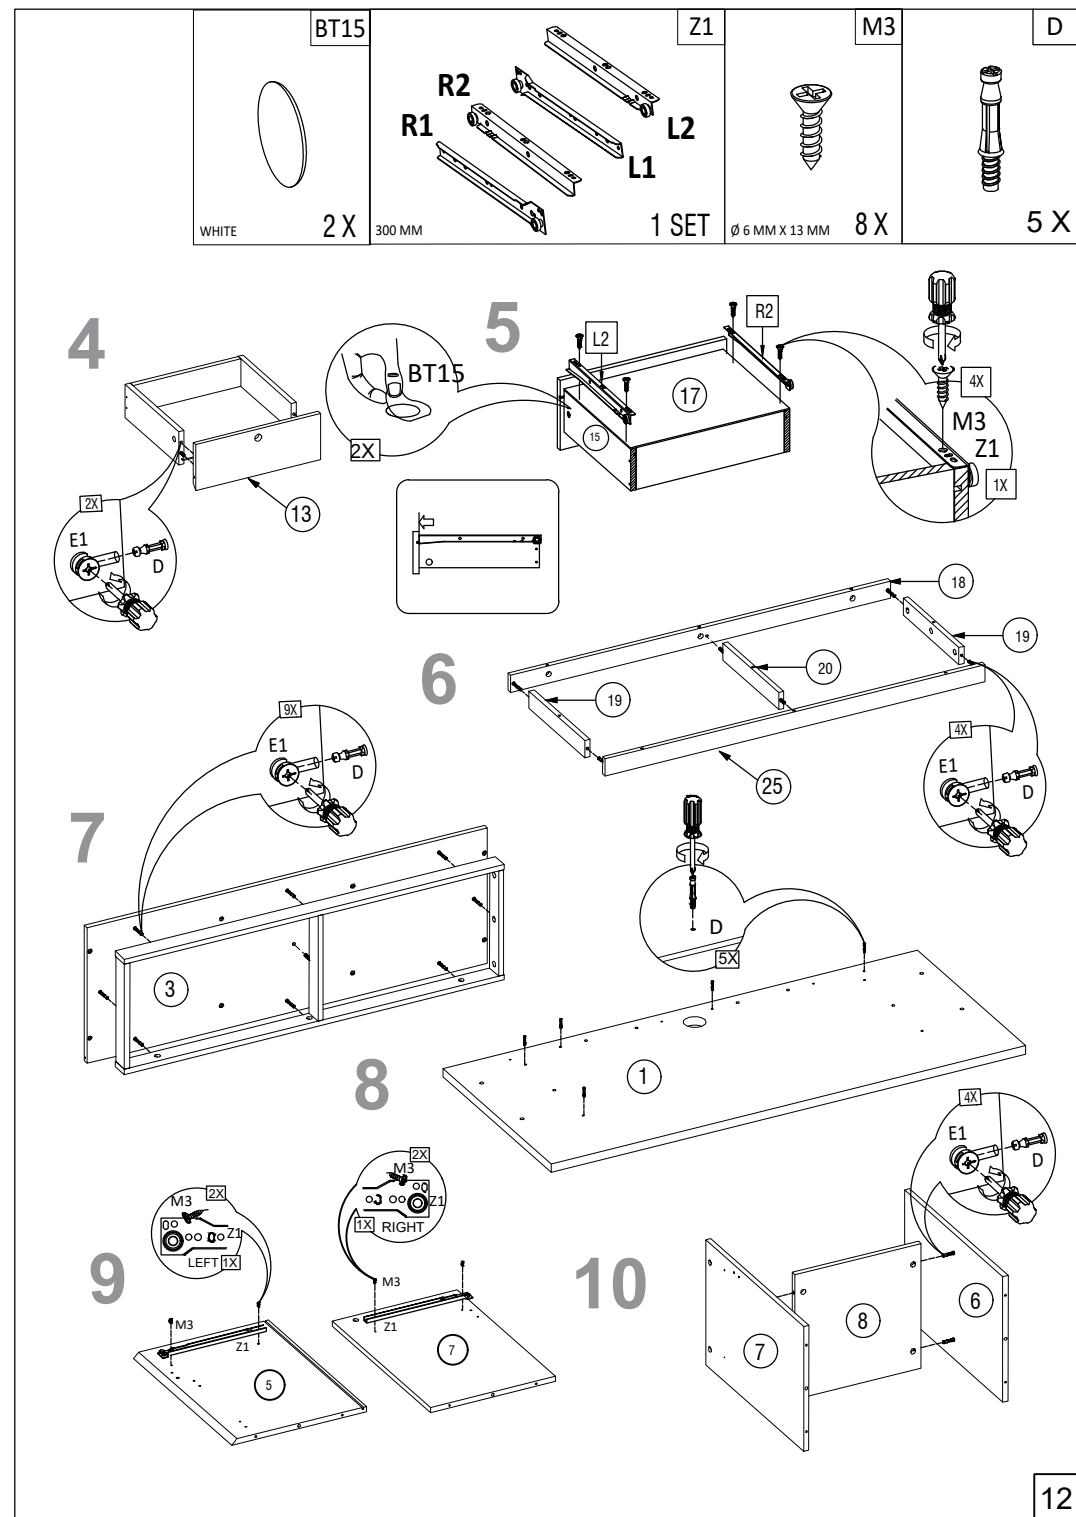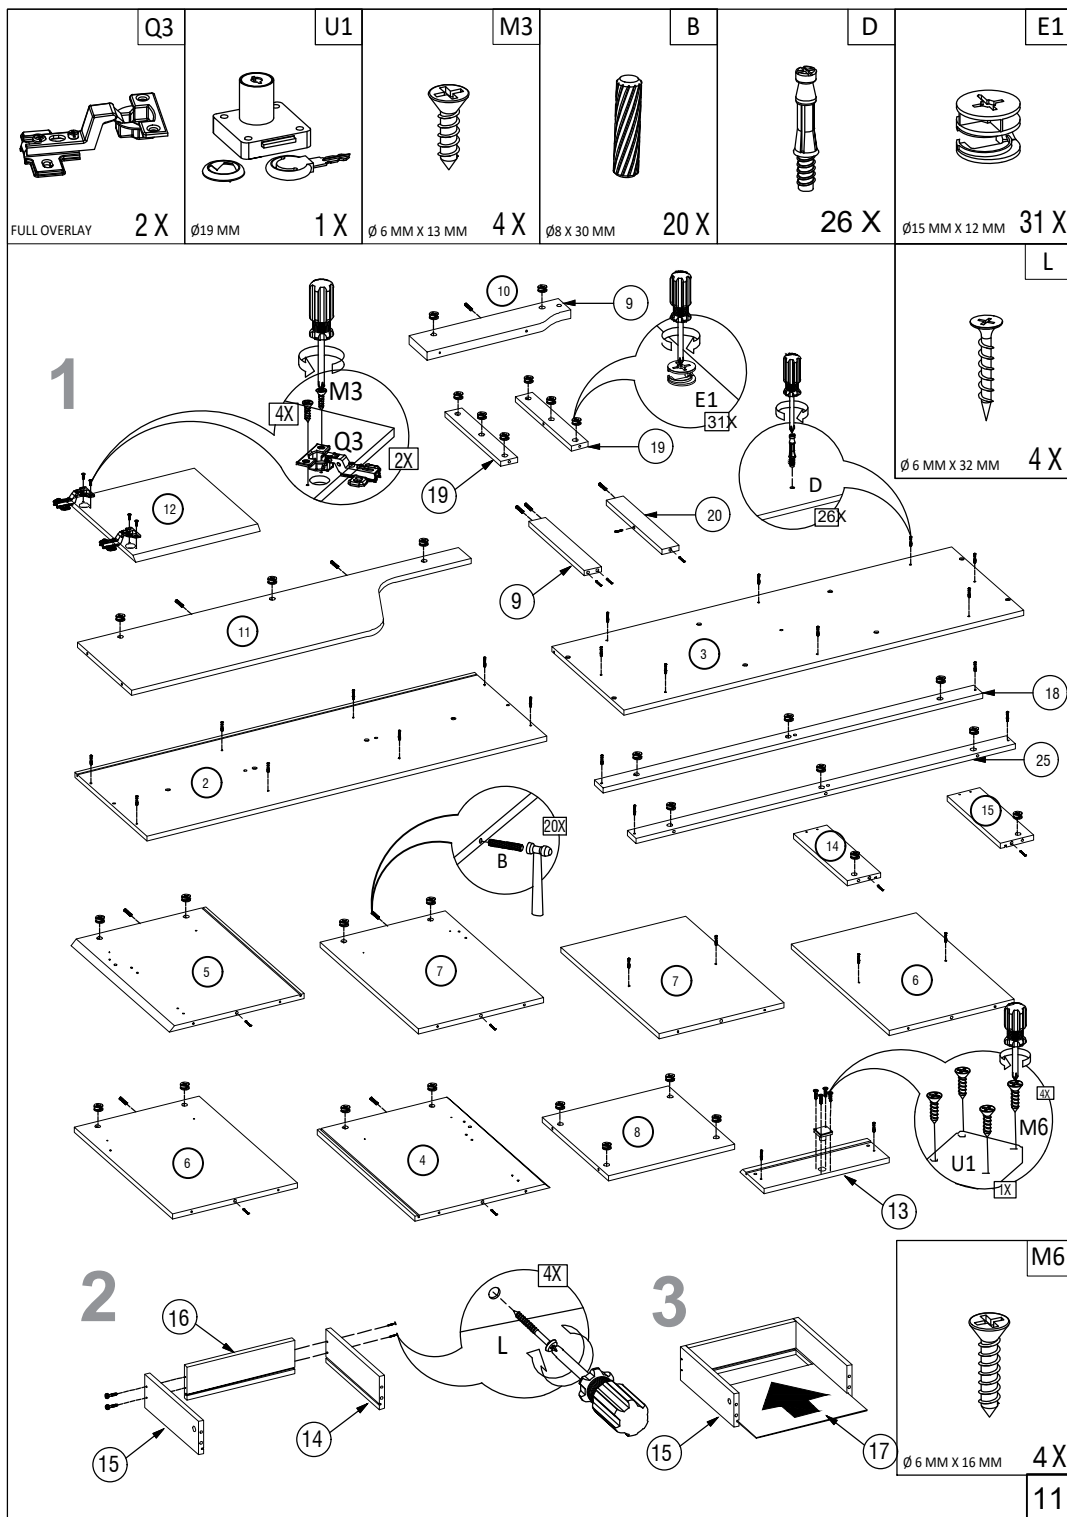


11

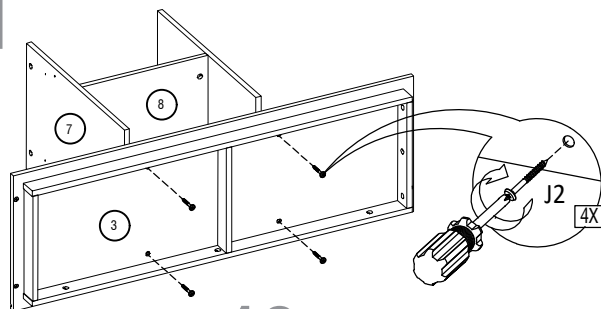

BB5

J2

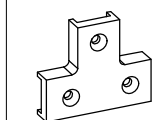

15 MM

2 X


Ø 12 X 44 MM

10 X


BB7



12

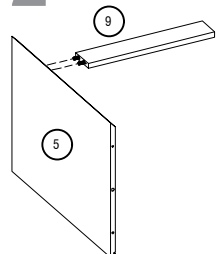

13

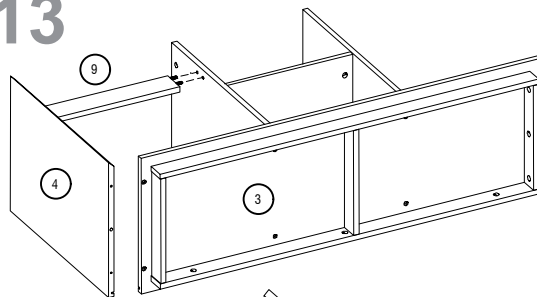

15 MM

8 X


M6




Ø 6 MM X 16 MM

14 X


14

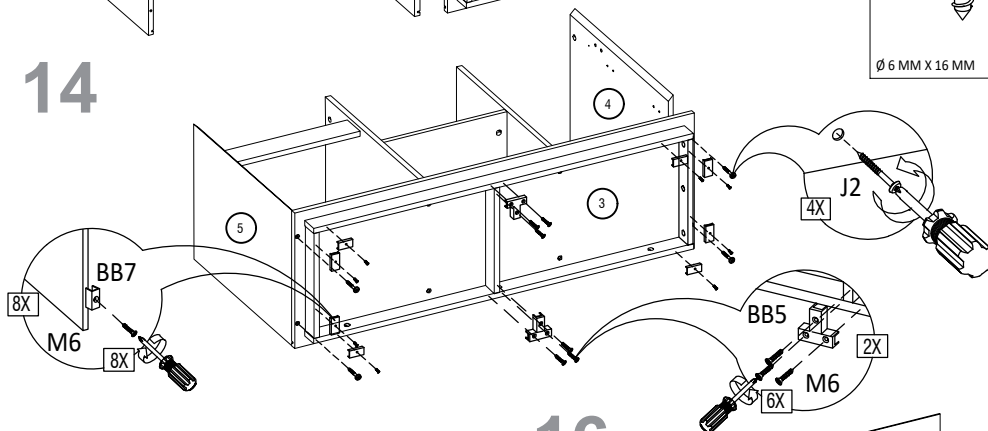

15

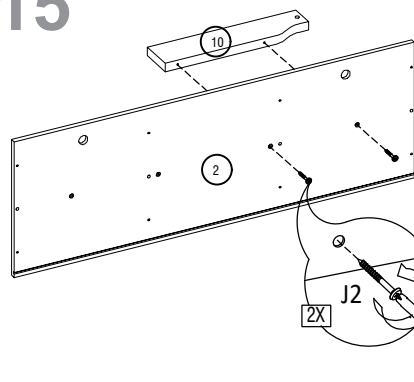


16

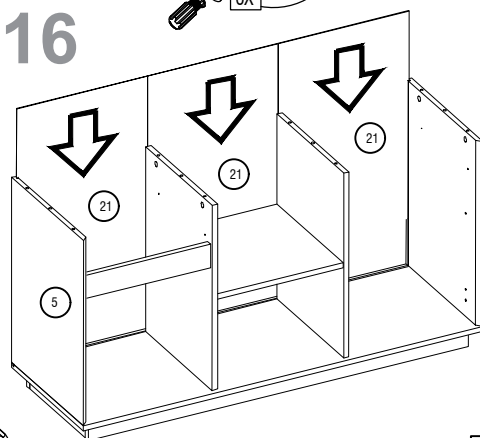


13

17

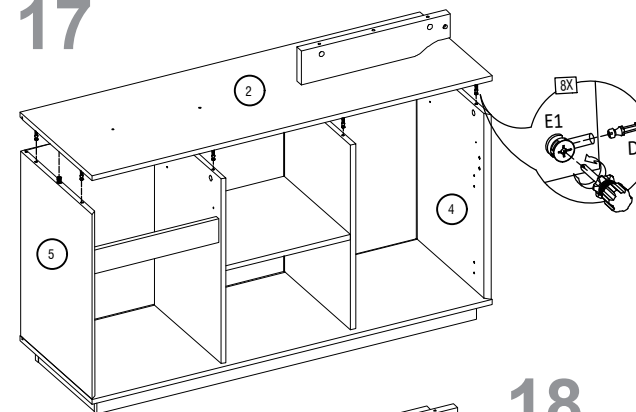

18

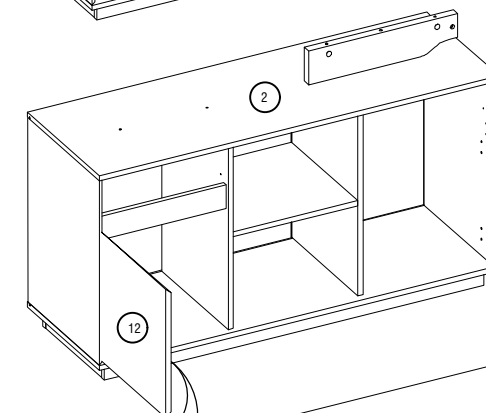

TUTORIAL SETTING ENGSEL

M

M10



Ø 4 MM X 13 MM

2 X



Ø 9 MM X 12 MM

4 X

Q

M1




2 X

Ø 4 MM X 16 MM


12 X

G




12 X

19

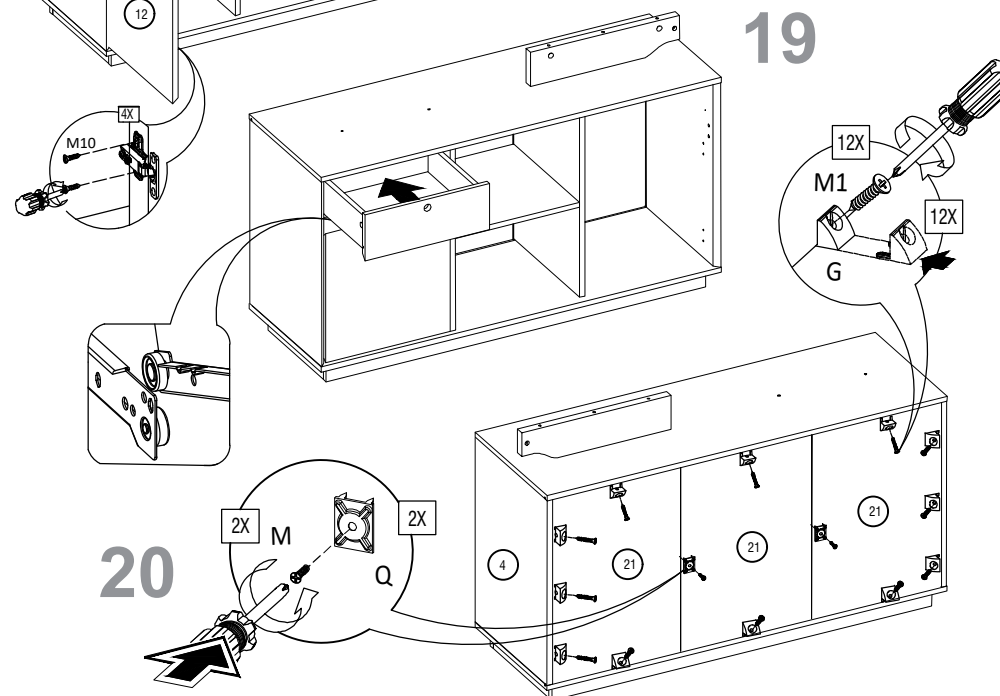


20

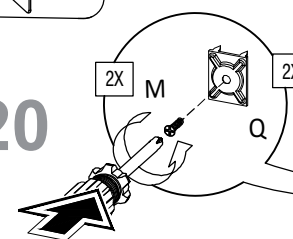

14

BU	BV3	J	A6
1 X	1 X	2 X ø 10 X 44 MM	2 X ø 6 MM X 60 MM


21

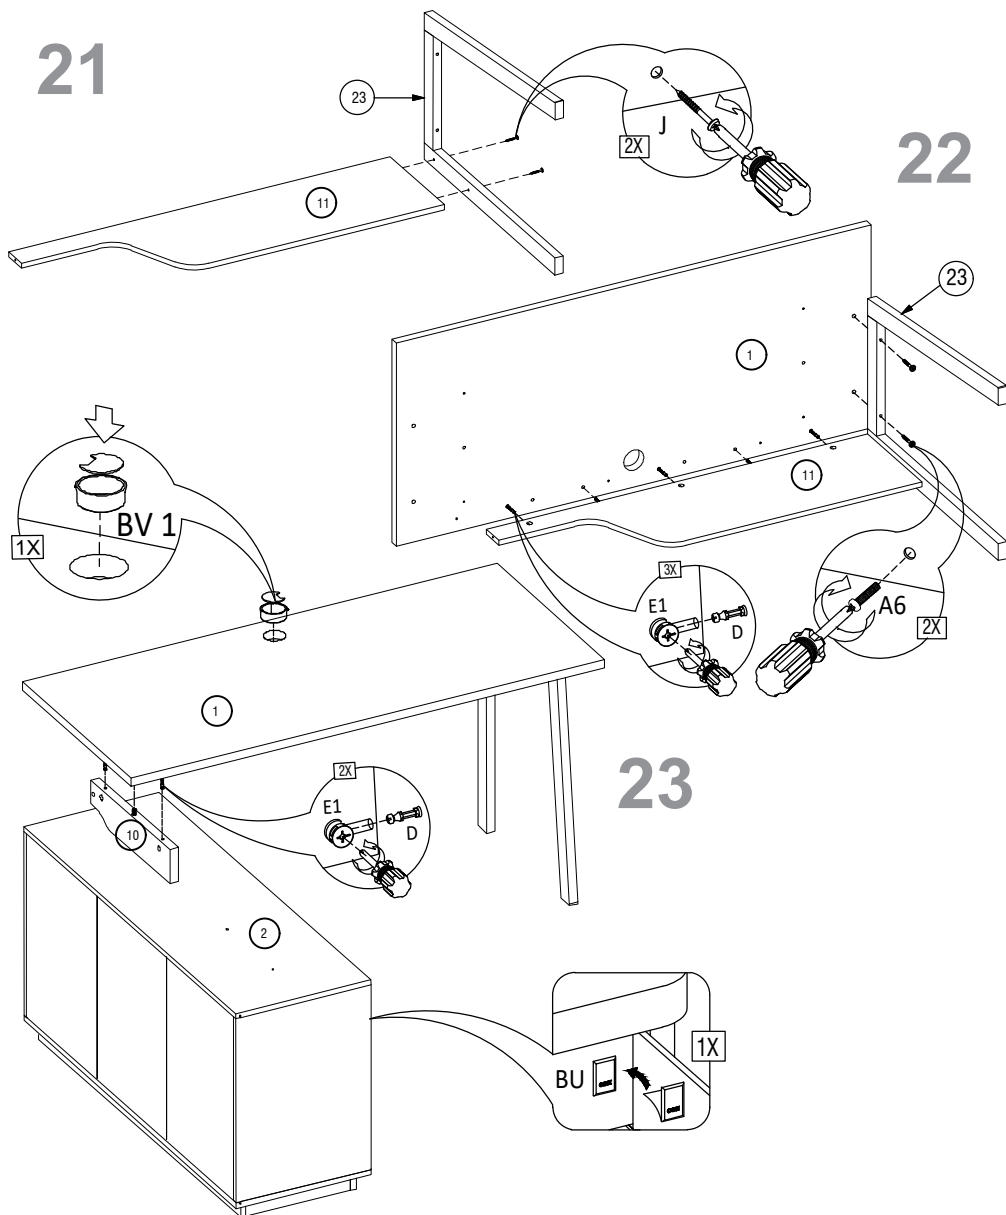


15

BT16	J2
NATURAL OAK 20 X	1 X ø 12 X 44 MM

24

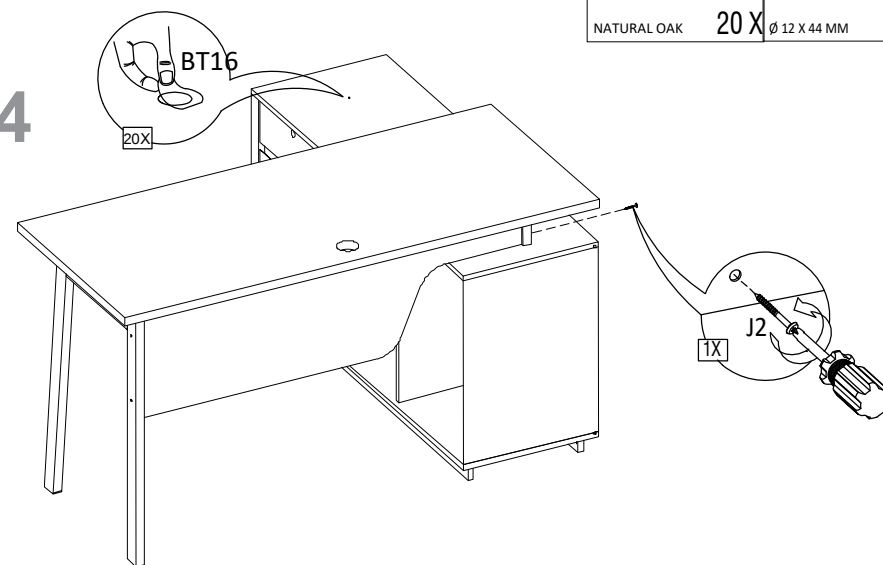

25

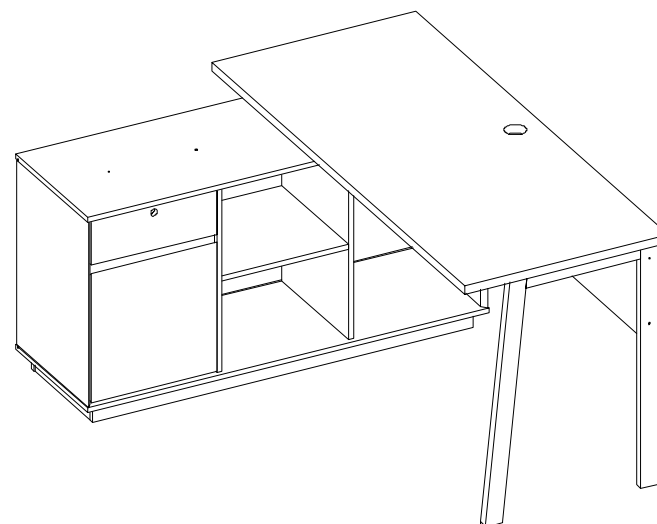

16