

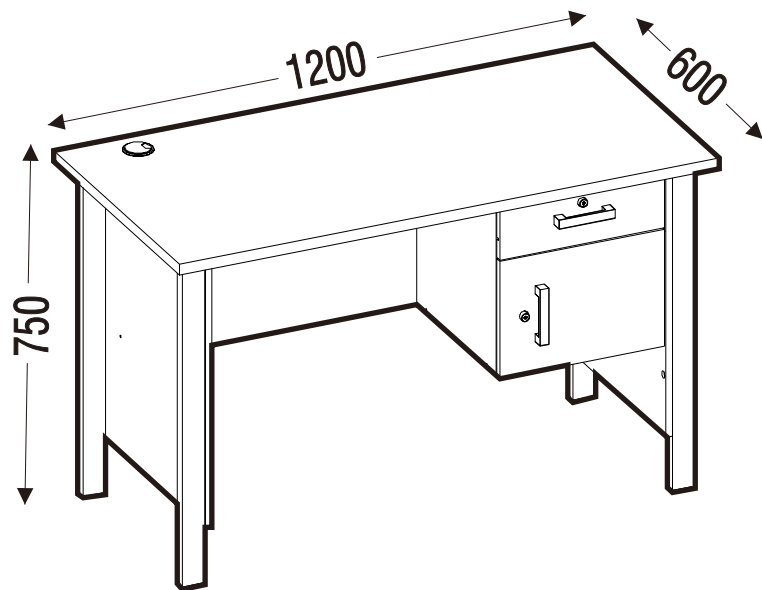
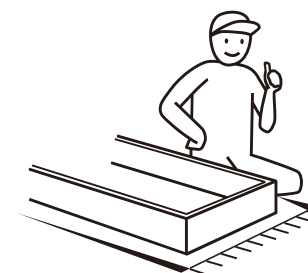
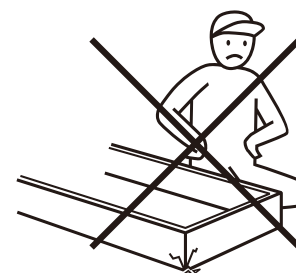



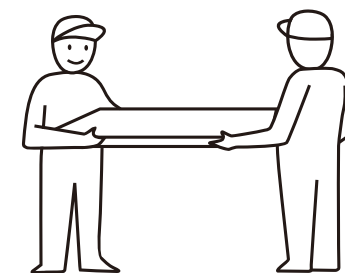


ASSEMBLING INSTRUCTION

ACERO WORKING DESK 120


RUSTIC WALNUT - BLACK

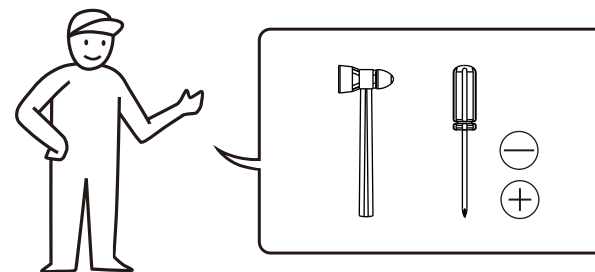

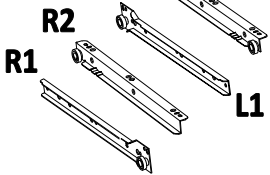011401  10 X Ø6 MM X 1 1/2"	011601  4 X	010502  6 X	010803  10 X	010701  10 X	160501  10 X
160502  8 X	060121  2 X	020301  2 X	090701  2 X	030202  2 X	160702  1 X
011704  Ø6 X 1/2" 30 X	011707  Ø6 X 5/8" 8 X	040303  R1 R2 L1 L2 1 X		160601  Ø9 MM X 13 MM 1 X	RY  4 X






KODE 160502 & 160501 DAPAT BERUPA STIKER DENGAN WARNA MENYESUAIKAN FOIL

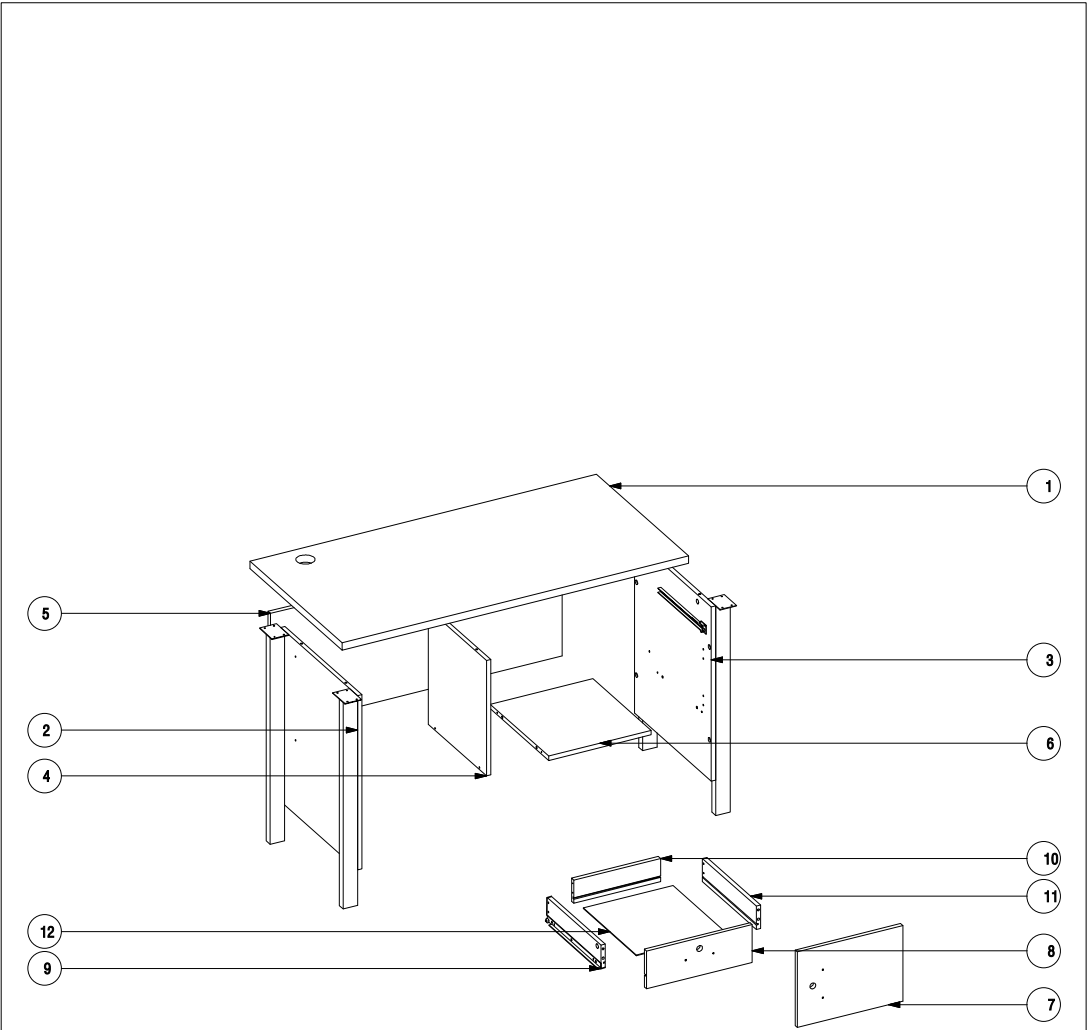

1

2


010701	011704	090701	040303	040303
				
8 X	6 X	2 X	RIGHT 1 X	LEFT 1 X



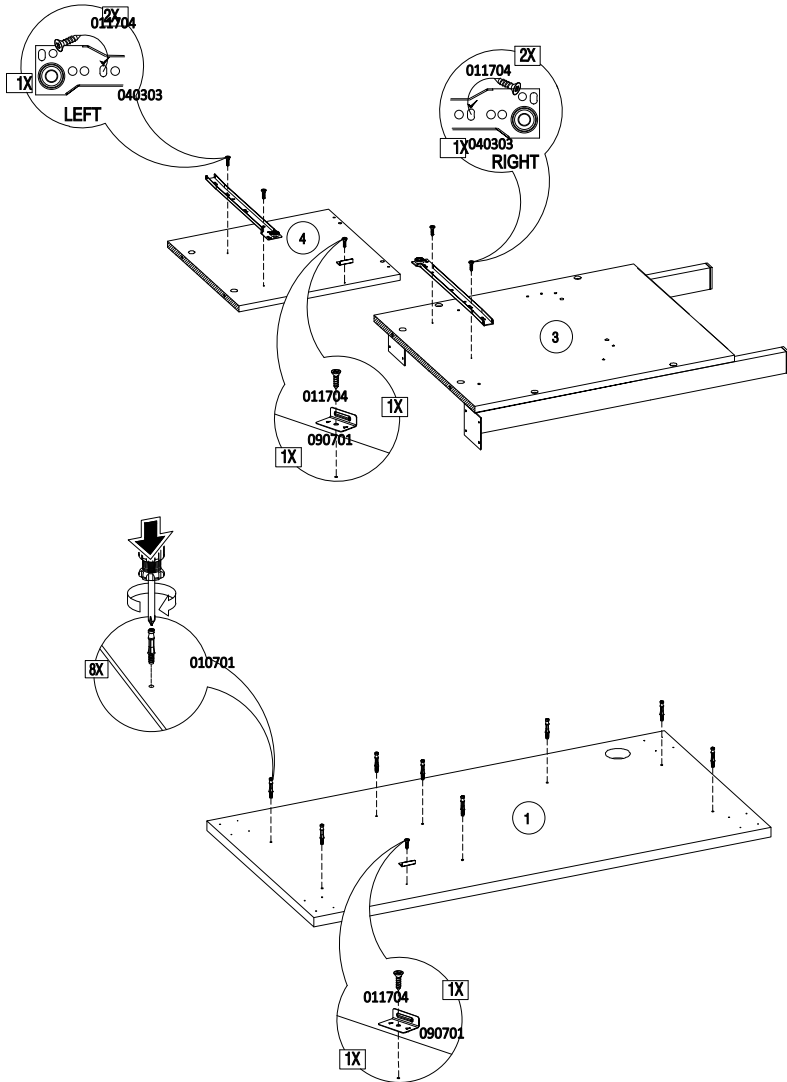



3

4


5

160501	010502	011704	030202	060121	010701
					
2 X	2 X	4 X	1 X	1 X	2 X


011707	040303	040303	011601	010803
				
4 X	1 X	1 X	4 X	2 X

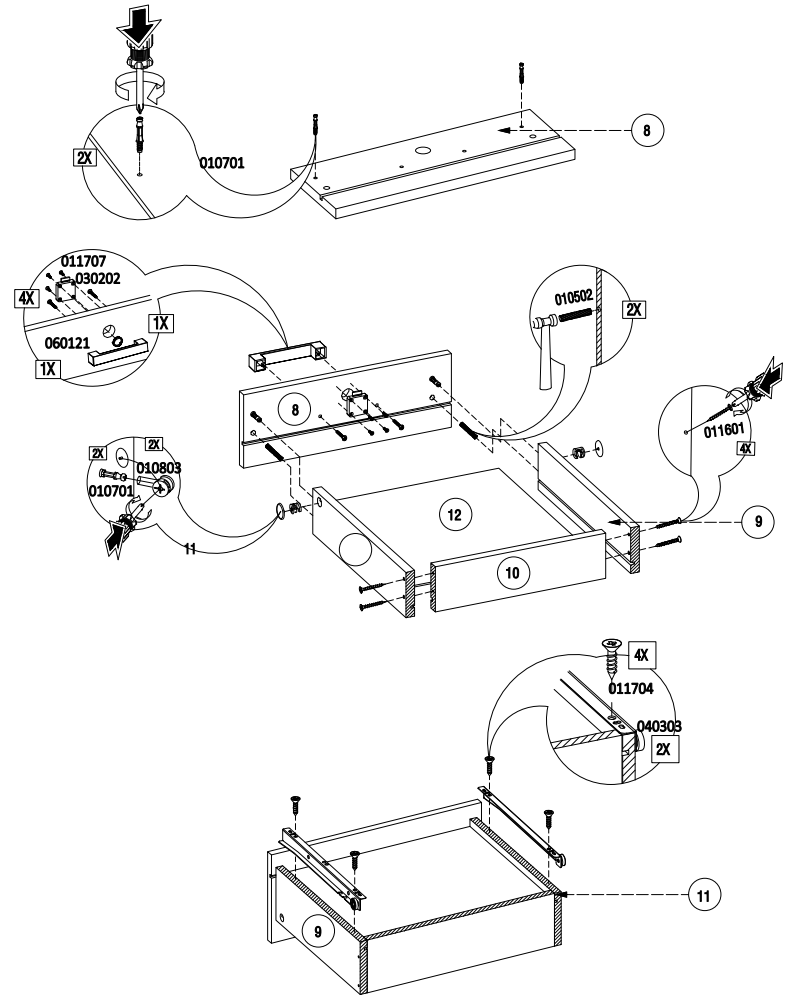

6

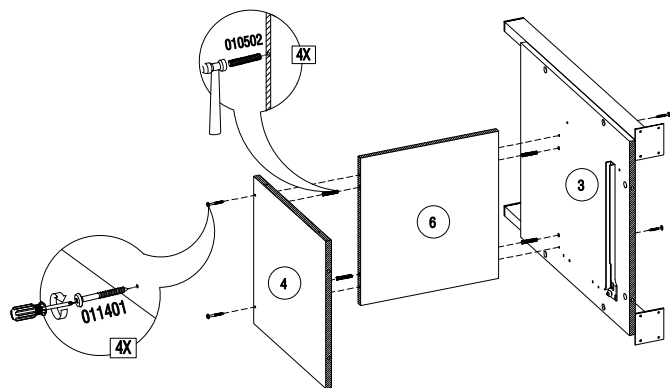

7

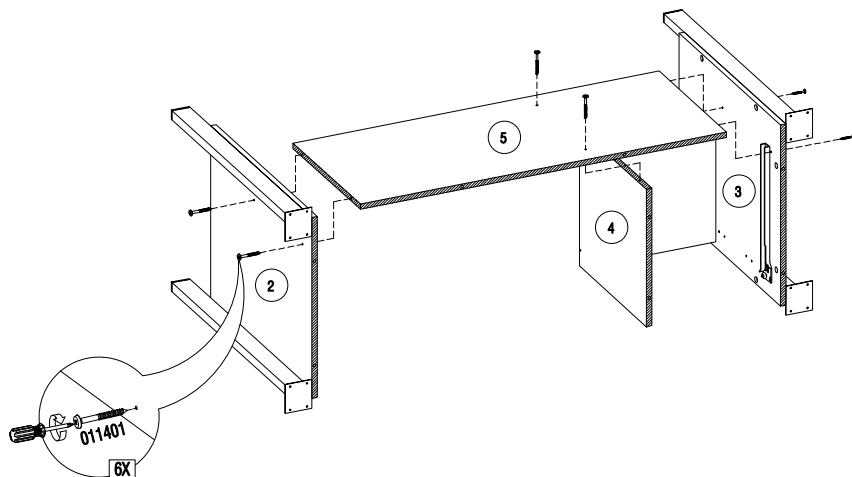

011401



10 X

010502




4 X

00-2021/09/16

07

8

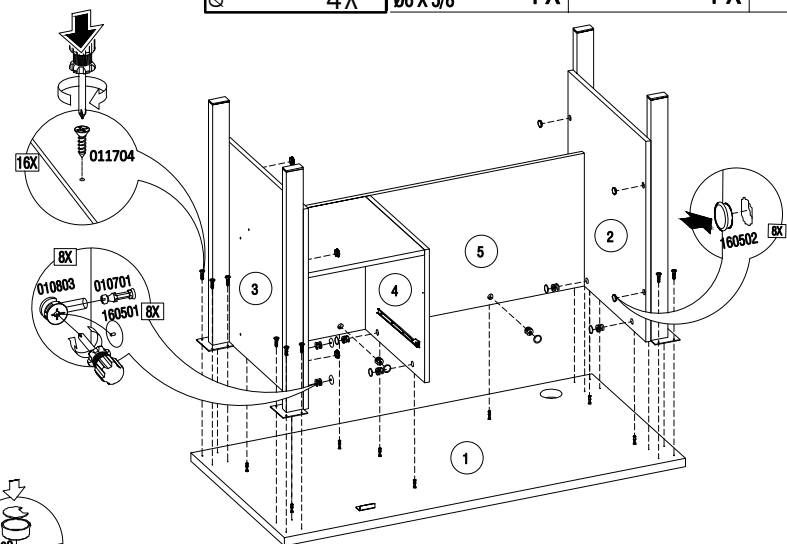

160501



8 X

010803




8 X

011704



20 X

030202



1 X

060121



1 X

160502



8 X

011707




4 X

160702



1 X

020301




2 X

9




TUTORIAL SETTING ENGSEL

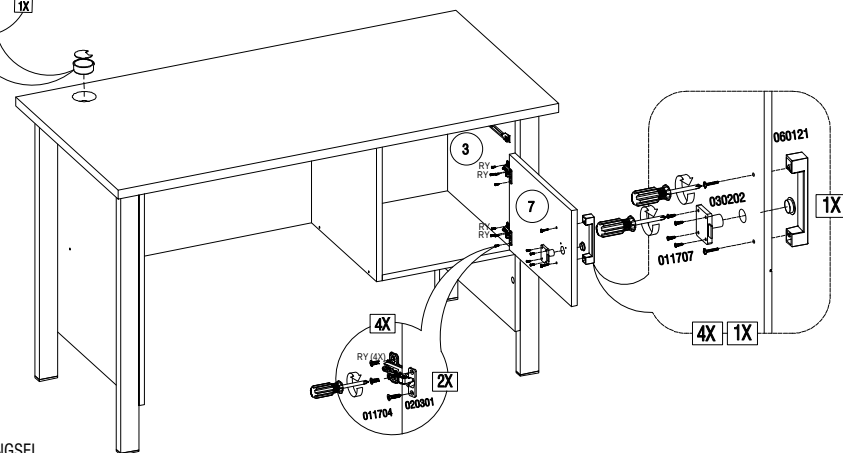

00-2021/09/16

08

10

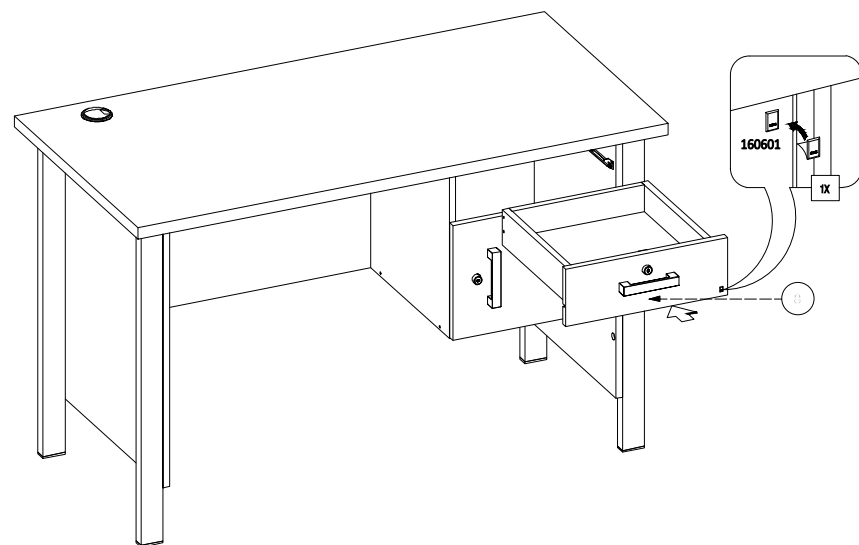

160601



1X

11

